# A9DA Series Motherboard

# User's Manual

FOXCONN®

Statement:

This manual is the intellectual property of Foxconn, Inc. Although the information in this manual may be changed or modified at any time, Foxconn does not obligate itself to inform the user of these changes.

Trademark:

All trademarks are the property of their respective owners.

Version:

User's Manual V1.0 for A9DA Series motherboard.

Symbol description:

Caution : refers to important information that can help you to use motherboard better, and tells you how to avoid problems.

Warning : indicating a potential risk of hardware damage or physical injury may exist.

WEEE:

The use of this symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased this product.

More information:

If you want more information about our products, please visit Foxconn's website: http://www.foxconnchannel.com

© All rights reserved.
All trade names are registered trademarks of respective manufacturers listed.
All images are for reference only, please refer to the physical motherboard for specific features.

# Declaration of conformity

CE

HON HAI PRECISION INDUSTRY COMPANY LTD
66 , CHUNG SHAN RD., TU-CHENG INDUSTRIAL DISTRICT,
TAIPEI HSIEN, TAIWAN, R.O.C.

declares that the product
Motherboard A9DA-S/A9DA

is in conformity with
(reference to the specification under which conformity is declared in accordance with 89/336 EEC-EMC Directive)

- EN 55022:1998/A2: 2003 Limits and methods of measurements of radio disturbance characteristics of information technology equipment
- EN 61000-3-2/:2000 Electromagnetic compatibility (EMC)
  Part 3: Limits
  Section 2: Limits for harmonic current emissions (equipment input current <= 16A per phase)
- EN 61000-3-3/A1:2001 Electromagnetic compatibility (EMC)
  Part 3: Limits
  Section 2: Limits of voltage fluctuations and flicker in low voltage supply systems for equipment with rated current <= 16A
- EN 55024/A2:2003 Information technology equipment-Immunity characteristics limits and methods of measurement

Signature : 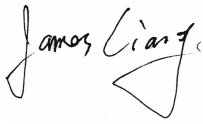

Place / Date : TAIPEI/2010

Printed Name : James Liang

# Declaration of conformity

| | |
|---|---|
| Trade Name: | FOXCONN |
| Model Name: | A9DA-S/A9DA |
| Responsible Party: | PCE Industry Inc. |
| Address: | 458 E. Lambert Rd.<br>Fullerton, CA 92835 |
| Telephone: | 714-738-8868 |
| Facsimile: | 714-738-8838 |

| | |
|---|---|
| Equipment Classification: | FCC Class B Subassembly |
| Type of Product: | Motherboard |
| Manufacturer: | HON HAI PRECISION INDUSTRY COMPANY LTD |
| Address: | 66 , CHUNG SHAN RD., TU-CHENG INDUSTRIAL DISTRICT, TAIPEI HSIEN, TAIWAN, R.O.C. |

Supplementary Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tested to comply with FCC standards.

Signature : 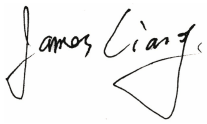 Date : 2010

## Installation Precautions

- Electrostatic discharge (ESD) is the sudden and momentary electric current that flows between two objects at different electrical potentials. Normally it comes out as a spark which will quickly damage your electronic equipment. Please wear an electrostatic discharge (ESD) wrist strap when handling components such as a motherboard, CPU or memory.
- Ensure that the DC power supply is turned off before installing or removing CPU, memory, expansion cards or other peripherals. It is recommended to unplug the AC power cord from the power supply outlet. Failure to unplug the power supply cord may result in serious damage to your system.

Please carefully read the following procedures to install your computer :

- It is suggested to select high-quality, certified fans in order to avoid damage to the motherboard and CPU due to high temperature. Never turn on the computer if the CPU fan is not properly installed.
- We cannot guarantee that your system can operate normally when your CPU is overclocked. Normal operation depends on the overclocking capacity of your device.
- If there is any, when connecting USB, audio, RS232 COM, IrDA or S/PDIF cables to the internal connectors on the motherboard, make sure their pinouts are matching with the connectors on the motherboard. Incorrect connections might damage the motherboard.
- When handling the motherboard, avoid touching any metal leads or connectors.
- If there is a PCI Express x16 graphics card installed in your system, we recommend using a 24-pin ATX power supply to get the best performance.
- Before turning on the power, please make sure the power supply AC input voltage setting has been configured to the local standard.
- To prevent damage to the motherboard, do not allow screws to come in contact with the motherboard circuit or its components. Also, make sure there are no leftover screws or metal components placed on the motherboard or within the computer casing.
- If you are uncertain about any installation steps or have a problem related to the use of the product, please consult a certified computer technician.

# TABLE OF CONTENTS

**Chapter 1 Product Introduction**

Product Specifications....2
Layout....4
Back Panel Connectors....5

**Chapter 2 Hardware Install**

Install the CPU and CPU Cooler....8
Install the Memory....10
Install an Expansion Card....12
Install other Internal Connectors....13
Jumpers....17

**Chapter 3 BIOS Setup**

Enter BIOS Setup....20
Main Menu....20
System Information....22
Advanced BIOS Features....24
Fox Central Control Unit....26
Advanced Chipset Features....32
Integrated Peripherals....36
Power Management Setup....40
PC Health Status....42
BIOS Security Features....43
Load Optimal Defaults....43
Save Changes and Exit....43
Discard Changes and Exit....43

**Chapter 4 CD Instruction**

Utility CD content....45
Install driver and utility....46
FOX ONE
Main Page....48
CPU Control....52
Frequency Control....54
Limit Setting....55
Voltage Control....57
Fan Control....58
FOX LiveUpdate
Local Update....59
Online Update....61

Configure .....64
About & Help .....66
FOX LOGO.....67
FOX DMI .....68
**Chapter 5 RAID Configuration**
RAID Configuration Introduction.....71
Option ROM Utility.....73
Create a RAID Driver Diskette .....75
RAID Enable in BIOS .....77
Select a RAID Array for Use.....77
Install a New Windows XP .....93
Setting Up a Non-Bootable RAID Array.....97
**Appendix - ATI Hybrid CrossFire™ Technology**.....103
**Appendix - ATI CrossFire™ Technology** .....106

## Technical Support :

**Support**

**Website :**
http://www.foxconnchannel.com

**Support Website :**
http://www.foxconnsupport.com

**Worldwide online contact Support :**
http://www.foxconnsupport.com/inquiry.aspx

**CPU Support List :**

http://www.foxconnsupport.com/cpusupportlist.aspx

**Memory, VGA Compatibility List :**
http://www.foxconnsupport.com/complist.aspx

Thank you for buying Foxconn A9DA Series motherboard. Foxconn products are engineered to maximize computing power, providing only what you need for break-through performance.

With advanced overclocking capability and a range of connectivity features for today multi-media computing requirements, A9DA-S/ A9DA enables you to unleash more power from your computer.

This chapter includes the following information:

- Product Specifications
- Layout
- Back Panel Connectors

## 1-1 Product Specifications

| | |
|---|---|
| CPU | Support AM3 socket processors, Max processor power up to 140W<br>For the latest CPU information, please visit:<br>http://www.foxconnsupport.com/cpusupportlist.aspx |
| HyperTransport | Up to 4800MT/s (HT3.0) for AM3 CPU |
| Chipset | North Bridge: RS880D<br>South Bridge: SB850 |
| Memory | 4 x 240-pin DDR3 DIMMs<br>Support up to 16GB of system memory<br>Dual channel DDR3 1600(oc*)/1333/1066 MHz architecture(oc*: overclocking) |
| Expansion Slots | 2 x PCI Express x16 slots<br>2 x PCI Express x1 slots<br>2 x PCI slots |
| VGA | Integrated ATI Radeon™ HD4290 GPU<br>SidePort Memory-DDR3 1333 128MB Memory (only for A9DA-S)<br>Support Full HD HDMI Technology<br>Support Hybrid CrossFire™<br>Support CrossFire™<br>Dual independent displays support with HDMI/DVI and D-Sub<br>Support DirectX 10.1, Shader Model 4.1, Universal Video Decoder (UVD) 2.0 |
| Storage | SB850 chipset:<br>- 5 x SATA 3.0 connectors<br>- 1 x ESATA connector<br>- 600MB/s data transfer rate<br>- Support RAID 0, 1, 5,10, RAID Ready and JBOD<br>- Support hot plug and NCQ (Native Command Queuing ) |
| LAN | Atheros AR8131M Gigabit LAN chip |
| Audio | Realtek ALC888 audio chip:<br>- High Definition Audio<br>- 2/4/5.1/7.1-channel<br>- Support for S/PDIF Out<br>- Support Jack-Sensing function |
| IEEE 1394<br>(only for A9DA-S) | VIA VT6308P/S chip<br>Up to 2 IEEE 1394a ports (1 rear panel port, 1 onboard header ) |
| USB | Support hot plug<br>Support up to 14 x USB 2.0 ports (6 rear panel ports, 4 onboard USB headers supporting 8 extra ports)<br>Support USB 2.0 protocol up to 480Mb/s |

*(Continued on the next page)*

| | |
|---|---|
| Internal Connectors | 1 x 24-pin ATX main power connector<br>1 x 8-pin ATX 12V power connector<br>5 x SATA connectors<br>1 x ESATA connector<br>4 x USB 2.0 connectors (supporting 8 x USB devices)<br>1 x CPU fan header (4-pin)<br>1 x System fan header (4-pin)<br>1 x NB fan header (4-pin)<br>1 x Front panel connector<br>1 x CD_IN connector<br>1 x Front Audio connector<br>1 x 1394a connector (only for A9DA-S)<br>1 x Speaker connector<br>1 x COM1 connector |
| Back Panel Connectors | 1 x PS/2 Keyboard port<br>1 x Optical S/PDIF_OUT port<br>1 x VGA port<br>1 x HDMI port<br>1 x DVI-D port<br>6 x USB 2.0 ports<br>1 x RJ-45 LAN port<br>1 x 1394a port (only for A9DA-S)<br>8-channel Audio ports |
| Hardware Monitor | System voltage detection<br>CPU/System temperature detection<br>CPU/System fan speed detection<br>CPU overheating warning<br>CPU/System fan speed control |
| PCI Express x1 | Support 250MB/s (500MB/s concurrent) bandwidth<br>Low power consumption and power management features |
| PCI Express x16 | Support 8GB/s (16GB/s concurrent) bandwidth<br>Low power consumption and power management features |
| Green Function | Support ACPI (Advanced Configuration and Power Interface)<br>Support S0 (normal), S1 (power on suspend), S3 (suspend to RAM), S4 (suspend to disk), S5 (soft - off) |
| Bundled Software | FOX ONE<br>FOX LiveUpdate<br>FOX LOGO<br>FOX DMI |
| Operating System | Support for Microsoft® Windows® 7/Vista/XP |
| Form Factor | ATX Form Factor, 12 inches x 9.6 inches (30.5cm x 24.4cm) |

## 1-2 Layout

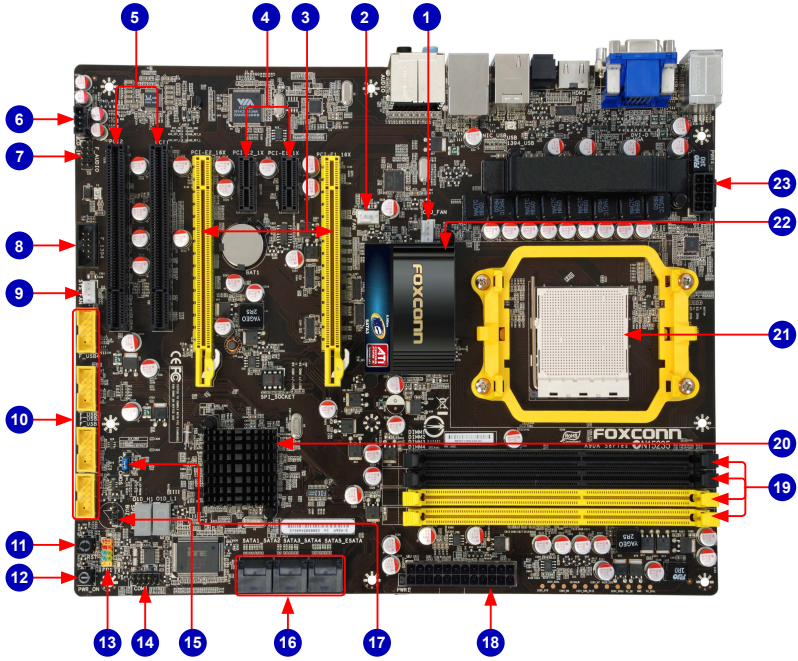


1. CPU_FAN Header
2. NB_FAN Header
3. PCI Express x16 Slots
4. PCI Express x1 Slots
5. PCI Slots
6. CD_IN Connector
7. Front Audio Connector
8. 1394a Connector (only for A9DA-S)
9. System Fan Header
10. Front USB Connectors
11. Reset Button (only for A9DA-S)
12. Power on Button (only for A9DA-S)
13. Front Panel Connector
14. COM1 Connector
15. Speaker Connector
16. SATA Connectors
17. Clear CMOS Button
18. 24-pin ATX Power Connector
19. DDR3 DIMM Slots
20. South Bridge: AMD SB850
21. CPU Socket
22. North Bridge: RS880D
23. 8-pin ATX 12V Power Connector

Note : The above motherboard layout is for reference only, please refer to the physical motherboard for detail.

## 1-3 Back Panel Connectors

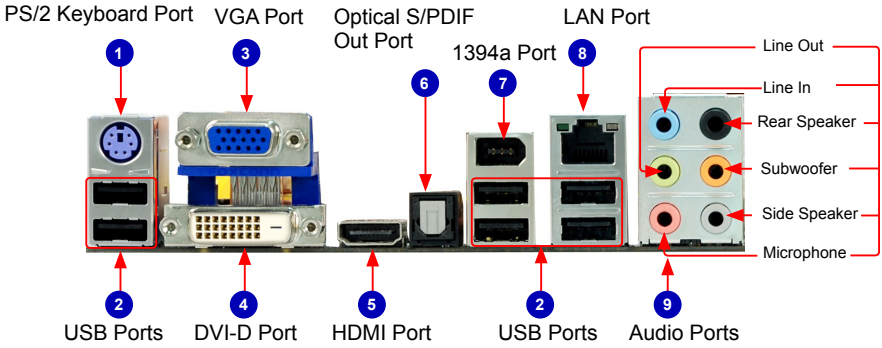


**1. PS/2 Keyboard Port**

Use the PS/2 port (purple) to connect a PS/2 keyboard.

**2. USB Port**

The USB port supports the USB 2.0/1.1 specification. Use this port for USB devices such as an USB keyboard/mouse, USB printer, USB flash drive and etc.

**3. VGA Port**

To connect with external display devices, such as monitor or LCD display.

**4. DVI-D Port**

The DVI-D port supports DVI-D specification. Connect a monitor that supports DVI-D connection to this port.

**5. HDMI Port**

The HDMI (High-Definition Multimedia Interface) provides an all-digital audio/video interface to transmit the uncompressed audio/video signals and is HDCP compliant. Connect the HDMI audio/video to this port. The HDMI Technology can support a maximum resolution of 1920x1080p, but the actual resolutions supported depend on the monitor being used.

**6. Optical S/PDIF Out Port**

This port provides digital audio out to an external audio system that supports digital optical audio.

**7. 1394a Port ( only for A9DA-S)**

This port is used to connect a 1394a device.

**8. RJ-45 LAN Port**

The Ethernet LAN port provides Internet connection at up to 10/100/1000Mb/s data rate.

| LAN Type | Left: Active | | Right: Link | |
|---|---|---|---|---|
| | Status | Description | Status | Description |
| 1000M | Off | No Link | Off | No Link |
| | Green Blinking | Data Activity | Off | 10Mb/s Connection |
| | | | Green | 100Mb/s Connection |
| | | | Orange | 1000Mb/s Connection |

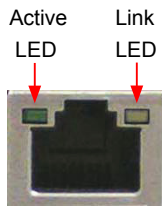

**9. Audio Ports**

For the definition of each audio port, please refer to the table below :

| Port | 2-channel | 4-channel | 5.1-channel | 7.1-channel |
|---|---|---|---|---|
| Blue | Line In | Line In | Line In | Line In |
| Green | Line Out | Front Speaker Out | Front Speaker Out | Front Speaker Out |
| Pink | Microphone In | Microphone In | Microphone In | Microphone In |
| Orange | - | - | Center/Subwoofer Out | Center/Subwoofer Out |
| Black | - | Rear Speaker Out | Rear Speaker Out | Rear Speaker Out |
| Grey | - | - | - | Side Speaker Out |

This chapter introduces the hardware installation process, including the installation of the CPU, memory, power supply, slots, pin headers and the mounting of jumpers. Caution should be exercised during the installation of these modules. Please refer to the motherboard layout prior to any installation and read the contents in this chapter carefully.

This chapter includes the following information :

- Install the CPU and CPU Cooler
- Install the Memory
- Install an Expansion Card
- Install other Internal Connectors
- Jumpers

Please visit the following website for more supporting information about your motherboard.

CPU Support List:

**http://www.foxconnsupport.com/cpusupportlist.aspx**

Memory, VGA Compatibility List:

**http://www.foxconnsupport.com/complist.aspx**

## 2-1 Install the CPU and CPU Cooler

CAUTION

Read the following guidelines before you begin to install the CPU :

- Make sure that the motherboard supports the CPU.
- Always turn off the computer and unplug the power cord from the power supply before installing the CPU to prevent hardware damage.
- Locate the Pin-1 of the CPU. The CPU cannot be inserted if oriented incorrectly.
- Apply an even and thin layer of thermal grease on the surface of the CPU.
- Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage of the CPU may occur.
- Set the CPU host frequency in accordance with the CPU specifications. It is not recommended that the system bus frequency be set beyond hardware specifications since it does not meet the standard requirements for the peripherals. If you want to set the frequency beyond the standard specifications, please do so according to your hardware specifications including the CPU, graphics card, memory, hard drive, etc.

### Install the CPU

Locate the Pin-1 CPU triangle mark and the Pin-1 of the CPU socket.

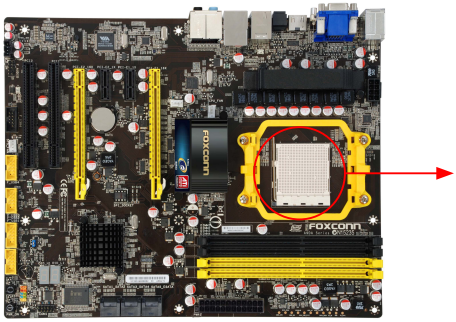

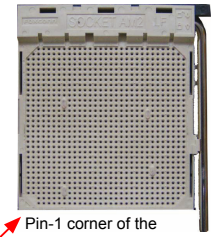

Pin-1 corner of the CPU socket

Pin-1 triangle marking of CPU

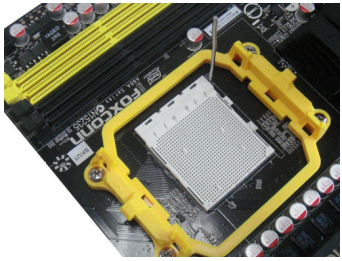

1. Release the CPU socket lever.

2. Align Pin-1 of the CPU with the CPU socket, and gently put the CPU onto the socket.

3. When CPU is properly seated, push the CPU socket lever back to its locked position.

## Install the CPU Cooler

Follow the steps below to correctly install the CPU cooler. (The following procedures use Foxconn cooler as the example.)

1. Apply and spread an even thermal grease on the surface of CPU.

2. Buckle the heatsink firmly at one side of the stand.

3. Buckle the heatsink at another side, and press the fasten lever down to tightly seat the cooler.

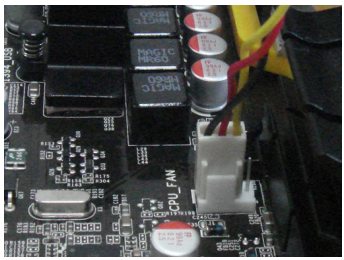


4. Attach the 3-wire CPU cooler connector to the CPU fan header on the motherboard .

CAUTION

Use extreme care when removing the CPU cooler because the thermal grease may adhere to the CPU. Inadequately removing the CPU cooler may damage the CPU.

## 2-2 Install the Memory

Read the following guidelines before you begin to install the memory :

- Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.
- Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
- Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.

### Dual Channel Memory Configuration

This motherboard provides four DDR3 memory sockets and supports Dual Channel Technology. When memory is installed, the BIOS will automatically check the memory in your system.

Four DDR3 memory sockets are divided into two channels :

Channel 0 : DIMM1, DIMM3
Channel 1 : DIMM2, DIMM4

The combinations of DIMM modules are :

| | DIMM1 | DIMM2 | DIMM3 | DIMM4 |
|---|---|---|---|---|
| Single Channel | DS/SS | - | - | - |
| Single Channel | DS/SS | - | DS/SS | - |
| Single Channel | - | DS/SS | - | - |
| Single Channel | - | DS/SS | - | DS/SS |
| Dual Channel | DS/SS | DS/SS | - | - |
| Dual Channel | - | - | DS/SS | DS/SS |
| Dual Channel | DS/SS | DS/SS | DS/SS | DS/SS |

(DS : Dual Side, SS : Single Side, - : No Memory)

It is recommended that memory of the same capacity, brand, speed, and chips be used and please select dual channel first to achieve optimum performance.

## Installing a Memory

CAUTION

Before installing a memory module, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the memory module. Be sure to install DDR3 DIMMs on this motherboard.



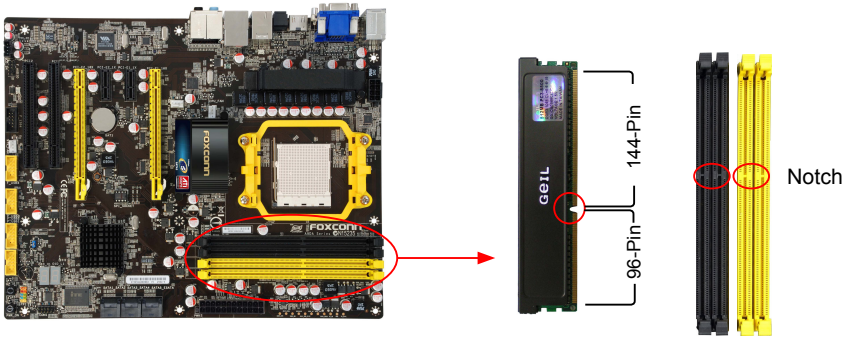


If you take a look at front side of memory module, it has asymmetric pin counts on both sides separated by a notch in the middle, so it can only fit in one direction. Follow the steps below to correctly install your memory modules into the sockets.

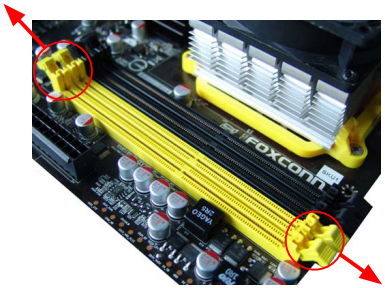

Step 1:
Spread the clips at both ends of the memory socket. Place the memory module onto the socket, then put your fingers on top edge of the module, and push it down firmly and seat it vertically into the memory socket.

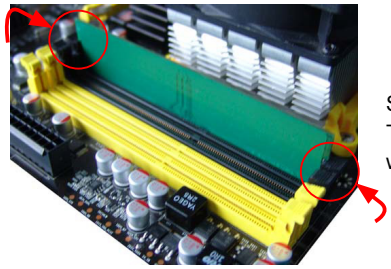

Step 2:
The clips at both ends of the socket will snap into place when the memory module is securely inserted.

## 2-3 Install an Expansion Card



CAUTION

- Make sure the motherboard supports the expansion card. Carefully read the manual that came with your expansion card.
- Always turn off the computer and unplug the power cord from the power outlet before installing an expansion card to prevent hardware damage.

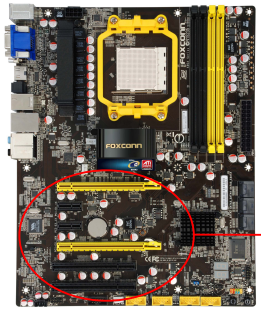

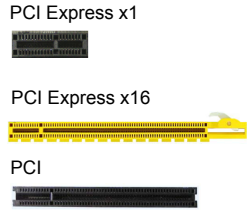


**Follow the steps below to correctly install your expansion card in the expansion slot.**

1. Locate an expansion slot that supports your card. Remove the metal slot cover from the chassis back panel.
2. Align the card with the slot, and press down on the card until it is fully seated in the slot.
3. Make sure the metal contacts on the card are completely inserted into the slot.
4. Secure the card's metal bracket to the chassis back panel with a screw.
5. After installing all expansion cards, replace the chassis cover.
6. Turn on your computer. If necessary, go to BIOS Setup to make any required BIOS changes for your expansion card(s).
7. Install the driver provided with the expansion card in your operating system.

**Installing and Removing a PCI Express x16 Graphics Card :**

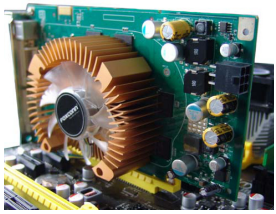

**• Installing a Graphics Card:**
Gently insert the graphics card into the PCI Express x16 slot. Make sure the graphics card is locked by the latch at the end of the PCI Express x16 slot.

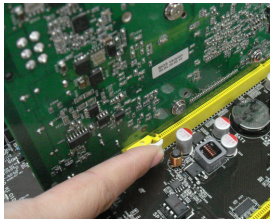

**• Removing the Card:**
Push the latch at the end of the PCI Express x16 slot to release the card and then pull the card straight up from the slot.

## 2-4 Install other Internal Connectors

### Power Connectors

This motherboard uses an ATX power supply. In order not to damage any device, make sure all the devices have been installed properly before applying the power supply.

### 24-pin ATX power connector : PWR1

PWR1 is the ATX power supply connector. Make sure that the power supply cable and pins are properly aligned with the connector on the motherboard. Firmly plug the power supply cable into the connector and make sure it is secure.

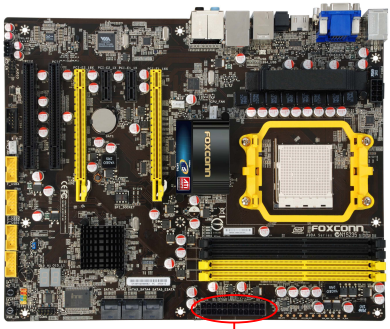


| Pin # | Definition | Pin # | Definition |
|---|---|---|---|
| 1 | 3.3V | 13 | 3.3V |
| 2 | 3.3V | 14 | -12V |
| 3 | GND | 15 | GND |
| 4 | +5V | 16 | PS_ON(Soft On/Off) |
| 5 | GND | 17 | GND |
| 6 | +5V | 18 | GND |
| 7 | GND | 19 | GND |
| 8 | Power Good | 20 | NC |
| 9 | +5V SB(Stand by +5V) | 21 | +5V |
| 10 | +12V | 22 | +5V |
| 11 | +12V | 23 | +5V |
| 12 | 3.3V | 24 | GND |

CAUTION

We recommend you using a 24-pin power supply. If you are using a 20-pin power supply, you need to align the ATX power connector according to the picture.

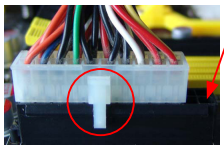


20-Pin Power

### 8-pin ATX 12 V Power Connector : PWR2

The 8-pin ATX 12V power supply connects to PWR2 and provides power to the CPU.

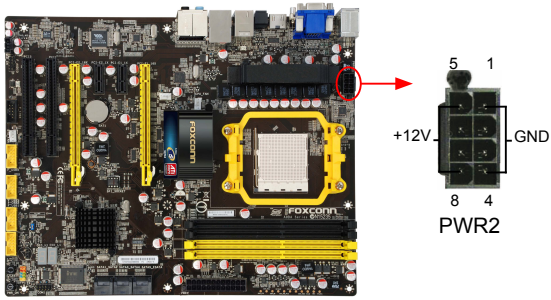


| Pin # | Definition | Pin # | Definition |
|---|---|---|---|
| 1 | GND | 5 | +12V |
| 2 | GND | 6 | +12V |
| 3 | GND | 7 | +12V |
| 4 | GND | 8 | +12V |

CAUTION

We recommend you using an 8-pin ATX 12V power supply. If you are using a 4-pin power supply, you need to align the ATX power connector according to the picture on the right.

Connect a 4-pin power plug

## Fan Connectors : CPU_FAN, SYS_FAN, NB_FAN

There are three main fan headers on this motherboard. The fan speed can be controlled and monitored in “PC Health Status” section of the BIOS Setup. These fans can be automatically turned off after the system enters S3, S4 and S5 sleeping states.




CPU_FAN/SYS_FAN/NB_FAN

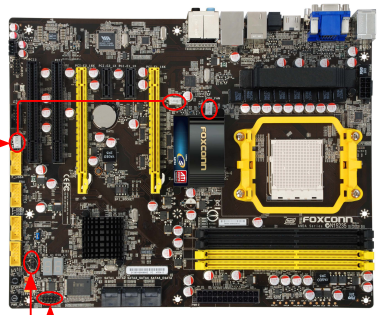

## Speaker Connector : SPEAKER

The speaker connector is used to connect speaker of the chassis.




SPEAKER

## COM Connector : COM1

This motherboard supports one serial RS232 COM port for legacy compatibility. User must purchase another RS232 cable with a 9-pin D-sub connector at one end to connect with the external RS232 device and another end with 10-pin female connector to connect with COM1 connector in the motherboard.

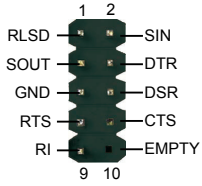


COM1

## Front Panel Connector : FP1

This motherboard includes one connector for connecting the front panel switch and LED Indicators.

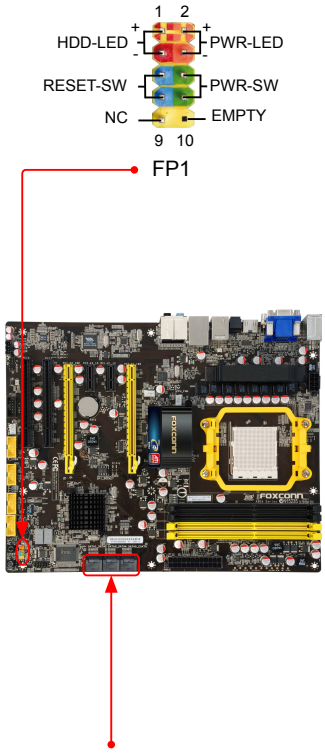


**Hard Disk LED Connector (HDD-LED)**

Connect to the chassis front panel IDE indicator LED. It indicates the active status of the hard disks. This 2-pin connector is directional with +/- sign.

**Reset Switch (RESET-SW)**

Attach the connector to the Reset switch on the front panel of the case; the system will restart when the switch is pressed.

**Power LED Connector (PWR-LED)**

Connect to the power LED indicator on the front panel of the chassis. The Power LED indicates the system's status. When the system is in operation (S0 status), the LED is on. When the system gets into sleep mode (S1) , the LED is blinking; When the system is in S3/S4 sleep state or power off mode (S5), the LED is off. This 2-pin connector is directional with +/- sign.

**Power Switch Connector (PWR-SW)**

Connect to the power button on the front panel of the chassis. Push this switch allows the system to be turned on and off rather than using the power supply button.

## Serial ATA Connectors : SATA1_SATA2, SATA3_ SATA4, SATA5_ESATA

The Serial ATA connector is used to connect with SATA Hard Disk or CD devices which supporting this feature. The current Serial ATA III interface allows up to 600MB/s data transfer rate.

Note: There will be an ESATA cable in the package, you can use it to connect an ESATA hard disk to the upper SATA port of SATA5_ESATA on the motherboard(as depicted).

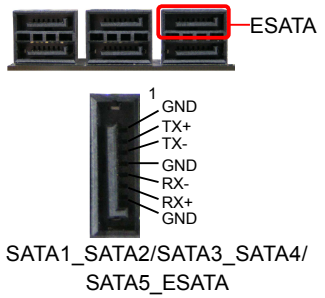


SATA1_SATA2/SATA3_SATA4/ SATA5_ESATA

### Audio Connector : CD_IN

CD_IN is a Sony standard audio connector, it can be connected to a CD/DVD-ROM drive through a CD/DVD audio cable.

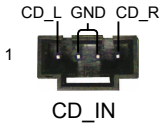


### Audio Connector : F_AUDIO

The audio connector supports HD Audio standard. It provides the Front Audio output choice.

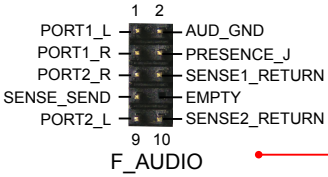


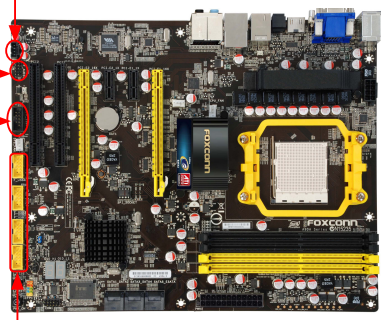

### 1394a Connector : F_1394 ( only for A9DA-S )

The 1394a expansion cable can be connected to either the front (provided that the front panel of your chassis is equipped with the appropriate interface) or real panel of the chassis.

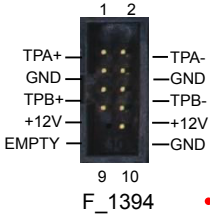


USB Connectors : F_USB 1/2/3/4

In addition to the six USB ports on the rear panel, this product also provides four 10-pin USB headers on its motherboard. By connecting through USB cables with them, user can quickly expand another eight USB ports on the front panel.

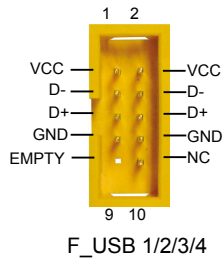

## 2-5 Jumpers

For some features needed, users can change the jumper settings on this motherboard to modify them. This section explains how to use the various functions of this motherboard by changing the jumper settings. Users should read the following content carefully prior to modifying any jumper setting.



### Description of Jumpers

1. For any jumper on this motherboard, pin 1 can be identified by the bold silkscreen next to it. However, in this manual, pin 1 is simply labeled as “1”.
2. The following table explains different types of the jumper settings. "Closed" means placing a jumper cap on the two pins to temporarily short them. The shorting can also be done by touching two pins by a screwdriver for a few seconds, but using jumper cap is recommended. It can prevent hazardous ESD (Electrical Static Discharge) problem.

| Jumper | Diagram | Definition | Description |
|---|---|---|---|
| 1 | 1 | 1-2 | Set Pin 1 and Pin 2 closed |
| | 1 | 2-3 | Set Pin 2 and Pin 3 closed |

### Clear CMOS Jumper: CLR_CMOS

The motherboard uses CMOS RAM to store the basic hardware information (such as BIOS data, date, time information, hardware password...etc.). Clear CMOS data is the fast way to go back to factory default when the BIOS settings were mistakenly modified.

The steps to clear CMOS data are :

1. Turn off the computer, unplug the power cord from the power outlet.
2. Remove jumper cap from pins 2-3, put it onto pins 1-2 to short them. This will clear CMOS data.
3. Return the setting to its original with pins 2-3 closed.
4. Plug in the power cord to your computer and turn it on.
5. Go to BIOS Setup to configure new system as described in next chapter.

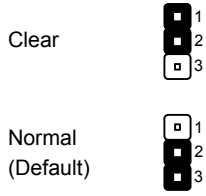


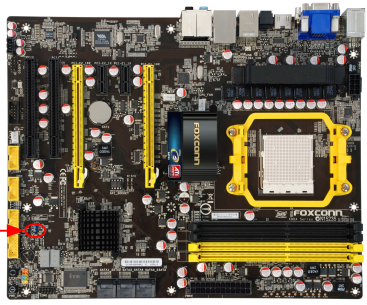

- Disconnect the power cable before adjusting the jumper settings.
- Do not clear the CMOS while the system is turned on.

## 2-6 OnBoard Button (only for A9DA-S)

**Power on Button: POWER_ON**
Push the power on button to power on the system.

**Reset Button: RESET**
Push the reset button to reboot the system.

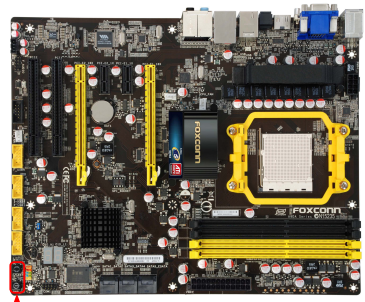

PWR_ON RST

# 3

This chapter tells how to change system settings through the BIOS Setup menus. Detailed descriptions of the BIOS parameters are also provided.

You have to run the Setup Program when the following cases occur:

1. An error message appears on the screen during the system Power On Self Test (POST) process.
2. You want to change the default CMOS settings.

This chapter includes the following information :

- Enter BIOS Setup
- Main Menu
- System Information
- Advanced BIOS Features
- Fox Central Control Unit
- Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PC Health Status
- BIOS Security Features
- Load Optimal Defaults
- Save Changes and Exit
- Discard Changes and Exit

Since BIOS could be updated some other times, the BIOS information described in this manual is for reference only. We do not guarantee the content of this manual will remain consistent with the newly released BIOS at any given time in the future. Please visit our website for updated manual if it is available.

## Enter BIOS Setup

The BIOS is the communication bridge between hardware and software, correctly setting up the BIOS parameters is critical to maintain optimal system performance. Power on the computer, when the message "**Press <DEL> to enter Setup, <ESC> to boot menu**" appears at the bottom of the screen, you can press <DEL> key to enter SETUP.

CAUTION

We do not suggest that you change the default values in the BIOS Setup, and we shall not be responsible for any damage which resulted from the change you made.



## Main Menu

The main menu allows you to select from a list of setup functions together with two exit choices. Use the arrow keys to select a specific item and press <Enter> to go to the submenu.

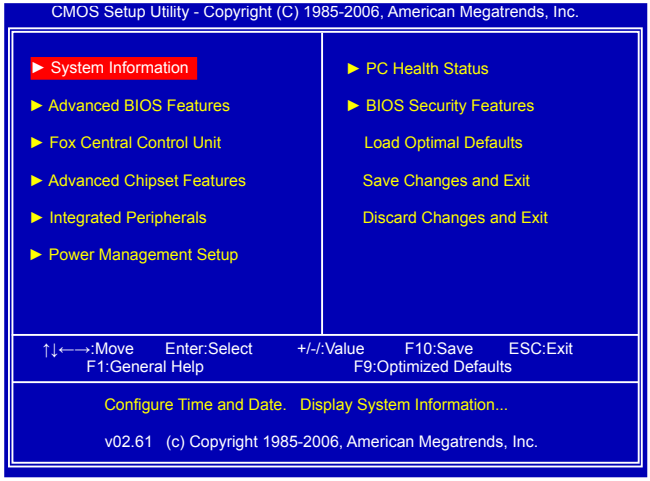
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
► System Information
► Advanced BIOS Features
► Fox Central Control Unit
► Advanced Chipset Features
► Integrated Peripherals
► Power Management Setup
► PC Health Status
► BIOS Security Features
Load Optimal Defaults
Save Changes and Exit
Discard Changes and Exit
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit
F1:General Help F9:Optimized Defaults
Configure Time and Date. Display System Information...
v02.61 (c) Copyright 1985-2006, American Megatrends, Inc.

Each item in the main menu is explained below:

► **System Information**

It displays the basic system configuration, such as BIOS ID, CPU Name, memory size plus system date, time and Floppy drive. They all can be viewed or set up through this menu.

► **Advanced BIOS Features**

The advanced system features can be set up through this menu. There are boot up settings.

► **Fox Central Control Unit**

Some special proprietary features (such as overclocking) can be set up through this menu.

► **Advanced Chipset Features**

The values for the chipset can be changed through this menu, and the system performance can be optimized.

► **Integrated Peripherals**

All onboard peripherals can be set up through this menu. There are IDE devices, Super I/O devices such as Serial I/O and other USB devices... etc.

► **Power Management Setup**

All the items related with Green function features can be set up through this menu.

► **PC Health Status**

This setup enables you to read/change Fan speeds, and displays temperatures and voltages of your CPU/System.

► **BIOS Security Features**

The Supervisor/User password can be set up through this menu to prevent unauthorized use of your computer. If you set a password, the system will ask you to key in correct password before boot or access to Setup.

► **Load Optimal Defaults**

The optimal performance settings can be loaded through this menu. However, it may offer better performance in some ways (such as less I/O cards, less memory ...etc.), still, it may cause problem if you have more memory or I/O cards installed. It means, if your system loading is heavy, set to optimal default may sometimes come out an unstable system. What you need now is to adjust BIOS setting one by one, trial and error, to find out the best setting for your current system.

► **Save Changes and Exit**

Save setting values to CMOS and exit.

► **Discard Changes and Exit**

Do not change anything and exit the setup.

## System Information

This sub-menu is used to set up the standard BIOS features, such as the date, time, floppy drive and so on. Use the arrow up/down keys to select an item, then use the <+> or <-> keys to change the setting.

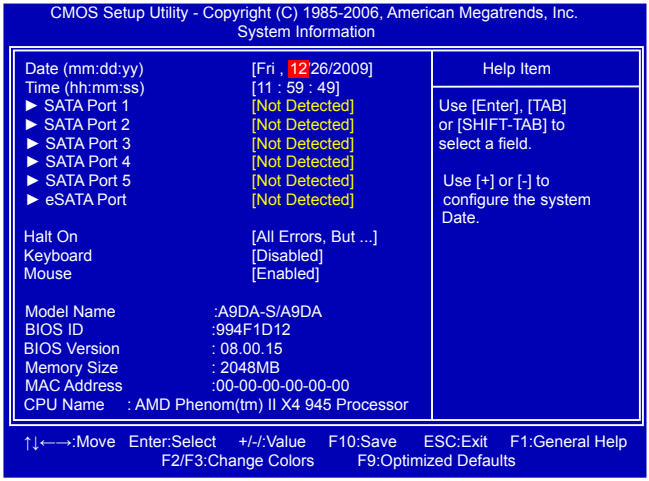
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
System Information
Date (mm:dd:yy) [Fri , 12 26/2009]
Time (hh:mm:ss) [11 : 59 : 49]
► SATA Port 1 [Not Detected]
► SATA Port 2 [Not Detected]
► SATA Port 3 [Not Detected]
► SATA Port 4 [Not Detected]
► SATA Port 5 [Not Detected]
► eSATA Port [Not Detected]
Halt On [All Errors, But ...]
Keyboard [Disabled]
Mouse [Enabled]
Model Name :A9DA-S/A9DA
BIOS ID :994F1D12
BIOS Version : 08.00.15
Memory Size : 2048MB
MAC Address :00-00-00-00-00-00
CPU Name : AMD Phenom(tm) II X4 945 Processor
Help Item
Use [Enter], [TAB] or [SHIFT-TAB] to select a field.
Use [+] or [-] to configure the system Date.
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F2/F3:Change Colors F9:Optimized Defaults

**► Date (mm:dd:yy)**

<weekday><month><date> <year> format.

Day—weekday from Sun. to Sat., this message is automatically displayed by BIOS (Read Only).

Month—month from 1 to 12.

Date—date from 1 to 31.

Year—year, set up by users.

Use [ENTER], [TAB] or [SHIFT-TAB] to select a field. Use [+] or [-] to input the value.

**► Time (hh:mm:ss)**

This item allows you to configure the desired time. Use [ENTER] to enter the setting, then use [TAB] to move forward a field. Use [+] or [-] to input the value.

The three fields of the setting are <hour> : <minute> : <second> respectively.

**► SATA1 / SATA2 / SATA3 / SATA4 / SATA5 / E-SATA**

When OnChip SATA Type is set to [Native IDE], while entering setup, BIOS automatically detects the presence of SATA devices.

SATA1 is the lower SATA port of SATA1_SATA2 of the motherboard.

SATA2 is the upper SATA port of SATA1_SATA2.

SATA3 is the lower SATA port of SATA3_SATA4.

SATA4 is the upper SATA port of SATA3_SATA4.

SATA5 is the lower SATA port of SATA5_ESATA.

E-SATA is the upper SATA port of SATA5_ESATA.

**► Halt On**

This category determines whether or not the computer will stop if an error is detected during powering up.

[All Errors] : All errors can result in system halt.

[All Errors But...] : All errors but keyboard or mouse or floppy can result in system halt. The halt condition can be enabled/disabled in the next three settings.

► **Keyboard**

The system boot will not stop for a keyboard error if you enabled this item.

► **Mouse**

The system boot will not stop for a mouse error if you enabled this item.

► **Model Name**

Model name of this product.

► **BIOS ID / BIOS Version**

It displays the current BIOS ID/version. User can check this information and discuss with the field service people if a BIOS upgrade is needed.

► **Memory Size**

This item displays the current memory size. The size is depending on how many memory modules were installed in your system before powering on.

► **MAC Address**

This item shows the onboard LAN MAC address.

► **CPU Name**

It displays the current CPU name.

# Advanced BIOS Features

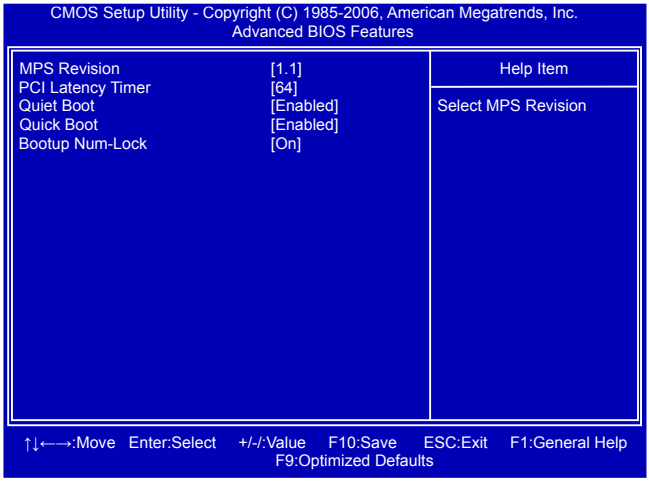




**► MPS Revision**

This feature is only applicable to multiprocessor motherboards as it specifies the version of the MPS that the motherboard will use. The MPS is a specification by which PC manufacturers design and build CPU architecture systems with two or more processors. MPS 1.1 was the original specification. MPS version 1.4 adds extended configuration tables for improved support of multiple PCI bus configurations and greater expandability in the future. In addition, MPS 1.4 introduces support for a secondary PCI bus without requiring a PCI bridge. If your operating system comes with support for MPS 1.4, you should keep the setting as the default 1.4. You also need to enable MPS 1.4 support if you need to make use of the secondary PCI bus on a motherboard that doesn't come with a PCI bridge. You should only leave it as 1.1 only if you are running an older operating system that only supports MPS 1.1.

**► PCI Latency Timer**

This item is used to set the PCI latency timer. The value is in unit of PCI cycle for PCI device latency timer register. Setting values are 32, 64, 96, 128, 160, 192, 224, 248.

This feature controls how long each PCI device can hold the bus before another takes over. The larger the value, the longer the PCI device can retain control of the bus. Low values for the PCI Latency Timer will reduce the effective PCI bandwidth while higher values means every PCI device will have to wait longer before they can get access to the bus, but when they do get access, they can conduct their transactions for a longer time. Normally, a default value of 64 cycles is set. Some PCI devices may not agree with longer latency times so if you start facing problems like stuttering sound or a less responsive system, reduce the latency. Higher values will actually reduce performance as too much time may be allocated to each PCI device to the disadvantage of other devices on the bus.

**► Quiet Boot**

This item is used to enable/disable the quiet boot.

[Disabled] : Displays the normal POST messages.

[Enabled] : Displays OEM customer logo instead of POST messages.

► **Quick Boot**

While Enabled, this option allows BIOS to skip certain tests while booting, this will shorten the time needed to boot the system.

► **Bootup Num-Lock**

This item defines if the keyboard Num Lock key is active when your system is started. The available settings are: On (default) and Off.

## Fox Central Control Unit

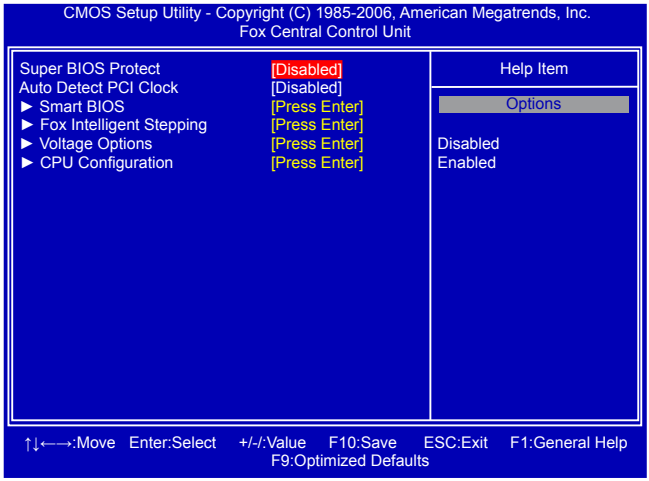
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
Fox Central Control Unit
Super BIOS Protect [Disabled]
Auto Detect PCI Clock [Disabled]
► Smart BIOS [Press Enter]
► Fox Intelligent Stepping [Press Enter]
► Voltage Options [Press Enter]
► CPU Configuration [Press Enter]
Help Item
Options
Disabled
Enabled
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults



► **Super BIOS Protect**

To protect the system BIOS from virus attack, there is a BIOS write-protection mechanism provided. Super BIOS Protect function protects your BIOS from being affected by viruses, e.g. CIH.

► **Auto Detect PCI Clock**

This option is used to auto detect PCI slot. When enabled, the system will turn off clock of the empty PCI slot to reduce EMI (Electromagnetic Interference).

► **Smart BIOS / Fox Intelligent Stepping / Voltage Options / CPU Configuration**

Press <Enter> to go to its submenu.

## Smart BIOS

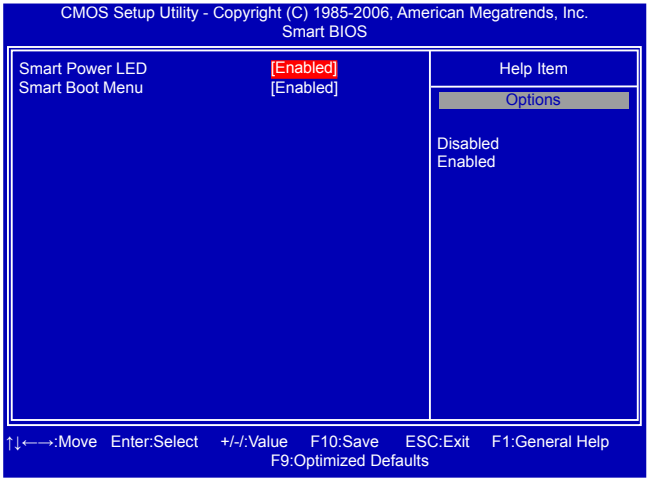




### ► Smart Power LED

Smart Power LED is a feature built on your motherboard to indicate different states during Power On Self Test (POST). The LED is located at the front panel, and it displays POST state by different long-short blinking intervals. You can always leave this state enabled.

| System Status | Power LED Status | Stop Blinking Condition |
|---|---|---|
| Normal | Always On | Always On |
| No Memory | Continue blinking On (1sec.), Off (1sec.) | Reboot & Memory OK |
| No Display | Continue blinking On (2sec.), Off (2sec.) | Reboot & Display OK |
| Post Error Message | Quick blinking twice (1/3sec. On, 1/3sec. Off), one long On (1sec.), continuously. | Enter Setup or Skip |
| No CPU Fan | Continue blinking On (1/2sec.), Off (1/2sec.) | Reboot & Fan OK |

### ► Smart Boot Menu

When PC starts, it will ask you to press [Del] key to enter setup or press [Esc] key to enter smart boot menu. If [Disabled] is selected, then pressing [Esc] has no function. This also prevents user without password trying to get into your computer through smart boot menu.

## Fox Intelligent Stepping

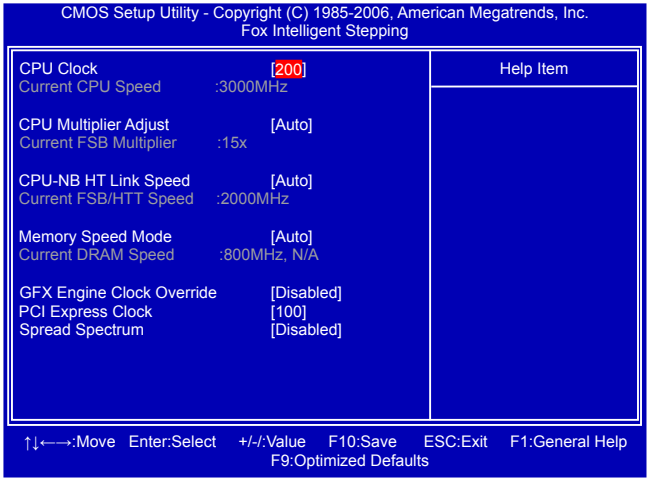
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
Fox Intelligent Stepping
CPU Clock [200]
Current CPU Speed :3000MHz
CPU Multiplier Adjust [Auto]
Current FSB Multiplier :15x
CPU-NB HT Link Speed [Auto]
Current FSB/HTT Speed :2000MHz
Memory Speed Mode [Auto]
Current DRAM Speed :800MHz, N/A
GFX Engine Clock Override [Disabled]
PCI Express Clock [100]
Spread Spectrum [Disabled]
Help Item
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults

► **CPU Clock**

This option is used to adjust the CPU clock.

► **Current CPU Speed**

This item displays the current CPU speed.

► **CPU Multiplier Adjust**

This option is used to adjust the CPU Clock Ratio. Multiply CPU clock with this ratio, you can get the CPU speed. Increase this ratio may overclock your CPU. This option will be valid if your CPU ratio is unlocked and will be displayed only if your CPU is supporting this feature.

► **Current FSB Multiplier**

This item displays the current FSB Ratio.

► **CPU-NB HT Link Speed**

HT stands for HyperTransport bus. The CPU<->NB HT Speed option controls the physical speed of the CPU to Northbridge HT link using multipliers ranging 1x to 13x. The physical speed of the link is determined by multiplying the CPU FSB with the CPU<->NB HT Speed setting.

► **Current FSB/HTT Speed**

This item displays the current Front Side Bus speed.

► **Memory Speed Mode**

This item is used to enable/disable provision of DRAM timing by SPD device. The Serial Presence Detect (SPD) device is a small EEPROM chip, mounted on a DDR3 memory module. It contains important information about the module's speed, size, addressing mode and various other parameters, so that the motherboard memory controller (chipset) can better access the memory device.

Select [Auto] for SPD enable mode.

Select [Limit], the DRAM speed will not exceed the specified value listed in the "Memory Speed Adjust" item. If SPD value is faster than "Memory Speed Adjust" value, it will run at the specified "Memory Speed Adjust" speed. Otherwise, SPD value is selected.

Select [Manual], then DRAM speed is manually selected according to the set value of

"Memory Speed Adjust".

► **Current DRAM Speed**

This item displays the current DRAM speed.

► **GFX Engine Clock Override**

This item allows you to enable/disable GFX Engine Clock Override support.

► **PCI Express Clock**

This option is used to adjust the speed of PCI Express slot. It may enhance the graphics card speed.

► **Spread Spectrum**

If you enabled this function, it can significantly reduce the EMI (Electromagnetic Interference) generated by the system, so to comply with FCC regulation. But if overclocking is activated, you had better disable it.

## Voltage Options

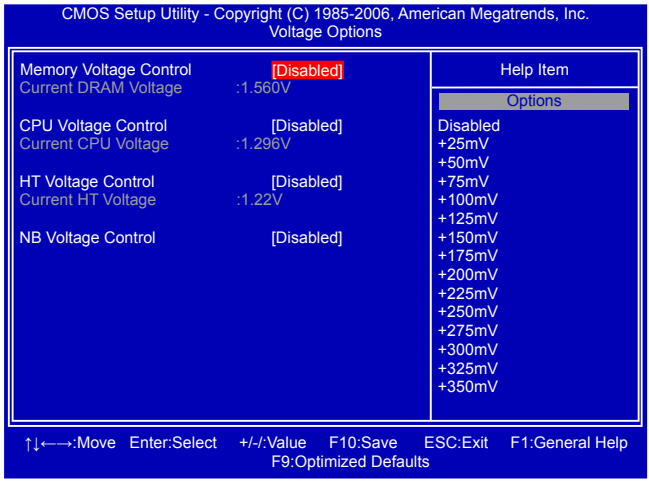


► **Memory Voltage Control**

This option is used to change the DRAM voltage in a step of 25mV. The voltage can be incremented from +25mV to +775mV.

► **CPU Voltage Control**

This option is used to change the CPU voltage in a step of 50mV. The voltage can be incremented from +50mV to +600mV.

► **HT Voltage Control**

This option is used to change the HT voltage in a step of 30mV. The voltage can be incremented from +30mV to +360mV.

► **NB Voltage Control**

This option is used to change the North Bridge voltage in a step of 30mV. The voltage can be incremented from +30mV to +360mV.

## CPU Configuration

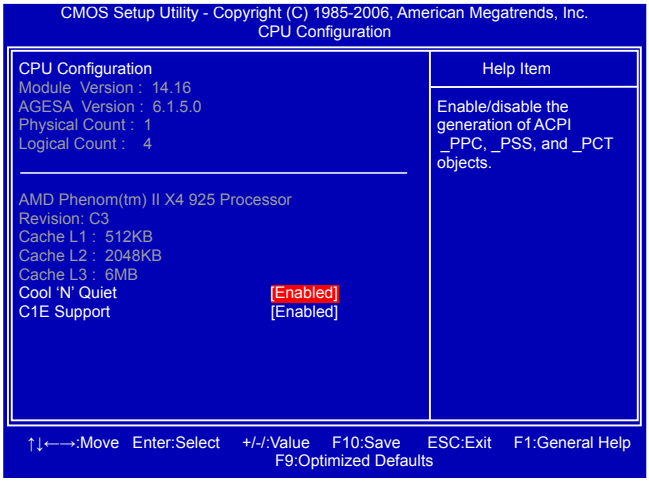
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
CPU Configuration
CPU Configuration
Module Version : 14.16
AGESA Version : 6.1.5.0
Physical Count : 1
Logical Count : 4
AMD Phenom(tm) II X4 925 Processor
Revision: C3
Cache L1 : 512KB
Cache L2 : 2048KB
Cache L3 : 6MB
Cool 'N' Quiet [Enabled]
C1E Support [Enabled]
Help Item
Enable/disable the generation of ACPI _PPC, _PSS, and _PCT objects.
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults

This menu shows most of the CPU specifications.

► **Cool 'N' Quiet (Appear only when CPU supports)**

This option helps lowering down the CPU frequency and voltage when system is idling. When the CPU speed is slowing down, the temperature will drop as well.

► **C1E Support**

C1E represents Enhanced HALT State. It is a feature which CPU uses to reduce power consumption when in halt state. C1E drops the CPU's multiplier and voltage to lower levels when a HLT (halt) command is issued. This item is used to enable/disable the C1E support.

## Advanced Chipset Features

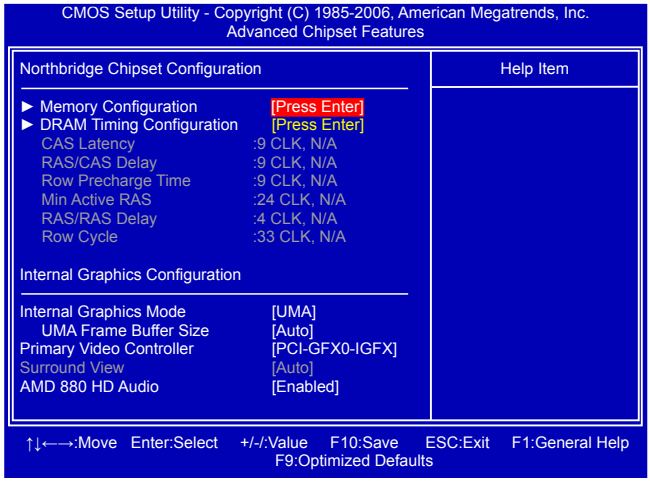
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
Advanced Chipset Features
Northbridge Chipset Configuration
Help Item
► Memory Configuration [Press Enter]
► DRAM Timing Configuration [Press Enter]
CAS Latency :9 CLK, N/A
RAS/CAS Delay :9 CLK, N/A
Row Precharge Time :9 CLK, N/A
Min Active RAS :24 CLK, N/A
RAS/RAS Delay :4 CLK, N/A
Row Cycle :33 CLK, N/A
Internal Graphics Configuration
Internal Graphics Mode [UMA]
UMA Frame Buffer Size [Auto]
Primary Video Controller [PCI-GFX0-IGFX]
Surround View [Auto]
AMD 880 HD Audio [Enabled]
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults

► **Memory Configuration / DRAM Timing Configuration**

Press <Enter> to go to its submenu.

The following six items display the values configured at the settings of "DRAM Timing Mode".

► **CAS Latency**

This item shows the CAS latency. The CAS Latency is the number of clock cycles that elapse from the time the request for data is sent to the actual memory location until the data is transmitted from the module.

► **RAS / CAS Delay**

This item displays a delay time (in clock cycles) between the CAS and RAS strobe signals.

► **Row Precharge Time**

This item shows the number of clock cycles taken between issuing of the precharge command and the active command. The DRAM row precharge time is in unit of clock cycle.

► **Min Active RAS**

Displays the number of clock cycles taken between a bank active command and issuing of the precharge command.

► **RAS / RAS Delay**

This item displays a delay time (in clock cycles) between the RAS and RAS strobe signals.

► **Row Cycle**

This item shows the minimum timing interval between successive active commands to the same bank. The row cycle time is in unit of clock cycle.

► **Internal Graphics Mode**

It allows you to determine whether to allocate memory for the integrated graphics controller from the system memory or SidePort memory.

Options: [Disabled], [UMA], [UMA+SIDEPORT].

**[Disabled]**- Disables the integrated graphics controller.

**[UMA]**-In UMA mode, the only memory to which the integrated graphics has access is a dynamically allocated partition of system memory. The size of the parition is selectable from

within the BIOS.

**[UMA+SIDEPORT]**-The SidePort is a 32-bit DDR memory interface that the integrated graphics can use either instead of or alongside the Athlon 64's memory controller. In this mode, the integrated graphics cores will request data from both the UMA space and SidePort memory.

► **UMA Frame Buffer Size**

Allocates system memory for use as video memory to ensure the most efficient use of available resources for maximum 2D/3D graphics performance.

This is a memory allocation method addition to the Unified Memory Architecture (UMA) concept, wherein a static amount of page-locked graphics memory is allocated during driver initialization. This fixed amount of memory will provide the user with a guaranteed graphics memory at all times, and will no longer be available to the OS.

► **Primary Video Controller**

This item allows you to select the priority of boot sequence from different display devices. Setting values are: [GFX0-IGFX-PCI], [PCI-GFX0-IGFX], [IGFX-GFX0-PCI]. (**GFX0**-PCI Express x16 graphics card; **IGFX**-onboard VGA; **PCI**-PCI graphics card.)

► **Surround View**

SurroundView is the ATI technology that provides multi-graphics controller display capability for both the ATI PCIe-based graphics card and the ATI integrated graphics processor (IGP). Enabling SurroundView does not impact display modes (resolution and color depth) or performance. The display mode of each output is controlled independently by the graphics controller connected to it.

1. When using a non-ATI PCI Express (PCIe) graphics card, SurroundView is not supported. The integrated graphics processor (IGP) is automatically disabled, and the system memory allocated to the IGP is freed for other use.

2. When installing an ATI PCIe graphics card, SurroundView is disabled by default. Enabling SurroundView in the BIOS enables the integrated UMA graphics controller, which in turn makes available up to two additional graphics outputs. When enabling the integrated UMA graphics controller, system memory will be reallocated.

► **AMD 880 HD Audio**

This item is used to set whether the HD Audio controller is enabled through the HDMI port on the rear panel.

## Memory Configuration

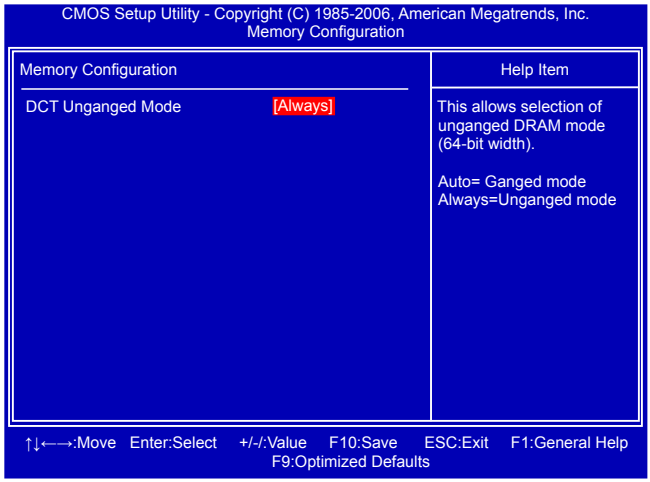




### ► DCT Unganged Mode

DCT stands for DRAM Controller.

Ganged refers to the use of both DRAM controllers within a memory controller acting in concert to access memory. For a description of ganged (128-bit DRAM data width) and unganged (64-bit DRAM data width) DRAM modes :

Ganged channels (DDR3) :

- DCT channels A and B can be ganged as a single logical 128-bit DIMM.
- Offers highest DDR3 bandwidth.
- Requires both DIMMs in a logical pair to have identical size and timing parameters, both DCTs programmed identically.

Unganged channels

- DCT channels A and B operate as two completely independent 64-bit channels (both channels operate at the same frequency).
- Reduce DRAM page conflicts – more concurrent open dram pages .
- Better bus efficiency.

Burst lengths supported

When both DCTs are enabled in unganged mode, BIOS must initialize the frequency of each DCT in order.

## DRAM Timing Configuration

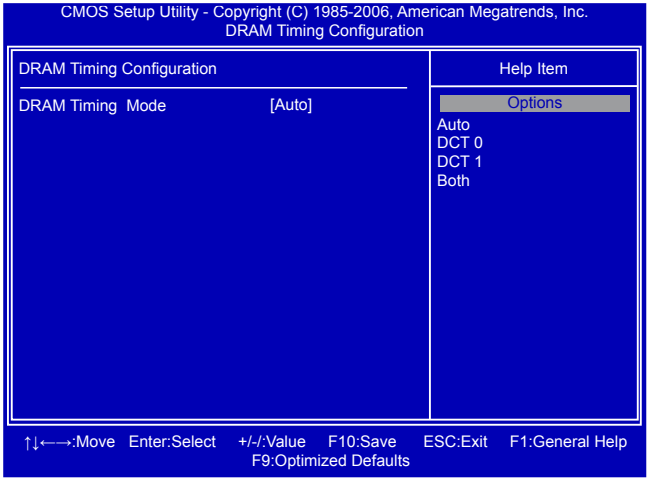




### ► DRAM Timing Mode

When both DCTs (DRAM controller) are enabled in unganged mode, BIOS must initialize the frequency of each DCT in order, you also can configure the timings manually.

Settings are : [Auto], [DCT 0], [DCT 1], [Both].

[DCT 1] and [Both] will appear only in AM2+ CPU.

## Integrated Peripherals

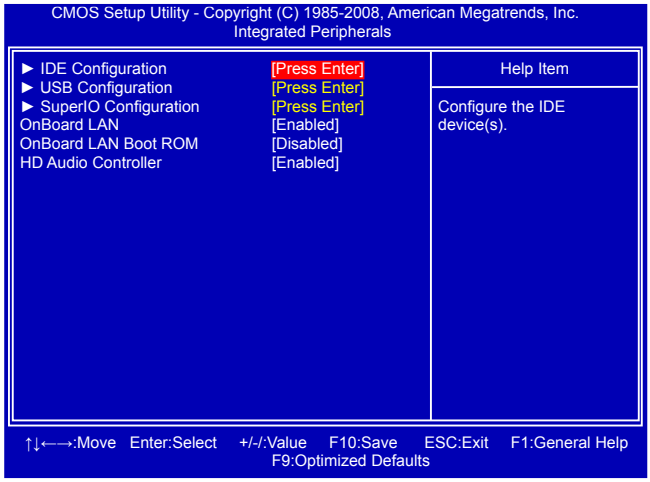


**► IDE Configuration / USB Configuration / SuperIO Configuration**

Press <Enter> to go to relative submenu.

**► OnBoard LAN**

This item is used to enable or disable the onboard LAN controller.

**► OnBoard LAN Boot ROM**

This item is used to enable or disable the onboard LAN boot optional ROM. A LAN boot ROM lets you set up a diskless workstation on the network. By installing a boot ROM in the network board, you can enable a client PC system on the network to be booted remotely.

**► HD Audio Controller**

This item is used to enable or disable the HD Audio Controller.

## IDE Configuration

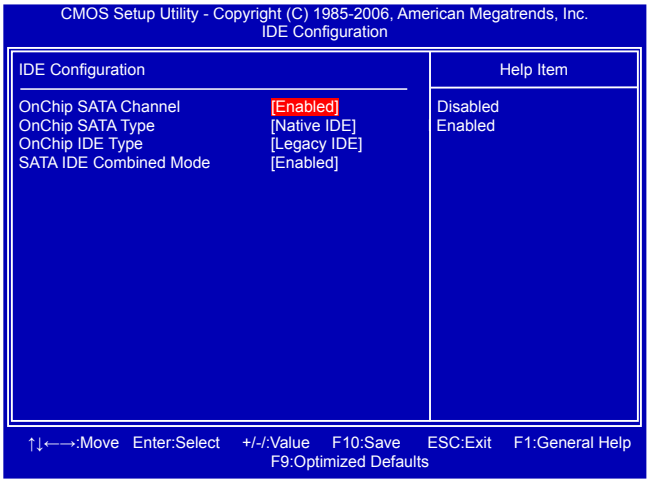




► **OnChip SATA Channel**

[Disabled] : Disable SATA ports 1,2,3,4.

[Enabled] : Enable SATA ports 1,2,3,4.

► **OnChip SATA Type**

This item is used to set the operating mode of your SATA ports.

Options : [Native IDE]; [RAID]; [AHCI]; [Legacy IDE].

**[Native IDE]** - This configures the SATA ports to support native IDE mode.

**[RAID]** - When you enable RAID, it means all your SATA drives must also support AHCI.

**[AHCI]** - The Advanced Host Controller Interface (AHCI) specification describes the register level interface for a Host Controller for Serial ATA. The specification includes a description of the hardware/software interface between system software and the host controller hardware. AHCI provides more advanced features including SATA features, but some SATA drives may not support AHCI, unless they are labeled with AHCI support in its specification.

If your motherboard supporting AHCI, and you have a SATA device, which also supports AHCI, then you can select IDE option to have fair performance (only PATA, SATA level), or you can select AHCI to get its best performance.

**[Legacy IDE]** - This configures the SATA ports to support legacy IDE mode which is running for old Windows system.

► **OnChip IDE Type**

This item is used to set the operating mode of your IDE ports.

Options : [Native IDE]; [Legacy IDE].

► **SATA IDE Combined Mode**

[Disabled] : Disable SATA 5 and ESATA.

[Enabled] : SATA 5 and ESATA are used to simulate two additional IDE ports. You can select from PATA or SATA as the Primary IDE through the next "Combined Mode Option" setting. Four drives are displayed as IDE Channel 0 Master/Slave and IDE Channel 1 Master/Slave in "System Information" menu.

## USB Configuration

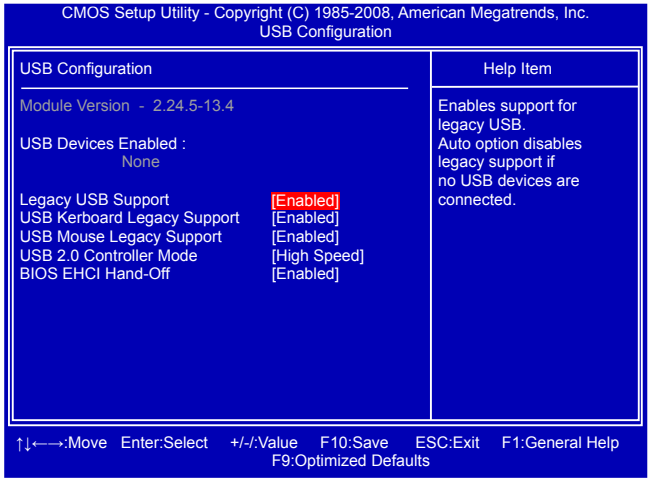
CMOS Setup Utility - Copyright (C) 1985-2008, American Megatrends, Inc.
USB Configuration
USB Configuration
Module Version - 2.24.5-13.4
USB Devices Enabled :
None
Legacy USB Support [Enabled]
USB Kerboard Legacy Support [Enabled]
USB Mouse Legacy Support [Enabled]
USB 2.0 Controller Mode [High Speed]
BIOS EHCI Hand-Off [Enabled]
Help Item
Enables support for legacy USB.
Auto option disables legacy support if no USB devices are connected.
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults

► **Legacy USB Support**

This item is used to enable the support for USB devices on legacy OS. If you have a USB keyboard or mouse, set to auto or enabled.

► **USB Kerboard Legacy Support**

This item is used to enable Legacy Support for USB Kerboard.

► **USB Mouse Legacy Support**

This item is used to enable Legacy Support for USB Mouse.

► **USB 2.0 Controller Mode**

This item is used to set the transmission rate mode of USB 2.0. The available settings are : [High Speed] in 480Mbps; [Full Speed] in 12Mbps.

►**BIOS EHCI Hand-Off**

This is a workround for OSes without EHCI hand-off support.The EHCI ownership change should claim by EHCI driver.

## SuperIO Configuration

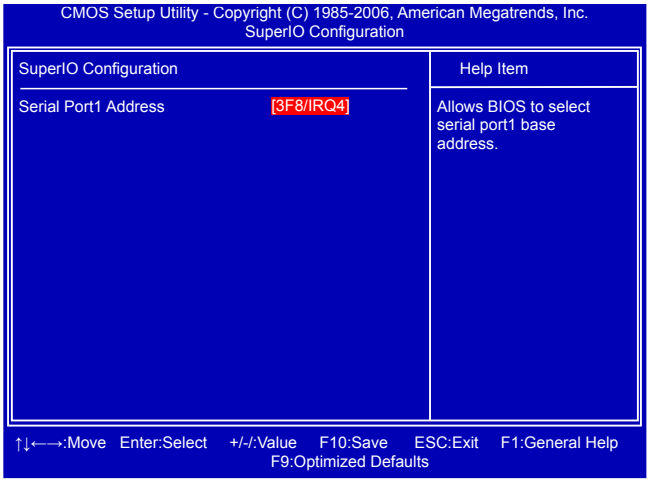
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
SuperIO Configuration
SuperIO Configuration
Help Item
Serial Port1 Address
[3F8/IRQ4]
Allows BIOS to select serial port1 base address.
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults



► **Serial Port1 Address**

This item is used to assign the I/O address and interrupt request (IRQ) for the onboard serial port 1.

## Power Management Setup

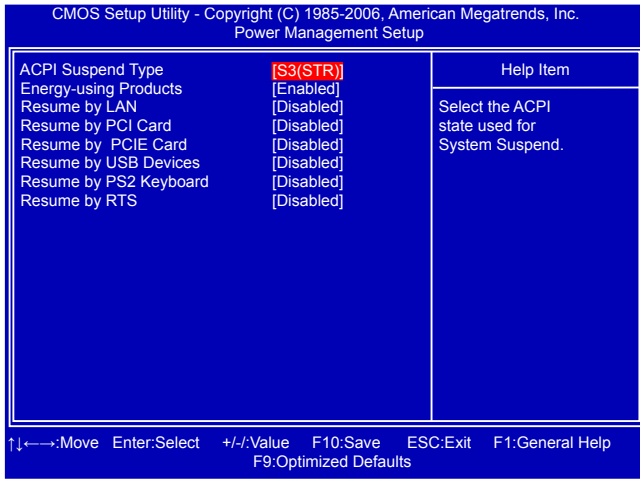
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
Power Management Setup
ACPI Suspend Type [S3(STR)]
Energy-using Products [Enabled]
Resume by LAN [Disabled]
Resume by PCI Card [Disabled]
Resume by PCIE Card [Disabled]
Resume by USB Devices [Disabled]
Resume by PS2 Keyboard [Disabled]
Resume by RTS [Disabled]
Help Item
Select the ACPI state used for System Suspend.
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults



ACPI (Advanced Configuration and Power Interface) is an open industry standard interfaces enabling OS-directed configuration, power management, and thermal management of mobile, desktop, and server platforms. It defines five sleeping states, they are :

S1 - The S1 sleeping state is a low wake latency sleeping state. In this state, no system context is lost (CPU or chip set) and hardware maintains all system context. (also called **Power On Suspend**)

S2 - The S2 sleeping state is a low wake latency sleeping state. This state is similar to the S1 sleeping state except that the CPU and system cache context is lost (the OS is responsible for maintaining the caches and CPU context). Control starts from the processor's reset vector after the wake event.

S3 - The S3 sleeping state is a low wake latency sleeping state where all system context is lost except system memory. CPU, cache, and chip set context are lost in this state. Hardware maintains memory context and restores some CPU and L2 configuration context. Control starts from the processor's reset vector after the wake event. (also called **Suspend to RAM**)

S4 - The S4 sleeping state is the lowest power, longest wake latency sleeping state supported by ACPI. In order to reduce power to a minimum, it is assumed that the hardware platform has powered off all devices. Platform context is maintained. (also called **Suspend to Disk**)

S5 - The S5 state is similar to the S4 state except that the OS does not save any context. The system is in the "soft" off state and requires a complete boot when it wakes. Software uses a different state value to distinguish between the S5 state and the S4 state to allow for initial boot operations within the BIOS to distinguish whether or not the boot is going to wake from a saved memory image.

### ► ACPI Suspend Type

This item is used to set the energy saving mode of the ACPI function. When you select "S1 (POS)" mode, the power is always on and computer can be resumed at any time. When you select "S3 (STR)" mode, the power will be down after a period of time. The status of the

computer before it entering STR will be saved in memory, and the computer can quickly return to previous state when the STR function wakes. When you select [Auto], it means OS will automatically take care and assign which mode is the most suitable now.

► **Energy-using Products**

This item is used to enable/disable the EuP(Energy-using Products) feature. When enable, the suspend power of the chipset will be cut off in S5 suspend mode in order to reduce the power consumption of motherboard.

Enable: S1/S3/S4 is normal, S5 wake up only by pressing the power button.

Disable: Normal ACPI function.

► **Resume by LAN**

This item is used to enable/disable LAN to generate a wake up.

► **Resume by PCI Card**

This item is used to enable/disable the PCI Card to generate a wake up.

► **Resume by PCIE Card**

This item is used to enable/disable the PCIE Card to generate a wake up.

► **Resume by USB Devices**

This item is used to enable/disable the USB Devices to generate a wake up.

► **Resume by PS2 Keyboard**

This item is used to enable/disable the PS2 keyboard to generate a wake up.

► **Resume by RTC**

This item is used to enable/disable RTC alarm event to generate a wake up.

RTC is system real time clock.

## PC Health Status

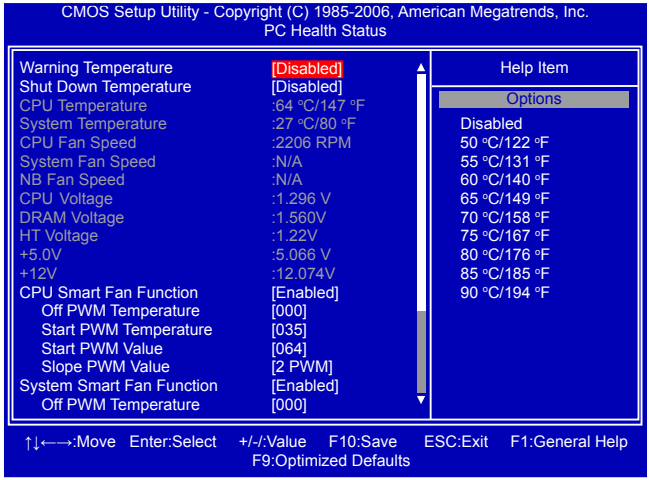


► **Warning Temperature**

This item is used to enable or disable “Warning Temperature” function.

► **Shut Down Temperature**

This item is used to enable or disable “Shut Down Temperature” function.

► **CPU/System Temperature**

The CPU/System temperature are automatically detected and displayed by the system.

► **CPU Fan/System Fan/NB Fan Speed**

The CPU fan/System fan/NB fan speed are automatically detected and displayed by the system.

► **CPU Voltage / DRAM Voltage / HT Voltage / +5.0V / +12V**

The current voltages are automatically detected and displayed by the system.

► **CPU Smart Fan Function / System Smart Fan Function / NB Smart Fan Function**

This option is used to enable or disable smart fan function.

## BIOS Security Features

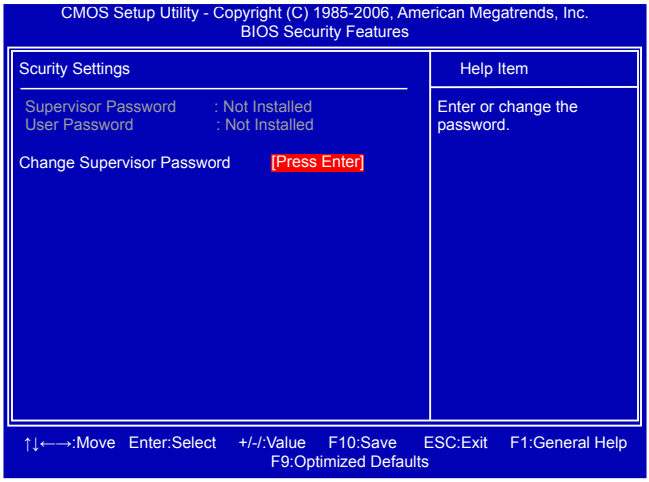
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
BIOS Security Features
Scurity Settings
Supervisor Password : Not Installed
User Password : Not Installed
Change Supervisor Password [Press Enter]
Help Item
Enter or change the password.
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults



► **Change Supervisor Password**

This item is used to install or change supervisor password.

After you input Supervisor password, it then will ask you to input user password optionally.




## Load Optimal Defaults

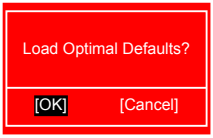


Optimal defaults are the best settings of this motherboard. Always load the Optimal defaults after updating the BIOS or after clearing the CMOS values.

Select this option and press Enter, it will pop out a dialogue box to let you load the defaults. Select <OK> and then press <Enter> to load the defaults. Select <Cancel> and press <Enter>, it will not load.

By this default, BIOS have set the optimal performance parameters of system to improve the performances of system components. But if the optimal performance parameters to be set cannot be supported by your hardware devices (for example, too many expansion cards were installed), the system might fail to work.

## Save Changes and Exit

When you select this option and press <Enter>, a message will be displayed in the center of the screen:

Select [OK] to save your changes to CMOS and exit the program, select [Cancel] or <ESC> to return to the main menu.

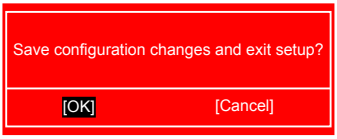


## Discard Changes and Exit

If you select this option and press <Enter>, the following message will be displayed in the center of the screen:

Select [OK] to exit CMOS without saving your modifications, select [Cancel] or <ESC> to return to the main menu.

The utility CD that came with the motherboard contains useful software and several utility drivers that enhance the motherboard features.

This chapter includes the following information:

- Utility CD content
- Install driver and utility
- FOX ONE
- FOX LiveUpdate
- FOX LOGO
- FOX DMI

Note : Because each module is independent, so the section number will be reorganized and unique to each module, please understand.

## Utility CD content

This motherboard comes with one Utility CD. You can simply put it into your CD/DVD-ROM drive, and the main menu will be displayed on your PC screen to guide you how to install.

### 1. Install Driver

Use these options to install all the drivers for your system. You should install the drivers in order, and you need to restart your computer after all the drivers have been installed.

A. AMD Chipset Driver
B. Realtek HDA Audio Driver
C. Atherous LAN Driver
D. AMD VGA Driver
E. AMD RAID Driver*1
F. ATI HDMI Audio Driver

### 2. Software Utilities

Use these options to install additional software programs. FOX ONE is a very powerful user interface program which allows you to change your system setting without going to BIOS. Some auto features help user to improve (or overclock) your system without being a computer literate.

A. FOX ONE
B. FOX LiveUpdate
C. FOX LOGO
D. FOX DMI
E. Microsoft DirectX 9.0*2
F. Adobe Acrobat Reader
G. Norton Internet Security

*1 : This item will be displayed only when "OnChip SATA Type" is set to [RAID].
*2 : The item will appear in Windows XP operation system, but it will not show in Windows Vista and Windows 7 operation system.

# Install driver and utility

## 1. Install Driver

You must click "AMD Chipset Driver" to install it first. After that, you can click "One Click Setup" to install all the other drivers left, or you can click on each individual driver to install it manually.

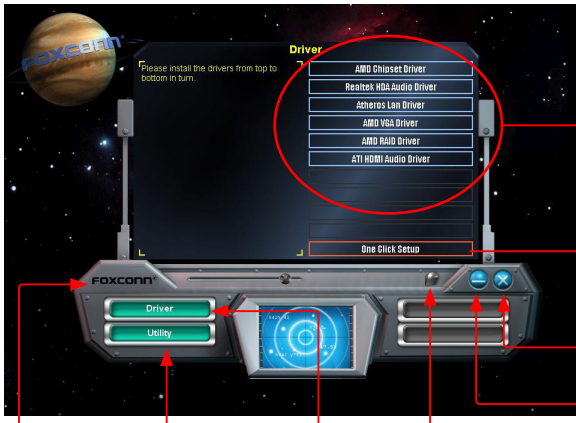


Manual Installation Step by Step

Automatic Installation by One Click.

Exit the program

Drop to System Tray

Click to visit Foxconn's website

Select to Install Utilities

Select to Install Drivers

Browse CD

## 2. Install Utility

You can select the specific utility to install.

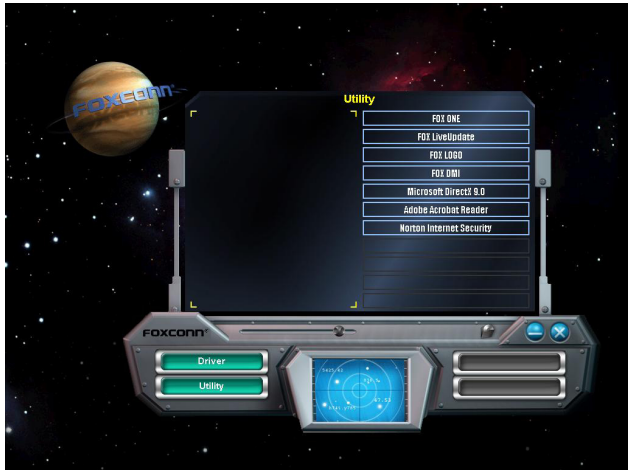

# FOX ONE

FOX ONE is a powerful utility for easily modifying system settings. It also allows users to monitor various temperature values, voltage values, frequencies and fan speeds at any time.

With FOX ONE, you can :

- Modify system performance settings, such as the CPU and memory bus speeds, CPU voltages, fan speeds, and other system performance options.
- Monitor hardware temperatures, voltages, frequencies and fan speeds.

CAUTION

Depending on hardware support, voltage monitoring and Fox Intelligent Stepping features are optional and only supported in some models. If the option is selectable, it also means the feature is supported.

- Voltage Monitoring is supported only in FOX ONE Premium & Deluxe products.
- Fox Intelligent Stepping is supported only in FOX ONE Deluxe products.



Supporting Operating Systems :

- Windows 2000
- Windows 2003 (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)
- Windows XP (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)

## *Using FOX ONE :*

The very first time you run FOX ONE, F.I.S. Calibration function (FOX Intelligent Stepping) will require you to calibrate the CPU's loading. Click "OK" to proceed and start the Utility. F.I.S. is a feature of FOX ONE, which can automatically adjust your CPU clock based on your current system loading.

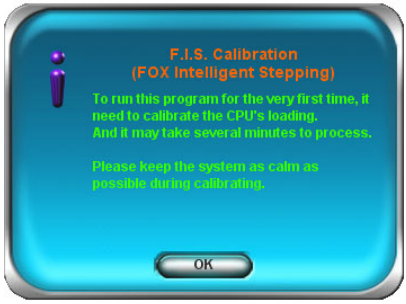
F.I.S. Calibration
(FOX Intelligent Stepping)
To run this program for the very first time, it need to calibrate the CPU's loading.
And it may take several minutes to process.
Please keep the system as calm as possible during calibrating.
OK

CAUTION

Before you running the FOX ONE program, the system parameters (such as CPU clock, voltage...etc.) are controlled by BIOS settings. After you run FOX ONE, it will take over, and the controlling right will be transferred to FOX ONE. Later, reboot, then BIOS control will be back again.

## 1. Main Page

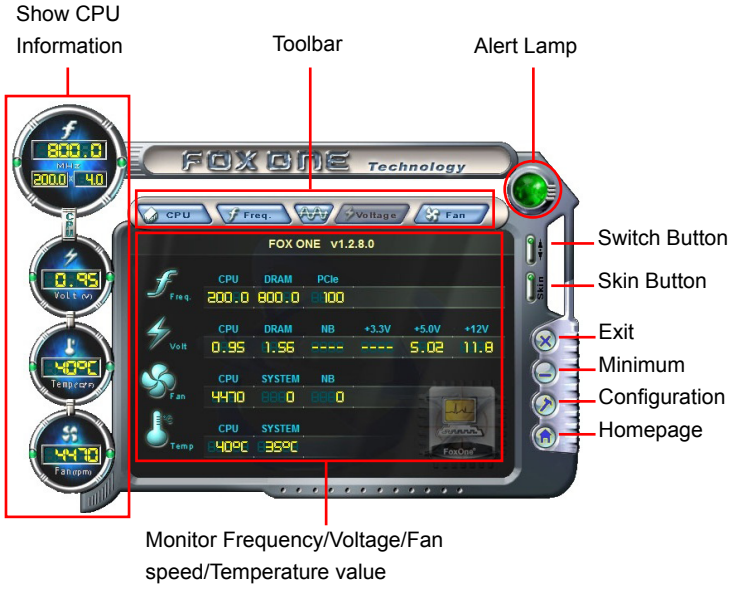


**Toolbar**

Use the toolbar to navigate to other pages.

**Alert Lamp**

When the system is in healthy state, the color of alert lamp is green. When the system is in abnormal state, the alert lamp color is red.

**Switch Button**

Click this button, it will simplify the whole FOX ONE control panel to a smaller information bar (i.e. Simple Mode) as depicted below, you can drag this bar to any place on your screen to help you monitoring system status.

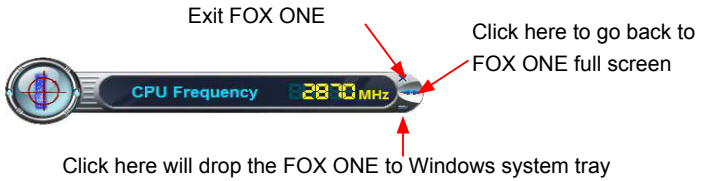
Exit FOX ONE
Click here to go back to FOX ONE full screen
CPU Frequency
MHz
Click here will drop the FOX ONE to Windows system tray

**Skin Button**

There are more choices of FOX ONE screen panels. Click this button, you can select your favorite skin (FOX ONE Panel).

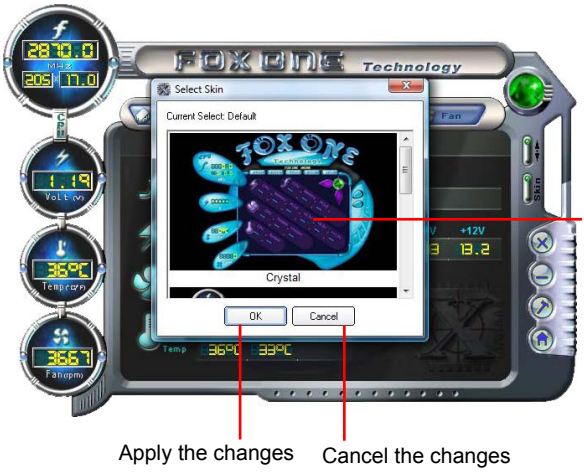


**Exit**

Click this button to exit the program.

**Minimum**

Click this button to drop the FOX ONE to Windows system tray located at the lower right corner of your screen.

**Homepage**

Click this button to visit Foxconn motherboard website :
http://www.foxconnchannel.com

**Configuration**

This menu allows you to configure :

1). Monitor interval (ms) :

This is to define the interval of different messages of system settings which are to be displayed on Simple Mode screen. Minimum value is 1 second.

2). Simple Mode :

To select which message of system settings are to be displayed in the Simple Mode. Messages such as CPU frequency, voltage...etc., they can be displayed one by one in Simple Mode.

3). F.I.S. Calibration (FOX Intelligent Stepping, Optional)

This function will re-calibrate the CPU's loading, and it may take several minutes to proceed. The FOX ONE calibration process will apply different loadings to your CPU, record PWM IC voltage together with the CPU clock running at these loadings, so it can define and estimate within a particular range of system loading, what the CPU clock should be.

Step 1 : Click Calibration icon, a message pops out to ask for continue. Select Yes.

Step 2 : After data is collected, it will ask you to restart your computer now.

Later on, when the FOX ONE program is activated, and F.I.S. feature (in CPU Page) is also enabled, FOX ONE will automatically adjust your CPU clock according to your system loadings. (Loadings are like Power Gaming, Data Mining...etc.)

## 2. CPU Page - CPU Control

This page lets you select (or overclock) CPU clock to meet the current performance level of the system. The fastest and suitable CPU clock running for current system can be calculated by FOX ONE automatically or manually input by yourselves.

**Manual :**

You can press the up/down button to adjust your CPU clock.

**Auto :**

Click this button to let FOX ONE check the highest CPU clock you can use. System will raise the CPU clock step by step until it hangs, you can then push the RESET button on your PC panel to restart the system. When system restarts, run FOX ONE again, it will display a recommended highest CPU clock for you, click <Yes> to apply it.



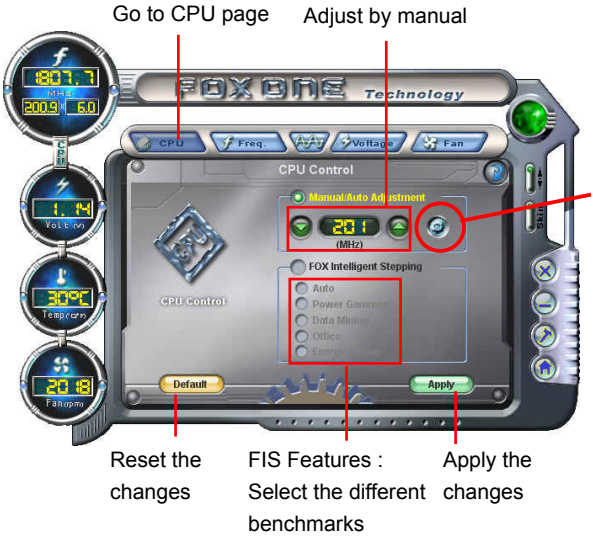


Press Auto button to let FOX ONE check the highest CPU clock you can use.

A message informs you to push RESET button later if the system hangs finally. Click Yes to continue.

You can see the system is raising CPU clock until the system hangs.
Push RESET button on the front panel of your system to restart the computer.

Run FOX ONE program again, it will inform you the previous test found that 255MHz is the recommended CPU clock for your system.
Click Yes to apply it to your system.

Now, your system is running at a CPU clock of 215MHz.

**FOX Intelligent Stepping (F.I.S., Optional)**

Select FOX Intelligent Stepping will allow your system to automatically adjust your CPU clock rate based on different system loadings. For example, if you select Power Gaming, CPU clock will be driven to run at its maximum speed. While in Energy Saving, CPU will lower down its speed to a minimum. The four benchmarks - Power Gaming, Data Mining, Office and Energy Saving, the references of their system loading were calculated and defined in the FIS Calibration option of Configuration menu. Select Auto, CPU will automatically adjust its clock according to current system loading.

## 3. Frequency Page - Frequency Control

This page lets you set memory and PCI Express frequencies by manual.

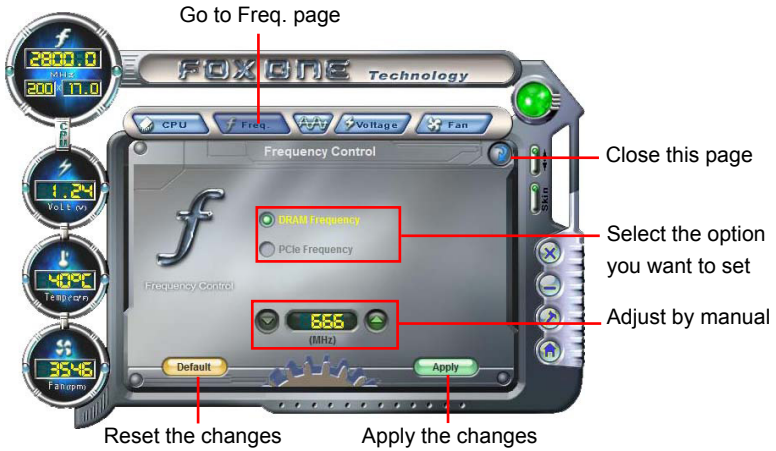

# 4. Limit Setting

## 4.1 Limit Setting - CPU Temperature

This page lets you to set CPU high limit temperature and enable the alert function.

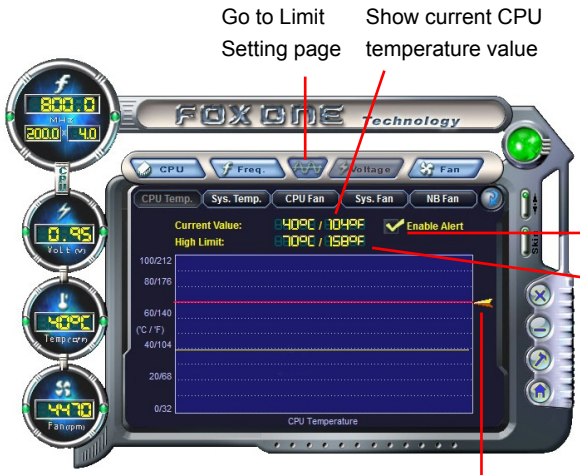


## 4.2 Limit Setting - System Temperature

This page lets you to set system high limit temperature and enable the alert function.

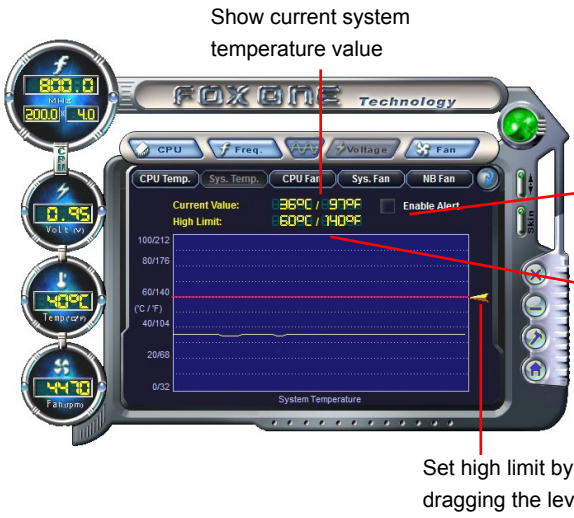

### 4.3 Limit Setting - CPU Fan

This page lets you to set CPU fan low limit rpm and enable the alert function.

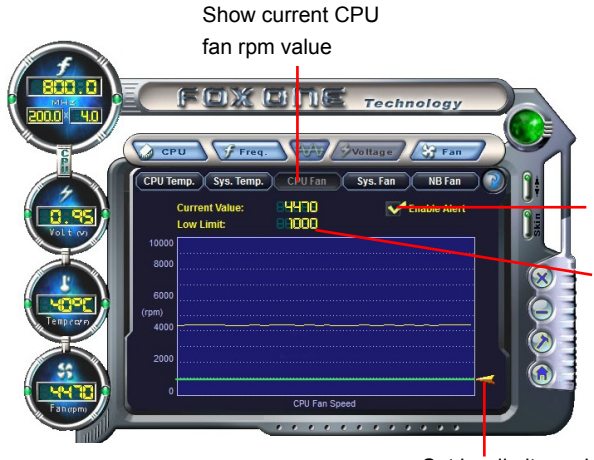
Show current CPU fan rpm value
Enable alert function when the CPU fan runs slower than the low limit rpm value
Show current low limit rpm value of CPU fan
Set low limit rpm by dragging the lever
CPU Temp.
Sys. Temp.
CPU Fan
Sys. Fan
NB Fan
Current Value:
Low Limit:
4470
1000
CPU Fan Speed

### 4.4 Limit Setting - System Fan

This page lets you to set system fan low limit rpm and enable the alert function.

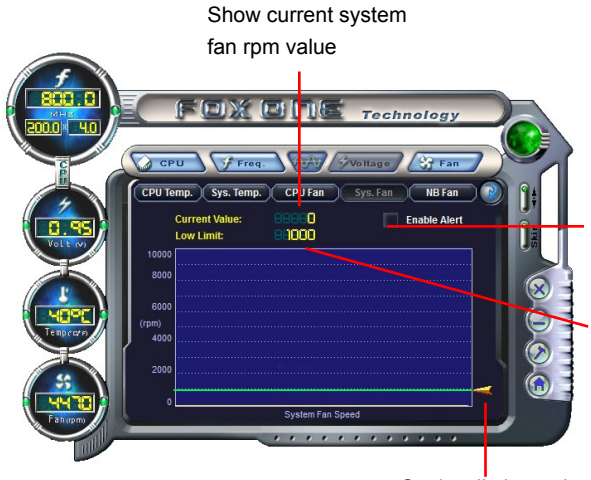

### 4.5 Limit Setting - NB Fan

This page lets you to set NB fan low limit rpm and enable the alert function.

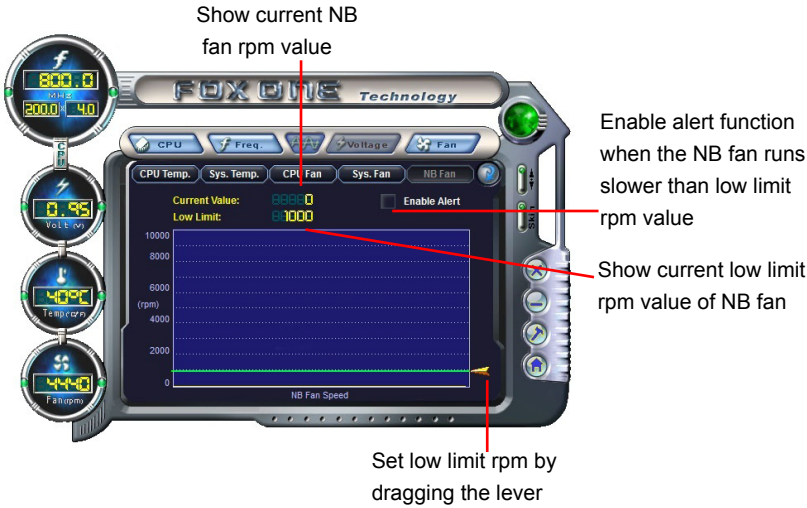




## 5. Voltage Page - Voltage Control (Optional)

This page lets you set CPU voltage, memory voltage and North Bridge voltage manually. CPU voltage can be stepped up/down by a unit of 12.5mV, while memory is 0.05V/step, and North Bridge is 0.04V/step.

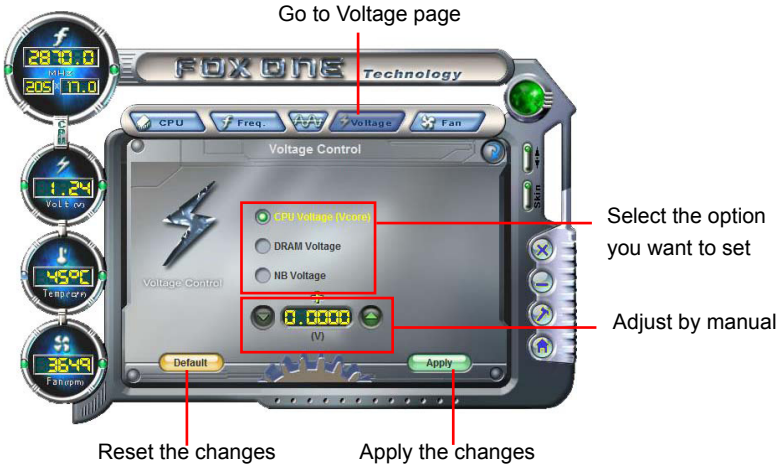

## 6. Fan Page - Fan Control

This page lets you enable Smart Fan function or set the fan speed by manual. When Smart Fan is selected, you must use a 4-pin CPU cooler in your system.

# FOX LiveUpdate

FOX LiveUpdate is a useful utility to backup and update your system BIOS, drivers and utilities by local or online.

Supporting Operating Systems :

- Windows 2000
- Windows XP (32-bit and 64-bit)
- Windows 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)



## Using FOX LiveUpdate :

## 1. Local Update

### 1-1 Local Update - BIOS Information

This page lets you know your system BIOS information.

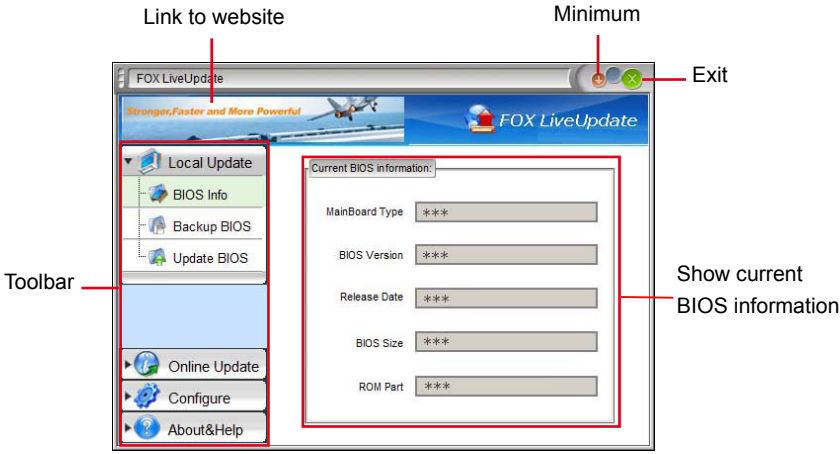


*** : please refer to the physical motherboard for detail.

### 1-2 Local Update - Backup

This page can backup your system BIOS. You can click “Backup”, and key in a file name, then click “Save” to finish the backup operation. The extension of this backup file is ".BIN" for Award BIOS and ".ROM" for AMI BIOS. Default directory is "C:\Desktop\My Documents" in Windows XP and "Documents" in Vista. Make sure you can remember the file name together with the directory

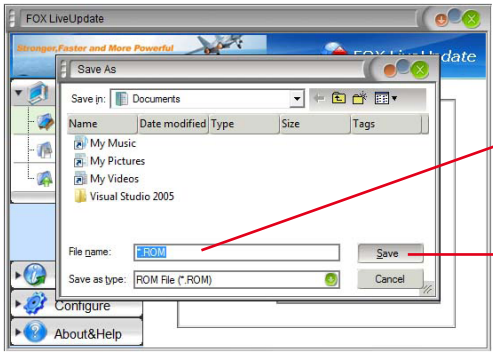


which it is stored, prevented that you may need them to recover your BIOS later.

### 1-3 Local Update - Update

This page helps you to update your BIOS from a local file. After click “Update”, An alert message will be displayed to ensure if you really want to continue, click “Yes” to confirm. A setup wizard will guide you to load a local BIOS file to finish the operation. You must remember from which directory to load your new BIOS file (with an extension of ".BIN" for Award BIOS, ".ROM" for AMI BIOS) before the setup wizard starts.

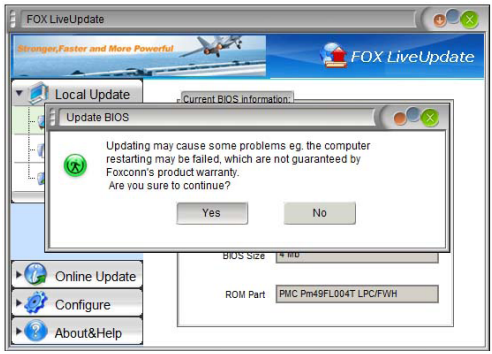


CAUTION

FOX LiveUpdate can automatically backup old BIOS before update. This feature can be enabled in the "Configure-System" setup. Please refer to "Configure-System" section for more detail. The default backup directory is C:\LiveUpdate_Temp, but the backup file name will be automatically generated. It is hard to find it out from a backup directory, and we recommend you using Explorer to check date/time message of this backup file to find it out and write its name down to remember it.

## 2. Online Update

### 2-1 Online Update - Update BIOS

This page lets you update your system BIOS from Internet. Click “start”, it will search the new BIOS from Internet. Then follow the wizard to finish the update operation.

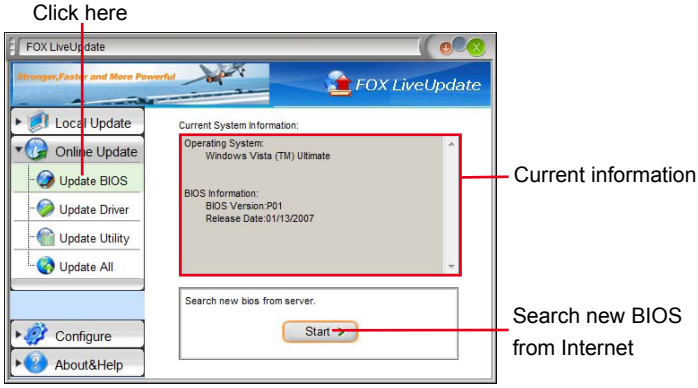


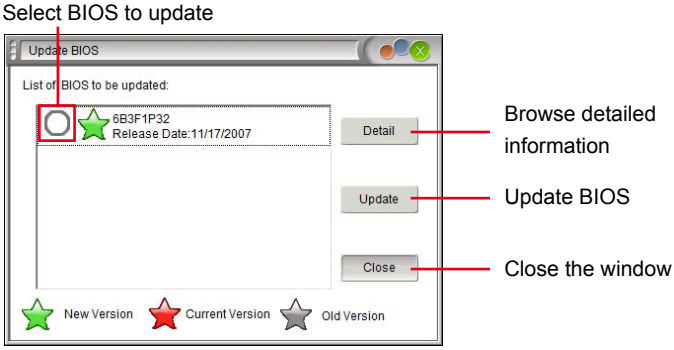


### 2-2 Online Update - Update Driver

This page lets you update your system drivers from Internet. Click “start”, it will search the new drivers from Internet. Then follow the wizard to finish the update operation.

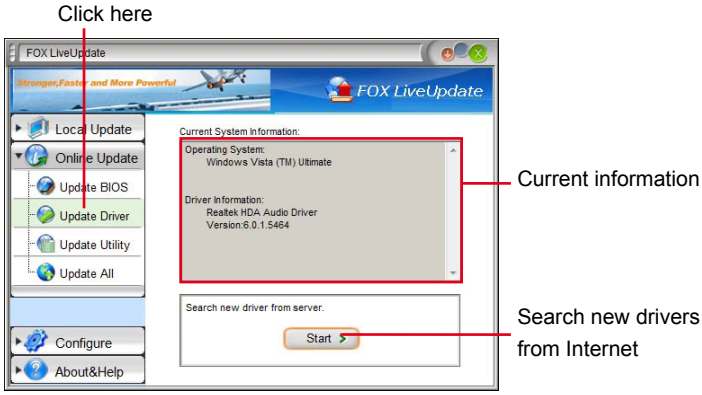

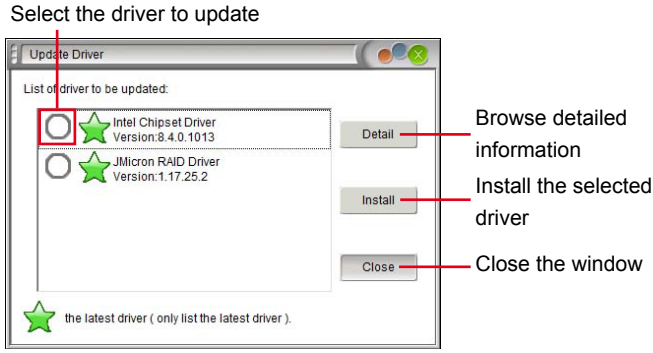


## 2-3 Online Update - Update Utility

This page lets you update utilities from Internet. Click “start”, it will search the new utilities from Internet. Then follow the wizard to finish the update operation.

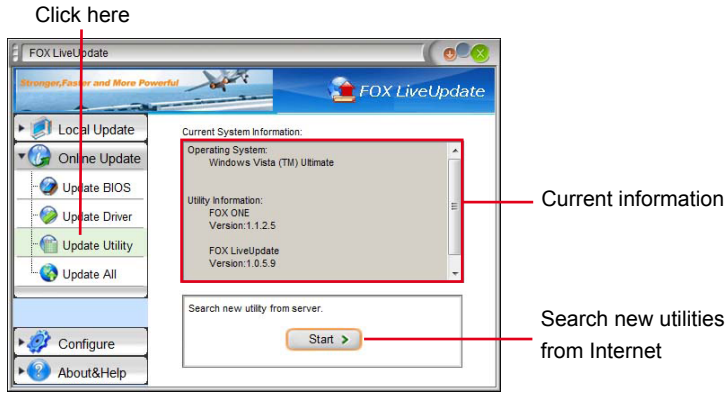


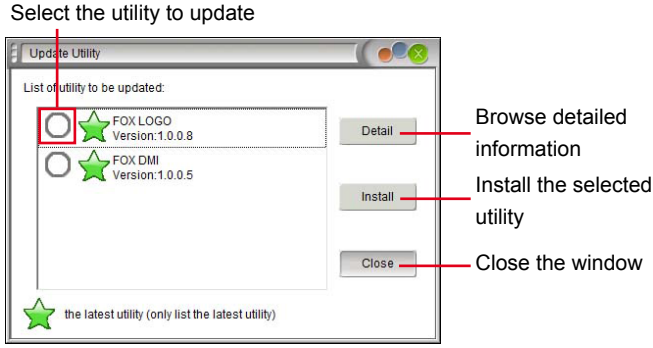

## 2-4 Online Update - Update All

This page lets you update your system drivers from Internet. Click “start”, it will search all new BIOS/drivers/utilities from Internet. Then follow the wizard to finish the update operation.

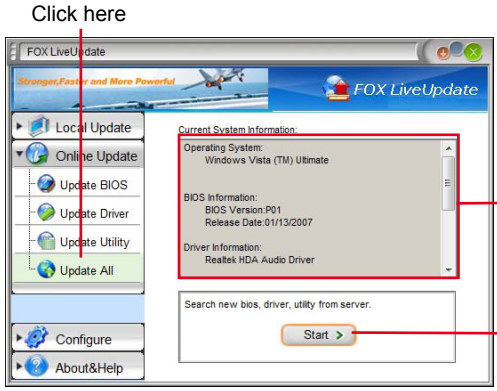


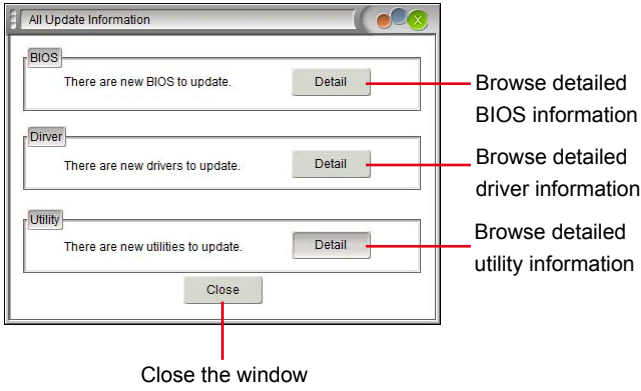

# 3. Configure

## 3-1 Configure - option

This page lets you set auto search options. After you enable the auto search function, FOX LiveUpdate will start its searching from Internet and if any qualified item found, it will pop out a message on the task bar to inform you to do the next step.

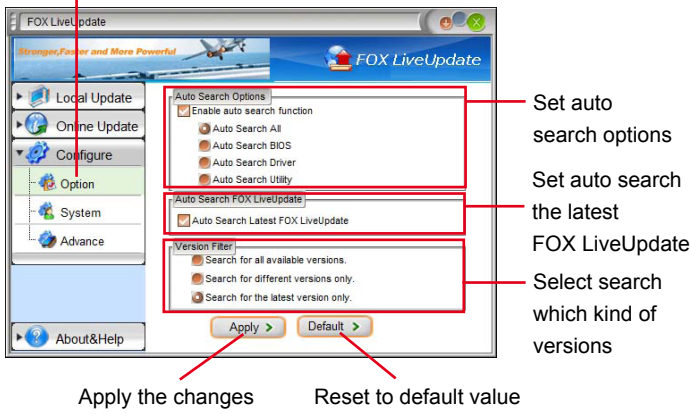


Double click on the icon as show below, you can see the detailed information.

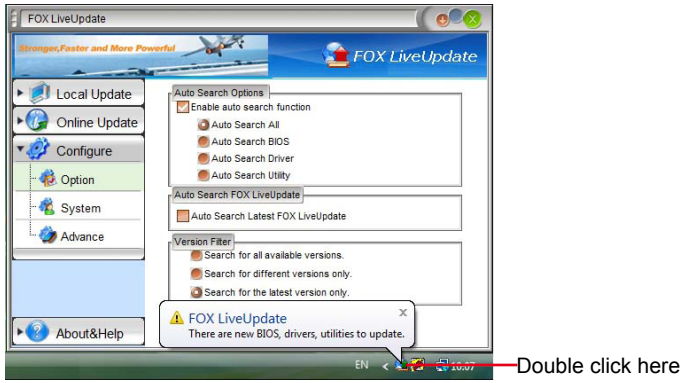

When you enable "Auto Search FOX LiveUpdate", if your FOX LiveUpdate version is older, it will auto search from internet and prompt you to install the new version.

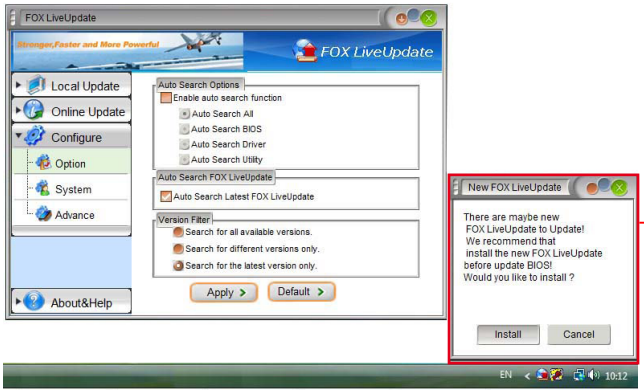


Prompt you to install the new FOX LiveUpdate

4

### 3-2 Configure - System

This page lets you set the backup BIOS location.

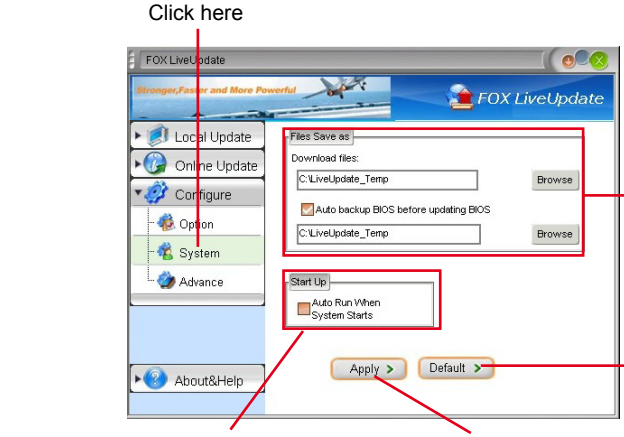


Set the location of download files or auto backup BIOS

Reset to default value

Determine if the FOX LiveUpdate can auto run when the system starts up

Apply the changes

### 3-3 Configure - Advance

This page lets you select to flash BIOS / Boot Block and clear CMOS. If you choose Flash Boot Block, it means BIOS is not protective, and you must make sure the flash process is continuous and without any interruption.

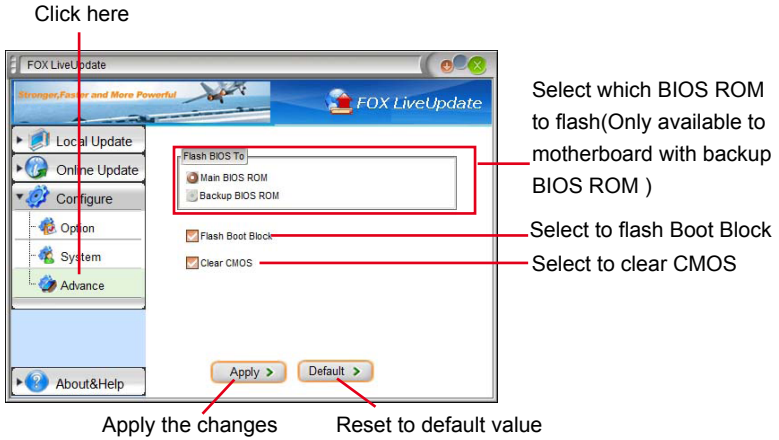


CAUTION

We recommend that you had better keep the default setting unchanged to avoid any damage.

### 4. About & Help

This page shows some information about FOX LiveUpdate.

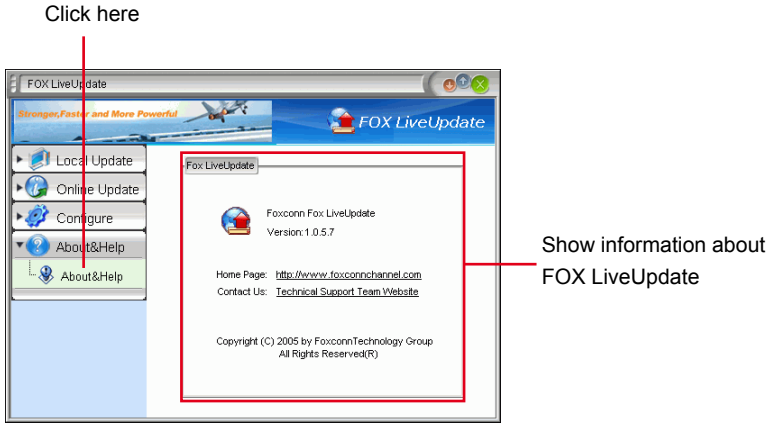

# FOX LOGO

FOX LOGO is a simple and useful utility to backup, change and delete the boot time Logo. The boot Logo is the image that appears on screen during POST (Power-On Self-Test).

You can prepare a JPG image (1024x768) file, then use FOX LOGO to open it and change the boot time Logo. Boot time Logo will be displayed if you enable the BIOS "Quiet Boot" setting in "Advanced BIOS Features" menu.

Supporting Operating Systems :

- Windows 2000
- Windows XP (32-bit and 64-bit)
- Windows 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)

## Using FOX LOGO:

### Main Page

When you change Logo or delete current Logo, the system will flash BIOS file automatically. During this time, please DO NOT shut down the application and the system, or the motherboard will be damaged seriously.

# FOX DMI

FOX DMI is a full Desktop Management Interface viewer, and it provides three DMI data formats : Report, Data Fields and Memory Dump.
With DMI information, system maker can easily analyze and troubleshoot your mother-board if there is any problem occurred.

Supporting Operating Systems :

- Windows 2000
- Windows XP (32-bit and 64-bit)
- Windows 2003 (32-bit and 64-bit)
- Windows Vista (32-bit and 64-bit)
- Windows 7 (32-bit and 64-bit)



## Using FOX DMI:

Please operate this utility as the comments shows.

Click here to select the node you want to view.

Click here to select the DMI Data format you need

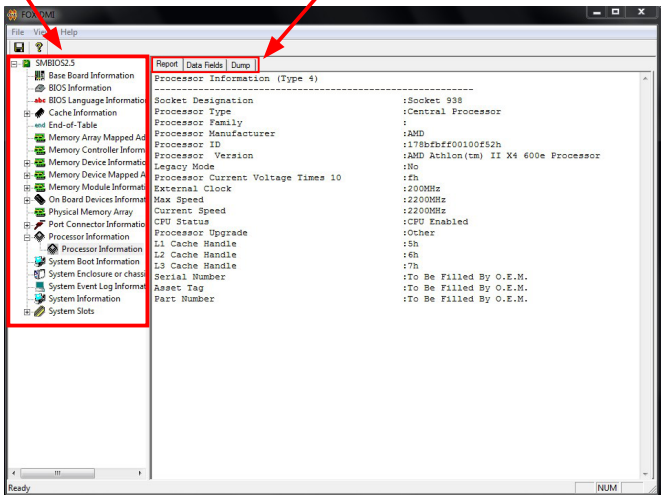

This chapter will cover two topics :

- Creating a Bootable Array - Installing a new Windows XP (or Vista) in a brand new RAID system.
- Creating a Non-Bootable Array - Existing Windows XP (or Vista) system with new RAID built as data storage.

It includes the following information :

- RAID Configuration Introduction
- Option ROM Utility
- Create a RAID Driver Diskette
- RAID Enable in BIOS
- Select a RAID Array for use
- Install a New Windows XP
- Setting up a Non-Bootable RAID Array

The RAID BIOS Setup pictures shown in this chapter are for reference only, please refer to the practical screen.

**Creating a Bootable Array -** Installing a new Windows XP (or Vista) in a brand new RAID system.

1. Follow 5-1 to create a RAID driver diskette.
2. Follow 5-2 to set RAID enabled in BIOS.
3. Follow 5-3 to select a RAID array for use.
4. Follow 5-4 to Install a new Windows Operating System.

What kinds of hardware and software you need here :

1. A floppy drive.
2. A DVD-ROM drive.
3. Several SATA hard disks.
4. A RAID driver diskette.
5. A motherboard driver CD. (To create RAID driver diskette if it is not bundled.)
6. Windows XP or Vista Install CD.



**Creating a Non-Bootable Array -** Existing Windows XP (or Vista) system with new RAID built as data storage.

Follow 5-5 to go through the processes to build a new RAID array in your existing Windows XP system, it includes :

1. Set RAID enabled in BIOS.
2. Follow 5-3 to select a RAID array for use.
3. Run setup program to install AMD RAID driver into your current Windows XP system.
4. Use Administrative Tools in Control Panel to format new RAID array.

What kinds of hardware and software you need here :

1. A DVD-ROM drive.
2. Several SATA hard disks.
3. A motherboard driver CD.

## RAID Configuration Introduction

RAID (Redundant Array of Independent Disks) is a method for computer data storage schemes that divide and/or replicate data among multiple hard drives. RAID can be designed to provide increased data reliability (fault tolerance) or increased I/O (input/output) performance, or both. The following RAID configurations are provided for users.

There are three major key concepts in RAID:
1. Mirroring : The copying of data to more than one disk;
2. Striping : The splitting of data across more than one disk;
3. Error correction : Where redundant data is stored to allow problems to be detected and possibly fixed (known as fault tolerance).



Different RAID levels use one or more of these techniques, depending on the system requirements. The main aims of using RAID are to improve reliability, important for protecting information that is critical to a business, for example a database of customer orders; or where speed is important, for example a system that delivers video on demand TV programs to many viewers.

The configuration affects reliability and performance in different ways. The problem with using more disks is that it is more likely that one will go wrong, but by using error checking the total system can be made more reliable by being able to survive and repair the failure. Basic mirroring can speed up reading data as a system can read different data from both the disks, but it may be slow for writing if it insists that both disks must confirm that the data is correctly written. Striping is often used for performance, where it allows sequences of data to be read off multiple disks at the same time. Error checking typically will slow the system down as data needs to be read from several places and compared. The design of RAID systems is therefore a compromise and understanding the requirements of a system is important. Modern disk arrays typically provide the facility to select the appropriate RAID configuration.

RAID is often used in high availability systems, where it is important that the system keeps running as much of the time as possible.

**RAID 0 (Striped)**
RAID 0 reads and writes sectors of data interleaved among multiple drives. If any disk member fails, it affects the entire array. The disk array data capacity is equal to the number of drive members times the capacity of the smallest member. RAID 0 does not support fault tolerance.

**RAID 1 (Mirror)**
RAID 1 writes duplicate data onto a pair of drives and reads both sets of data in parallel. If one of the mirrored drives suffers a mechanical failure or does not respond, the remaining drive will continue to function. Due to redundancy, the drive capacity of the array is the capacity of the smallest drive.

**RAID Ready**
A "RAID Ready" system is a specific system configuration that, with the addition of a second Serial ATA hard drive, can be seamlessly migrated to a configuration that provides either improved storage performance or data protection from a single hard drive failure.



**RAID 5 (Parity)**
RAID 5 provides data striping at the byte level and also stripes error correction information. This results in excellent performance and good fault tolerance. Level 5 is one of the most popular implementations of RAID.

**RAID 10 (Striped Mirror)**
RAID 10 is a combination of striping and mirroring. This configuration provides optimal speed and reliability, but you need four SATA hard disks.

**Span (JBOD)**
JBOD stands for “Just a Bunch of Disks”. Each drive is accessed as if it were on a standard SCSI host bus adapter. This is useful when a single drive configuration is needed, but it offers no speed improvement or fault tolerance. A spanned volume is a formatted partition which data is stored on more than one hard disk, yet appears as one volume. Unlike RAID, spanned volumes have no fault-tolerance, so if any disk fails, the data on the whole volume could be lost. Additionally, the system or boot partitions cannot be included in a spanned volume. FAT16/32 and NTFS file systems may be used, and the volume can span up to 32 hard disks.

**Comparison Table :**

| Solution | Hard Disks No. | Capacity | Performance | Reliability | Application |
|---|---|---|---|---|---|
| RAID0 | >=2 | All | Highest | Dangerous | Look for speed |
| RAID1 | 2 | 50% | Read faster | Excellent | 100% Data backup |
| RAID5 | >=3 | Smallest*(N-1) | Read faster<br>Write slower | Good | Limited budget |
| RAID10 | >=4 (Even number) | Smallest*2 | High | Excellent | Unlimited budget |
| Span | >=1 | All | none | Dangerous | Big disk space |

## Option ROM Utility

The Option ROM Utility supports RAID 0, RAID 1, RAID5 and RAID10 functions. It allows you to get high performance with fault tolerance, big capacity, or data safety provided by different RAID functions.

Here, we will use four SATA hard disks as an example to guide you through how to configure your RAID system. Assume four hard disks are connected to the motherboard :

Lower SATA port of SATA1_SATA2 - HDS728090PLA380, 82.34GB

Upper SATA port of SATA1_SATA2 - WDC WD1200JD-98HBB0, 120.03GB

Lower SATA port of SATA3_SATA4 - Hitachi HDT725025VLA3, 250.05GB

Upper SATA port of SATA3_SATA4 - ST3320620AS, 320.07GB

To achieve the best performance and reliability, we highly recommend you using the hard disks with the same brand, size and model number. Though we are using four different hard disks as an example to describe RAID function in this chapter, it is only helpful in explaining what the final disk volume of the RAID array will be. In the real world, using the same model to build a disk array is strongly recommended.



The relationships between port numbers in the Option ROM Utility and SATA ports on the motherboard are shown below. They are :

Channel 1 is the lower SATA port of SATA1_SATA2 of the motherboard.

Channel 2 is the upper SATA port of SATA1_SATA2.

Channel 3 is the lower SATA port of SATA3_SATA4.

Channel 4 is the upper SATA port of SATA3_SATA4.

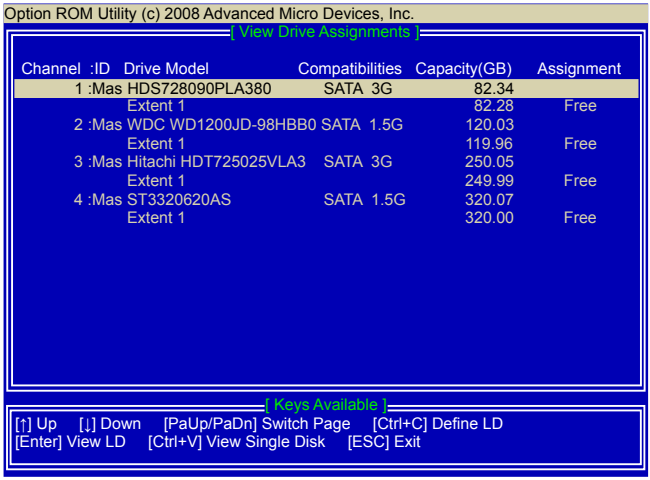
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ View Drive Assignments ]
Channel :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34
Extent 1 82.28 Free
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03
Extent 1 119.96 Free
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05
Extent 1 249.99 Free
4 :Mas ST3320620AS SATA 1.5G 320.07
Extent 1 320.00 Free
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Ctrl+C] Define LD
[Enter] View LD [Ctrl+V] View Single Disk [ESC] Exit

**Two topics will be covered in the following sections :**

1). **Creating a Bootable Array -** Installing a new Windows XP in a brand new RAID system.

2). **Creating a Non-Bootable Array -** Existing Windows XP system with new RAID built as data storage.

Install SATA Hard Disks before we continue :

- Shut down your computer.
- Install SATA hard disks into the drive bays, connect all power and SATA cables.

- Before installing the SATA hard disks, make sure to turn off the computer and unplug the power cord from the power outlet to prevent damage to the hardware.

## 5-1 Create a RAID Driver Diskette

If you want to install a brand new Windows XP on a RAID system, you need to create a RAID driver floppy diskette which will be used during Windows XP installation later.

1. Find a PC, put a diskette into its floppy drive A:, this diskette will be formatted later. Put the driver CD into DVD-ROM drive.

2. Depending on which platform your system is, normally, it is a 32-bit XP system. Use Windows explorer, and go to **CD:\Driver\AMD\RAID\Floppy\WinXP**, click on **RaidTool** icon to start the creation.

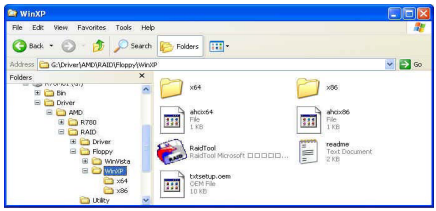


3. Click "GO" to start.

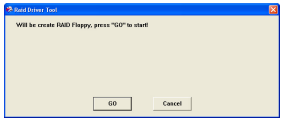


4. Select the desired destination FDD drive. It can be the default drive A: or any USB FDD. Click "OK" to continue.

5. Insert a diskette, click "OK" to continue.

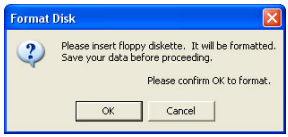
Format Disk
Please insert floppy diskette. It will be formatted. Save your data before proceeding.
Please confirm OK to format.
OK
Cancel

6. You can input a volume label for this diskette, click on "Start" to format.

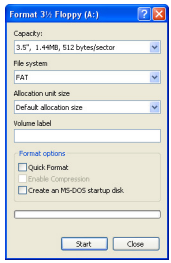


7. Click on "OK" to go through this warning message.

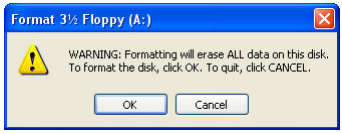
Format 3½ Floppy (A:)
WARNING: Formatting will erase ALL data on this disk.
To format the disk, click OK. To quit, click CANCEL.
OK
Cancel

5

8. Format finished. Click "OK" to continue copying of RAID driver into this diskette.

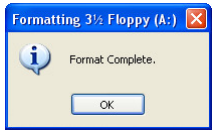


9. Check if the diskette contains the driver files.

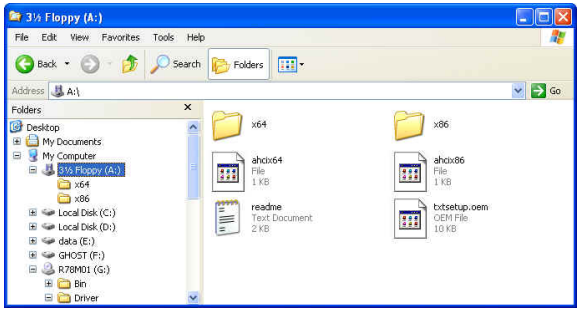

## 5-2 RAID Enable in BIOS

1. Enter the BIOS setup by pressing <DEL> key when boot up.
2. Select the “Integrated Peripherals” from the “Main menu”, then select the “IDE Configuration” menu and press <Enter> to go to the configuration items.
3. Enable RAID function and individual SATA port for hard drive or DVD connection.
4. Press <F10> to save the setting then PC will reboot itself.

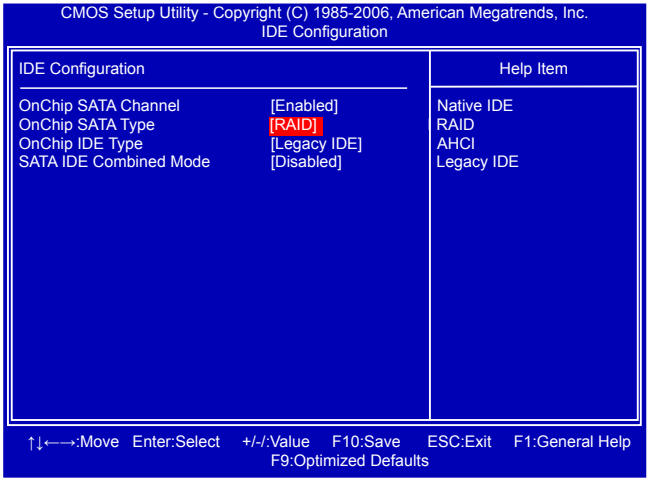


## 5-3 Select a RAID Array for Use

When BIOS is restarted, it will display a message asking you to press [Ctrl-F] key to enter the main menu of Option ROM Utility. Press [Ctrl-F], the Main Menu appears.

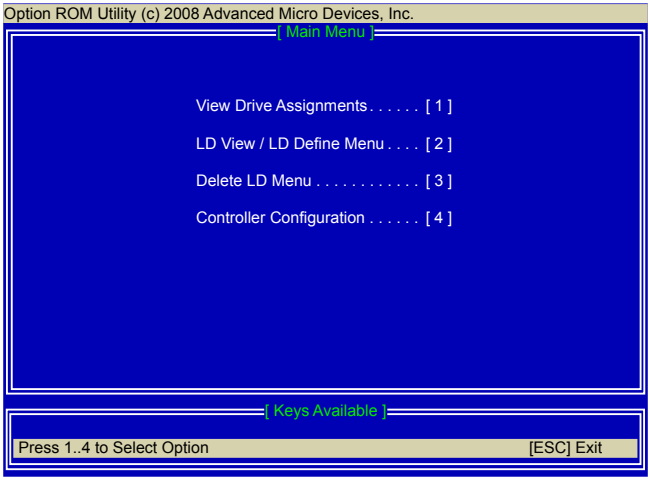
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Main Menu ]
View Drive Assignments . . . . . [ 1 ]
LD View / LD Define Menu . . . . [ 2 ]
Delete LD Menu . . . . . [ 3 ]
Controller Configuration . . . . . [ 4 ]
[ Keys Available ]
Press 1..4 to Select Option
[ESC] Exit

**Create RAID 0 (Striped)**

Here, we will show you how to create two RAID 0 Logical Drives (LD) by using two hard disks.

1. Select [2] from the main menu, " LD View Menu" appears.

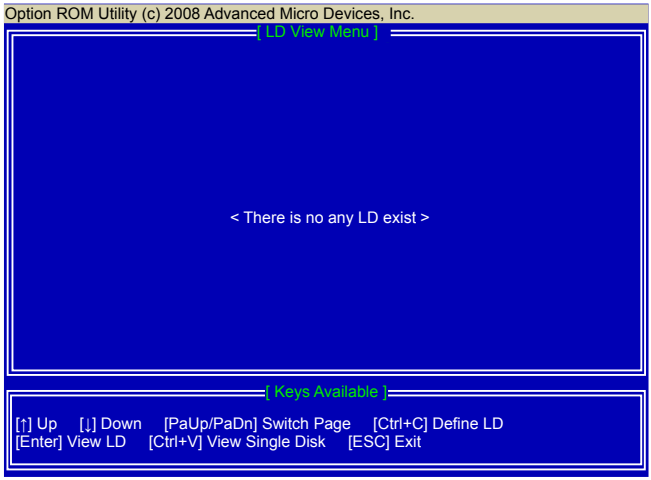
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ LD View Menu ]
< There is no any LD exist >
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Ctrl+C] Define LD
[Enter] View LD [Ctrl+V] View Single Disk [ESC] Exit

2. Press [Crtl-C], the screen appears as below, select RAID 0.
3. Use [↓] key to select the hard disks, press [Space] key to change its assignment status to "Y". Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

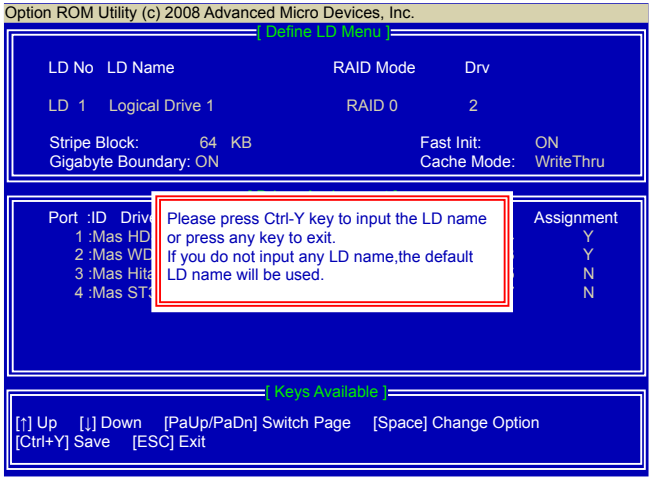
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 0 2
Stripe Block: 64 KB Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
Port :ID Drive Assignment
1 :Mas HD Y
2 :Mas WD Y
3 :Mas Hita N
4 :Mas ST3 N
Please press Ctrl-Y key to input the LD name or press any key to exit.
If you do not input any LD name,the default LD name will be used.
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

4. Another message prompts.
   Press [Ctrl-Y] to erase the RAID array.

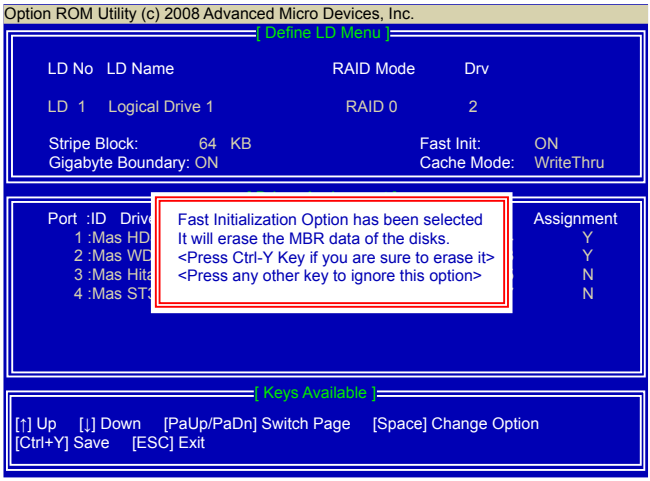
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 0 2
Stripe Block: 64 KB Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hita
4 :Mas ST3
Assignment
Y
Y
N
N
Fast Initialization Option has been selected
It will erase the MBR data of the disks.
<Press Ctrl-Y Key if you are sure to erase it>
<Press any other key to ignore this option>
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

5. Then the screen appears as below.

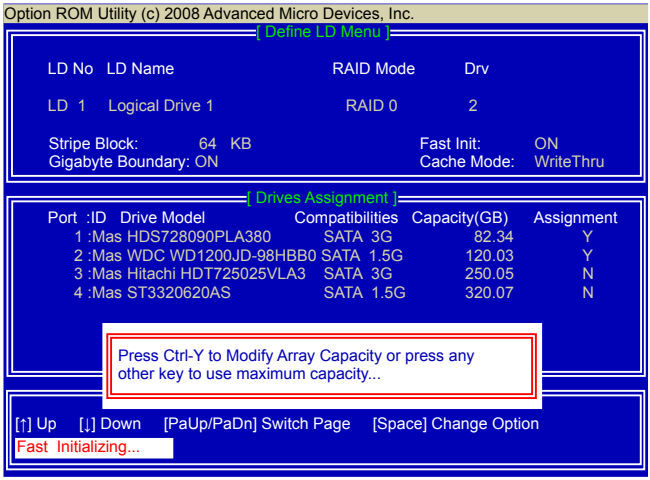
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 0 2
Stripe Block: 64 KB Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 Y
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03 Y
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 N
4 :Mas ST3320620AS SATA 1.5G 320.07 N
Press Ctrl-Y to Modify Array Capacity or press any
other key to use maximum capacity...
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
Fast Initializing...

6. Press [Ctrl-Y]. Input 80GB to select the first logical drive (LD1) and press [Enter].

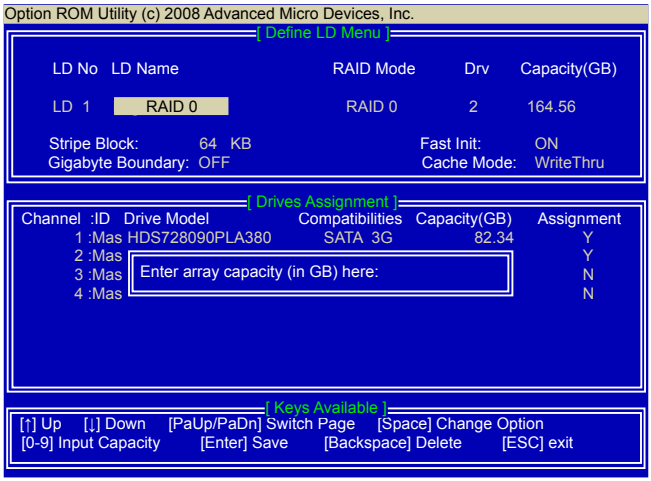
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv Capacity(GB)
LD 1 RAID 0 RAID 0 2 164.56
Stripe Block: 64 KB
Gigabyte Boundary: OFF
Fast Init: ON
Cache Mode: WriteThru
[ Drives Assignment ]
Channel :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 Y
2 :Mas Y
3 :Mas N
4 :Mas N
Enter array capacity (in GB) here:
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[0-9] Input Capacity [Enter] Save [Backspace] Delete [ESC] exit

7. The selection of LD1 array is completed.
   As we want to introduce how to create two logical drives by using the same two hard drives here, so we will press [Crtl-C] to define LD2.

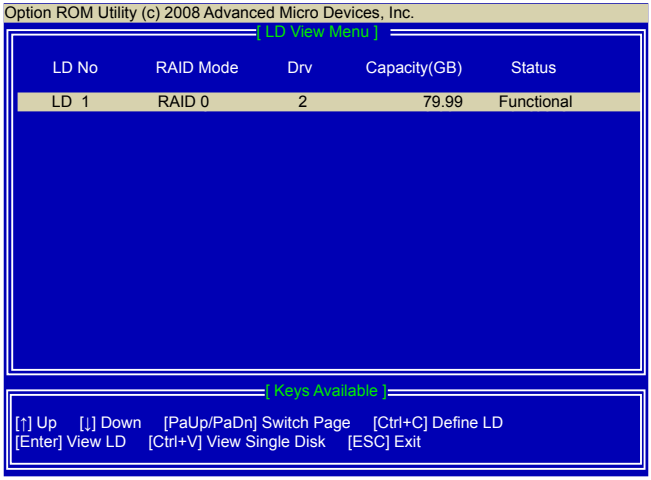
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ LD View Menu ]
LD No RAID Mode Drv Capacity(GB) Status
LD 1 RAID 0 2 79.99 Functional
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Ctrl+C] Define LD
[Enter] View LD [Ctrl+V] View Single Disk [ESC] Exit

8. You can see in the previous example, about 40GB of Channel 1 and 2 hard disks were allocated. Select the remaining spaces from them for RAID 0 again.

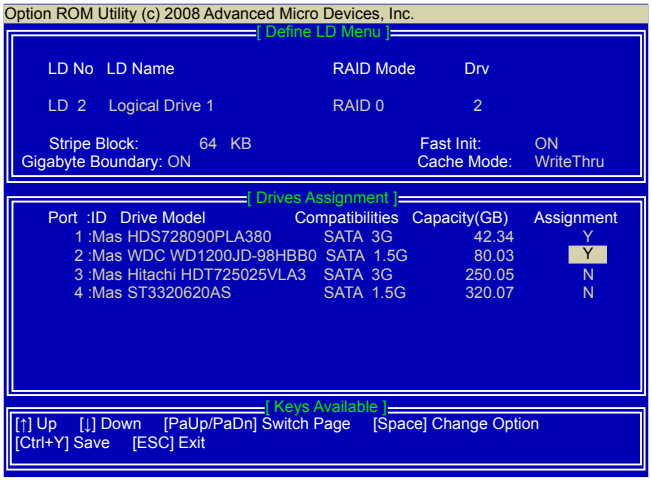
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 2 Logical Drive 1 RAID 0 2
Stripe Block: 64 KB
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 42.34 Y
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 80.03 Y
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 N
4 :Mas ST3320620AS SATA 1.5G 320.07 N
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

9. Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

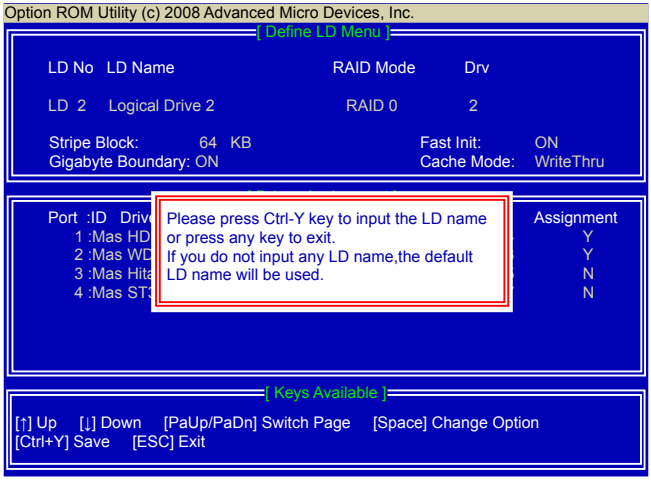
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 2 Logical Drive 2 RAID 0 2
Stripe Block: 64 KB
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Please press Ctrl-Y key to input the LD name or press any key to exit.
If you do not input any LD name,the default LD name will be used.
Assignment
Y
Y
N
N
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

10. Another message prompts.
    Press [Ctrl-Y] to erase the RAID array.

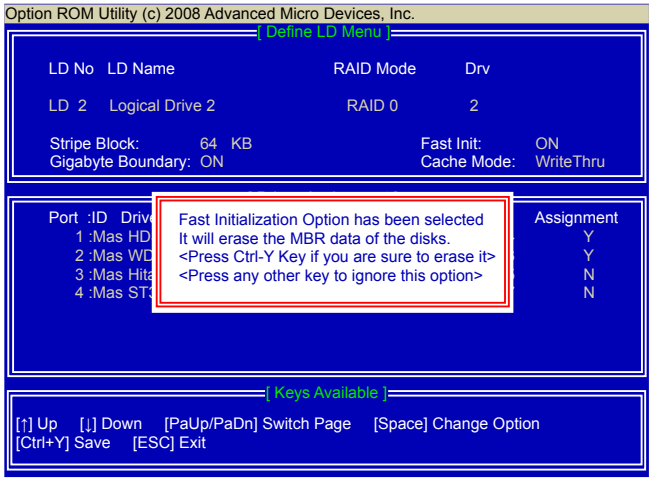


11. The remaining disk spaces are assigned to LD2. The size is about 42GB*2 = 84GB.

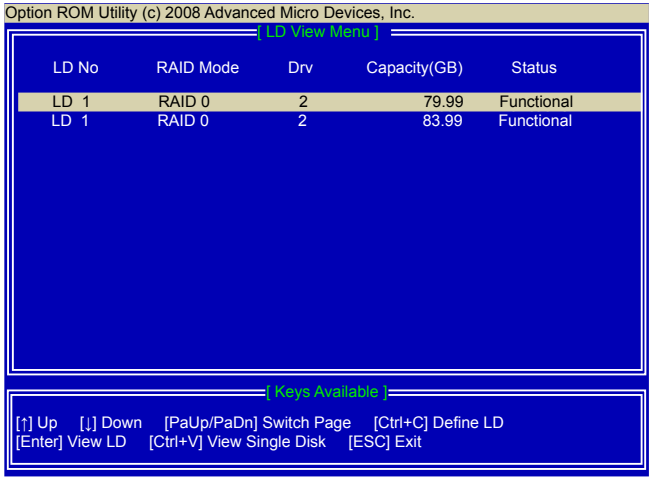

**Create RAID 1 (Mirror)**

Here, we will show you how to create one Mirrored Logical Drives (LD) by using two hard disks.

1. Select [2] from the main menu, and " LD View Menu" appears. Then press [Crtl-C], the screen appears as below, select RAID 1.
2. Use [↓] key to select the hard disks, press [Space] key to change its assignment status to "Y". Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

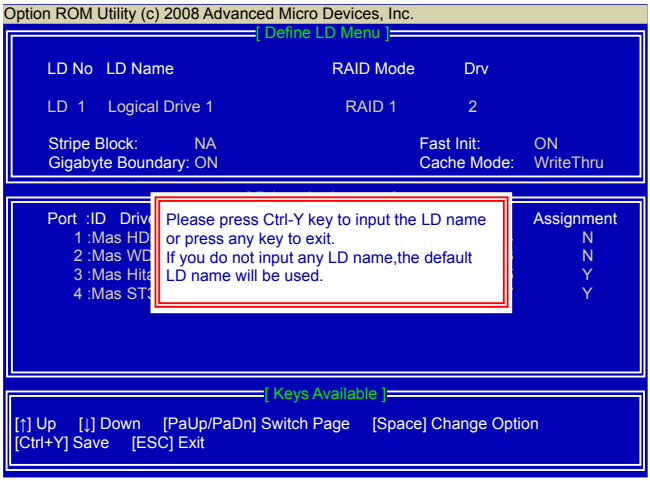
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 1 2
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hita
4 :Mas ST3
Please press Ctrl-Y key to input the LD name
or press any key to exit.
If you do not input any LD name,the default
LD name will be used.
Assignment
N
N
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

3. Another message prompts.
   Press [Ctrl-Y] to erase the RAID array.

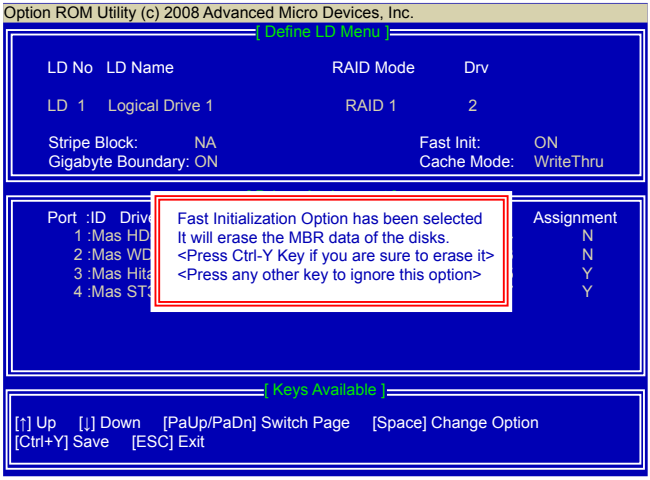
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 1 2
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hita
4 :Mas ST3
Fast Initialization Option has been selected
It will erase the MBR data of the disks.
<Press Ctrl-Y Key if you are sure to erase it>
<Press any other key to ignore this option>
Assignment
N
N
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

4. The screen appears as below.
   Press any key to use the maximum capacity.

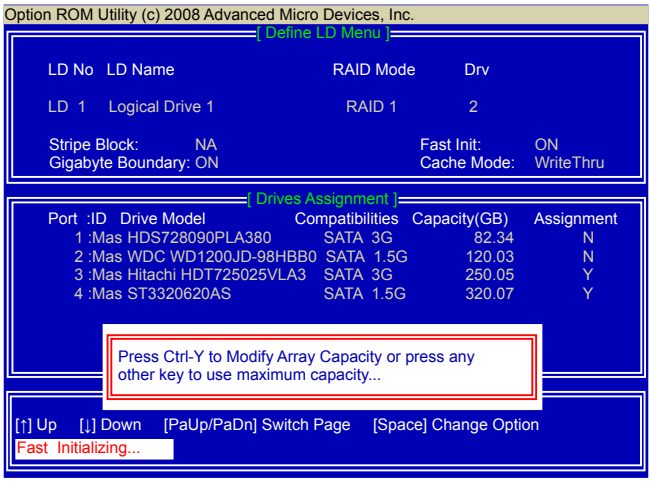
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 1 2
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 N
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03 N
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 Y
4 :Mas ST3320620AS SATA 1.5G 320.07 Y
Press Ctrl-Y to Modify Array Capacity or press any other key to use maximum capacity...
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
Fast Initializing...

5. The creation of RAID 1 is completed.
   The final capacity of 249.99GB (250GB) is the smaller size of the two hard drives.

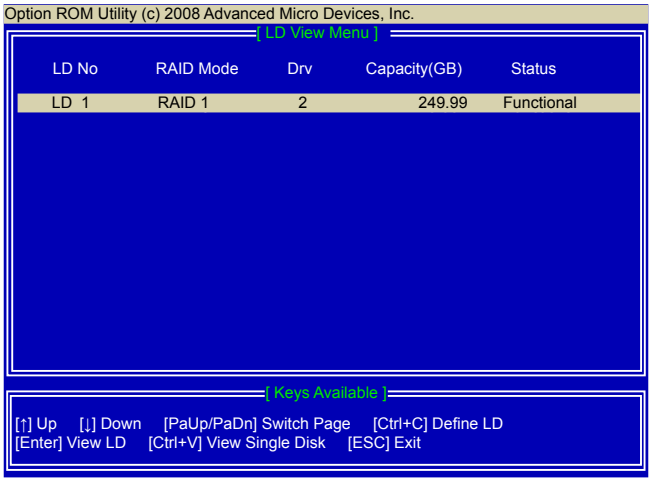
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ LD View Menu ]
LD No RAID Mode Drv Capacity(GB) Status
LD 1 RAID 1 2 249.99 Functional
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Ctrl+C] Define LD
[Enter] View LD [Ctrl+V] View Single Disk [ESC] Exit

**Create RAID 5 (Parity)**

Here, we will show you how to create one Mirrored Logical Drives (LD) by using three hard disks.

1. Select [2] from the main menu, and " LD View Menu" appears. Then press [Crtl-C], the screen appears as below, select RAID 5.
2. Use [↓] key to select the hard disks, press [Space] key to change its assignment status to "Y". Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

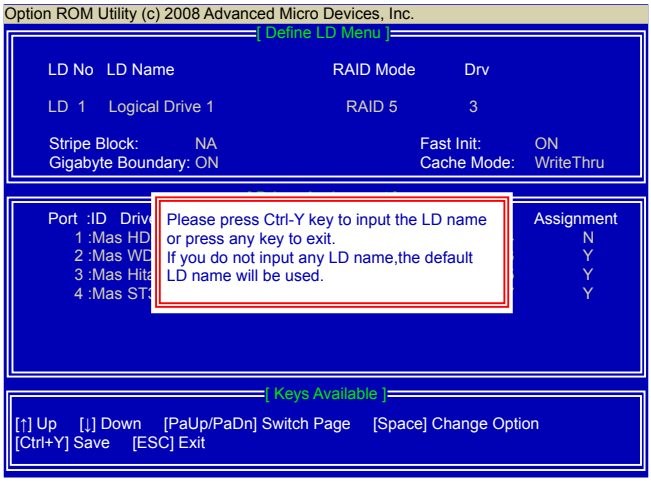
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 5 3
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hita
4 :Mas ST3
Please press Ctrl-Y key to input the LD name or press any key to exit.
If you do not input any LD name,the default LD name will be used.
Assignment
N
Y
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

3. Another message prompts.
   Press [Ctrl-Y] to erase the RAID array.

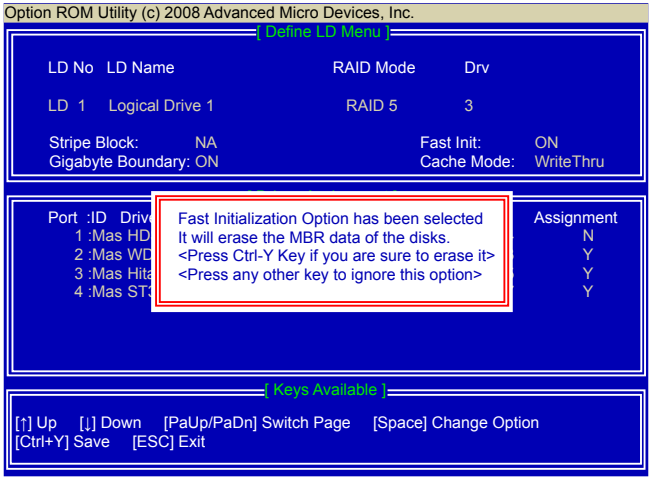
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 5 3
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hita
4 :Mas ST3
Fast Initialization Option has been selected
It will erase the MBR data of the disks.
<Press Ctrl-Y Key if you are sure to erase it>
<Press any other key to ignore this option>
Assignment
N
Y
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

4. The screen appears as below.
   Press any key to use the maximum capacity.

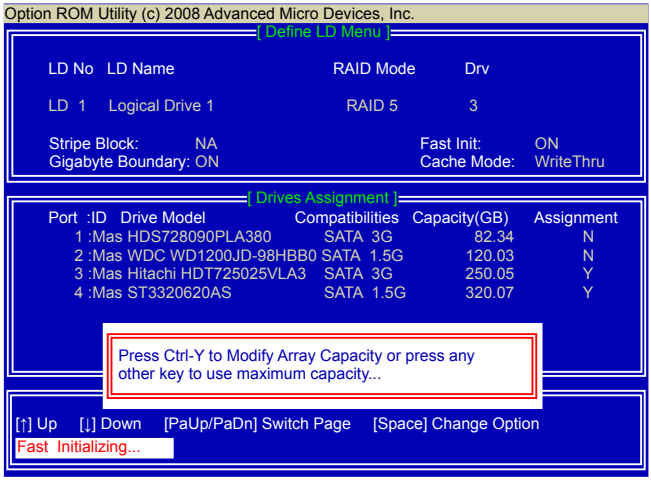
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 5 3
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 N
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03 N
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 Y
4 :Mas ST3320620AS SATA 1.5G 320.07 Y
Press Ctrl-Y to Modify Array Capacity or press any other key to use maximum capacity...
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
Fast Initializing...

5. The creation of RAID 5 is completed.
   The final capacity of 239.99GB (119.995GB*2) is twice capacities of the smallest size of the three hard drives.

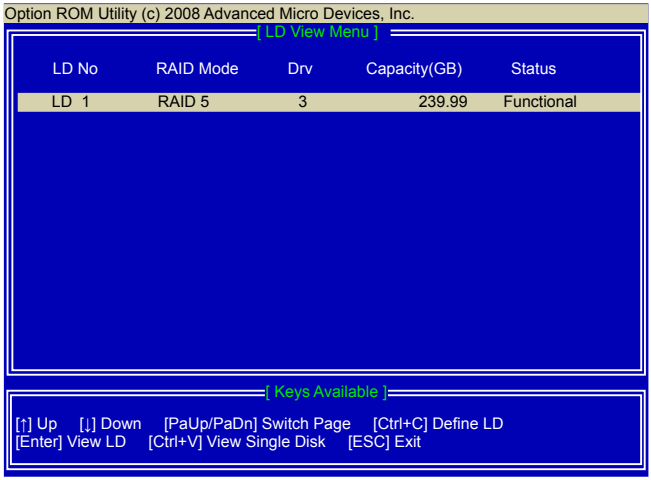
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ LD View Menu ]
LD No RAID Mode Drv Capacity(GB) Status
LD 1 RAID 5 3 239.99 Functional
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Ctrl+C] Define LD
[Enter] View LD [Ctrl+V] View Single Disk [ESC] Exit

**Create RAID 10 (Striped Mirror)**

Here, we will show you how to create one Striped Mirror Logical Drives (LD) by using four hard disks.

1. Select [2] from the main menu, and " LD View Menu" appears. Then press [Crtl-C], the screen appears as below, select RAID 10.
2. Use [↓] key to select the hard disks, press [Space] key to change its assignment status to "Y". Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

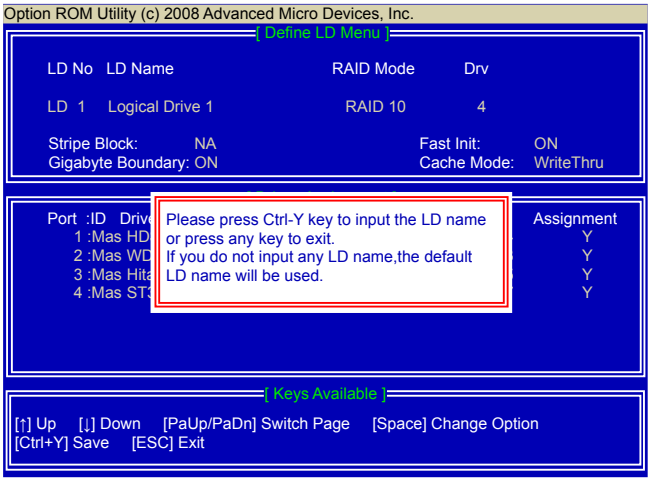
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 10 4
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hit
4 :Mas ST
Please press Ctrl-Y key to input the LD name
or press any key to exit.
If you do not input any LD name,the default
LD name will be used.
Assignment
Y
Y
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

3. Another message prompts.
   Press [Ctrl-Y] to erase the RAID array.

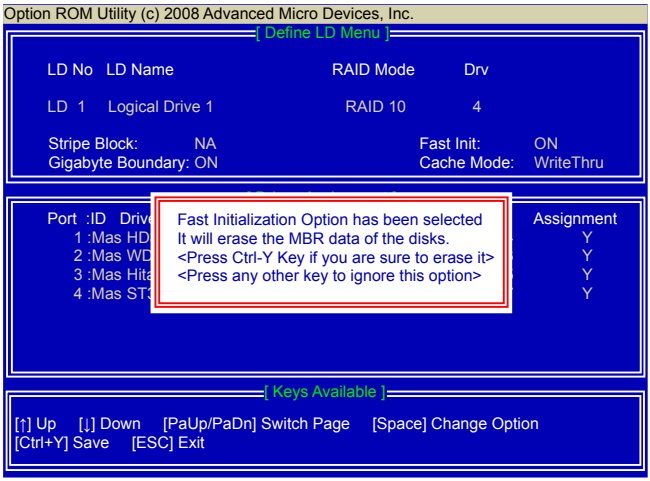
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 10 4
Stripe Block: NA
Gigabyte Boundary: ON
Fast Init: ON
Cache Mode: WriteThru
Port :ID Driv
1 :Mas HD
2 :Mas WD
3 :Mas Hit
4 :Mas ST
Fast Initialization Option has been selected
It will erase the MBR data of the disks.
<Press Ctrl-Y Key if you are sure to erase it>
<Press any other key to ignore this option>
Assignment
Y
Y
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

4. The screen appears as below.
   Press any key to use the maximum capacity.

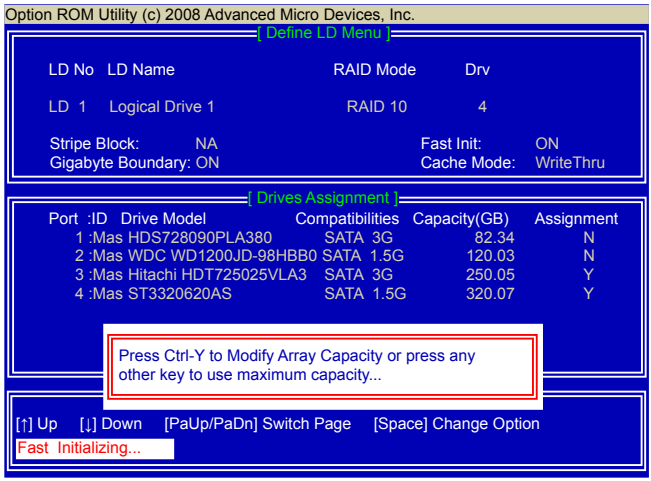
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID 10 4
Stripe Block: NA Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 N
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03 N
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 Y
4 :Mas ST3320620AS SATA 1.5G 320.07 Y
Press Ctrl-Y to Modify Array Capacity or press any other key to use maximum capacity...
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
Fast Initializing...

5. The creation of RAID 10 is completed.
   The final capacity of 163.99GB (81.995GB*2) is twice capacities of the smallest size of the four hard drives.

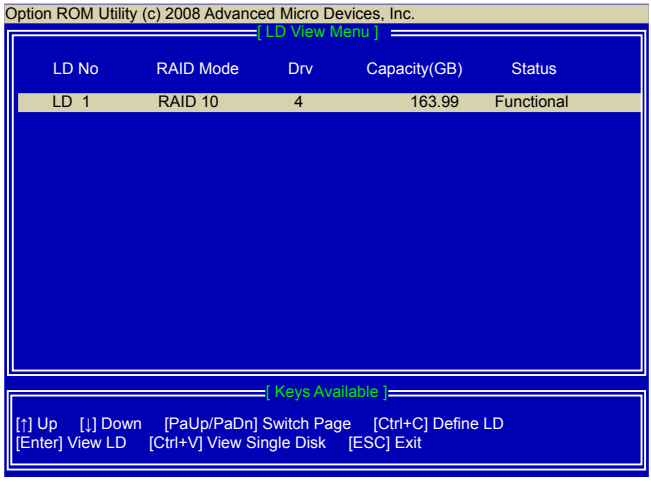
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ LD View Menu ]
LD No RAID Mode Drv Capacity(GB) Status
LD 1 RAID 10 4 163.99 Functional
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Ctrl+C] Define LD
[Enter] View LD [Ctrl+V] View Single Disk [ESC] Exit

**Create RAID Ready**

A "RAID Ready" system is a specific system configuration that, with the addition of a second Serial ATA hard drive, can be seamlessly migrated to a configuration that provides either improved storage performance or data protection from a single hard drive failure.

1. Select [2] from the main menu, and " LD View Menu" appears. Then press [Crtl-C], the screen appears as below, select RAID Ready.

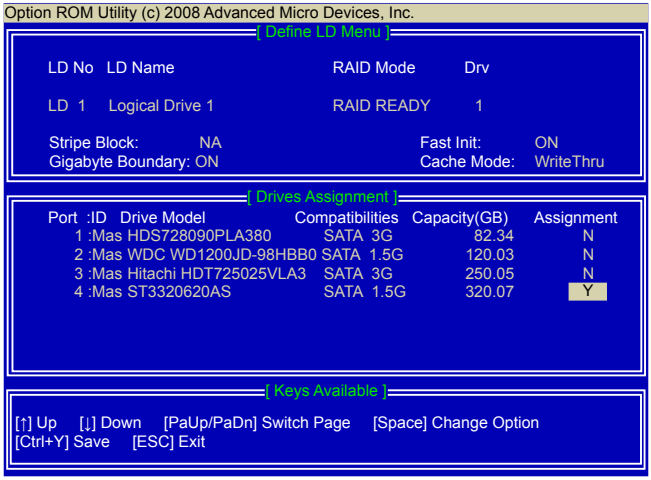
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID READY 1
Stripe Block: NA Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 N
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03 N
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 N
4 :Mas ST3320620AS SATA 1.5G 320.07 Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

2. Use [↓] key to select the hard disks, press [Space] key to change its assignment status to "Y". Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

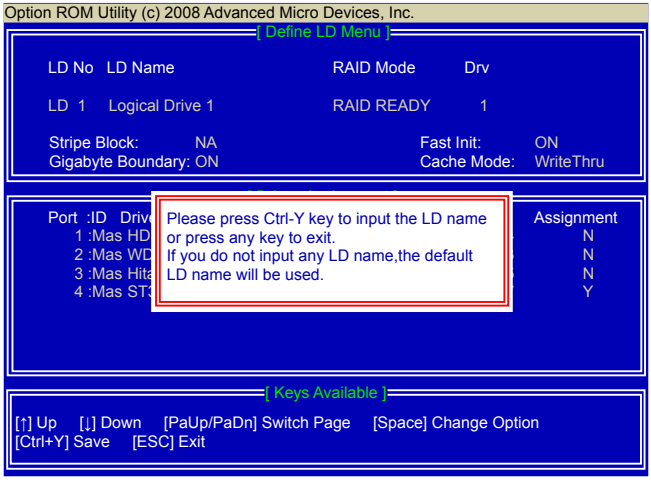
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID READY 1
Stripe Block: NA Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
Please press Ctrl-Y key to input the LD name
or press any key to exit.
If you do not input any LD name,the default
LD name will be used.
Assignment
N
N
N
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

3. Another message prompts.
   Press [Ctrl-Y] to erase the RAID array.

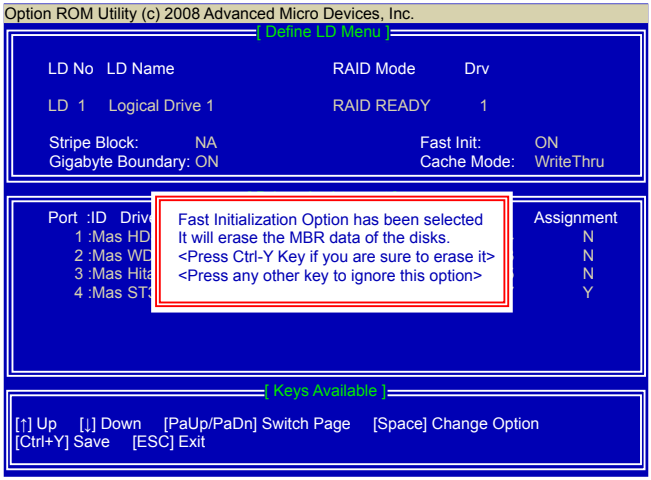


4. The creation of RAID Ready is completed.

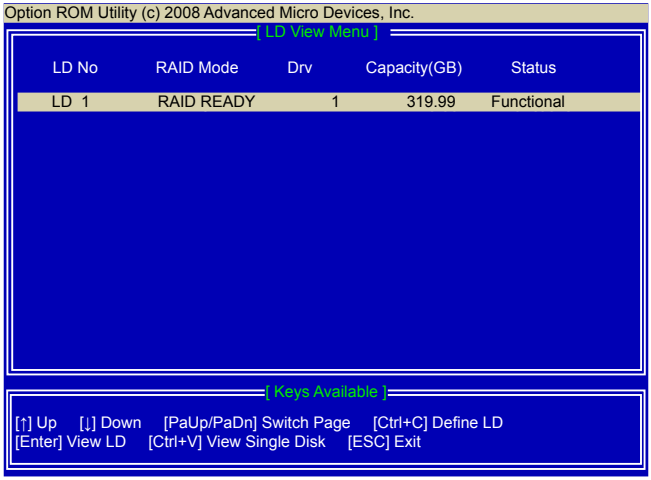

**Create JBOD**

Here, we will show you how to create a JBOD Logical Drives (LD) by using four hard disks.

1. Select [2] from the main menu, and " LD View Menu" appears. Then press [Crtl-C], the screen appears as below, select RAID JBOD.

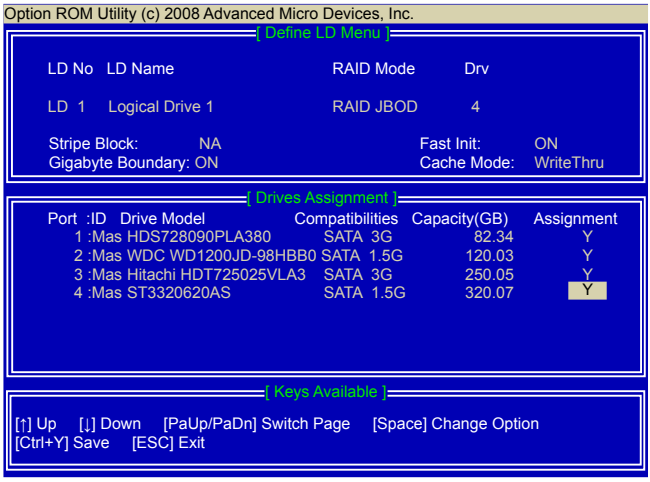
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID JBOD 4
Stripe Block: NA Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
[ Drives Assignment ]
Port :ID Drive Model Compatibilities Capacity(GB) Assignment
1 :Mas HDS728090PLA380 SATA 3G 82.34 Y
2 :Mas WDC WD1200JD-98HBB0 SATA 1.5G 120.03 Y
3 :Mas Hitachi HDT725025VLA3 SATA 3G 250.05 Y
4 :Mas ST3320620AS SATA 1.5G 320.07 Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

2. Use [↓] key to select the hard disks, press [Space] key to change its assignment status to "Y". Press [Ctrl-Y] to save the setting. And a message prompts. You can select any of the two options. Here we select the latter option as an example.

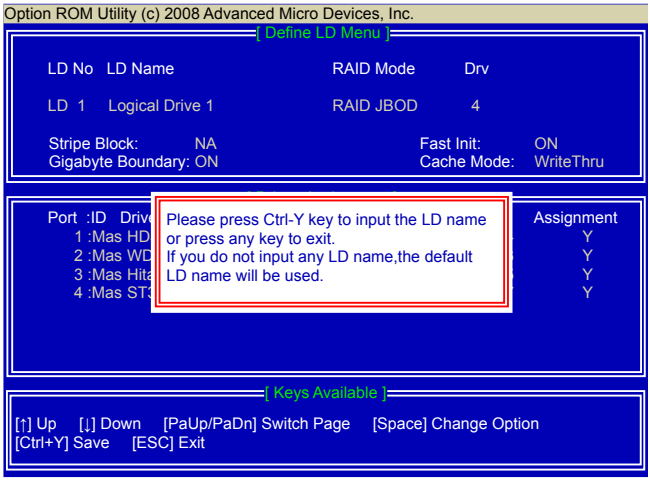
Option ROM Utility (c) 2008 Advanced Micro Devices, Inc.
[ Define LD Menu ]
LD No LD Name RAID Mode Drv
LD 1 Logical Drive 1 RAID JBOD 4
Stripe Block: NA Fast Init: ON
Gigabyte Boundary: ON Cache Mode: WriteThru
Please press Ctrl-Y key to input the LD name
or press any key to exit.
If you do not input any LD name,the default
LD name will be used.
Assignment
Y
Y
Y
Y
[ Keys Available ]
[↑] Up [↓] Down [PaUp/PaDn] Switch Page [Space] Change Option
[Ctrl+Y] Save [ESC] Exit

3. Another message prompts.
   Press [Ctrl-Y] to erase the RAID array.

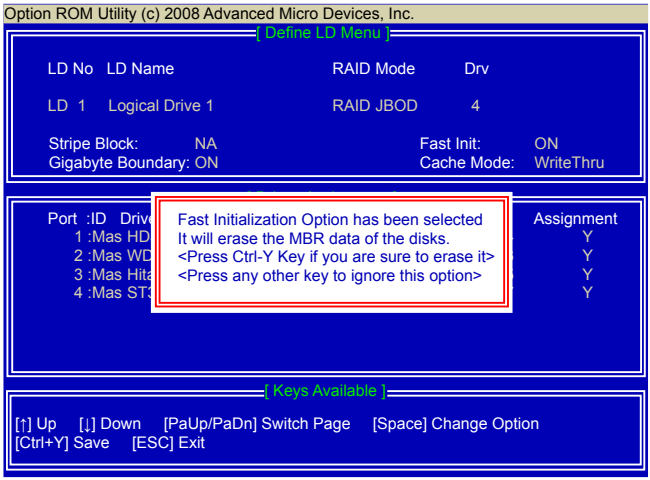


4. The creation of JBOD is completed.
   Total size is 82.34+120.03+250.05+320.07 = 772.49GB

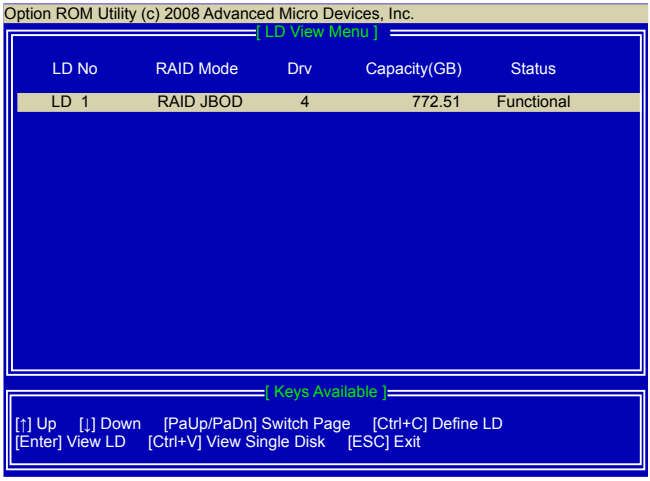

## 5-4 Install a New Windows XP

Assume a Mirrored array (249.99GB) was created as introduced in section 5-3, after the system restarts :

1. Press <DEL> to enter BIOS Setup during POST.
2. Insert the Windows installation CD into the optical drive.
3. Set the “1st Boot Device” to “CD/DVD-ROM”, save changes and exit BIOS.

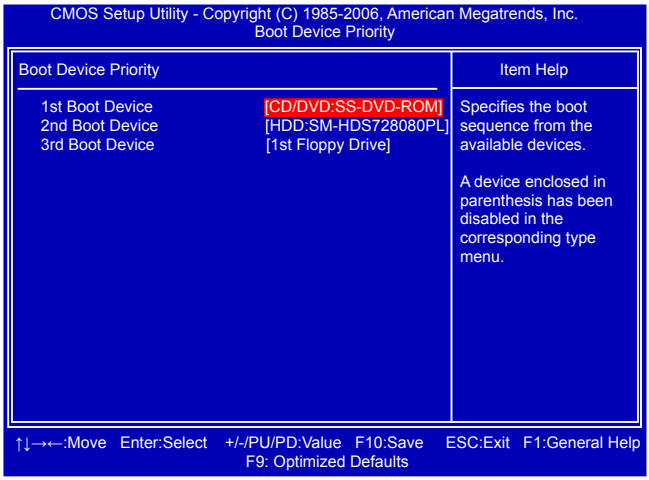
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
Boot Device Priority
Boot Device Priority
Item Help
1st Boot Device
2nd Boot Device
3rd Boot Device
[CD/DVD:SS-DVD-ROM]
[HDD:SM-HDS728080PL]
[1st Floppy Drive]
Specifies the boot sequence from the available devices.
A device enclosed in parenthesis has been disabled in the corresponding type menu.
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help
F9: Optimized Defaults

4. The computer will reboot, and it will start installing Windows Operating System. Watch the screen carefully, when the following picture appears, press <F6> key immediately. If you forget to do this, PC will go to an fatal blue screen, and you may need to reboot the system again. PC may not respond to your <F6> input immediately, and it keeps loading files until the next screen displays.

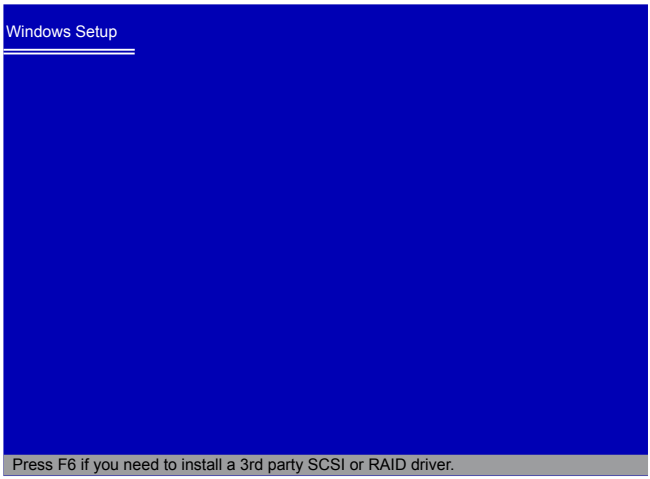

5. After some files are copied to your system, the following picture appears, press <S> to continue the specific driver installation.

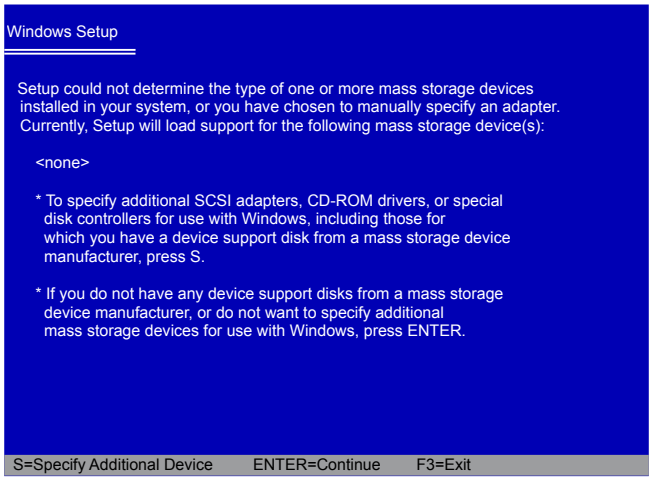
Windows Setup
Setup could not determine the type of one or more mass storage devices installed in your system, or you have chosen to manually specify an adapter. Currently, Setup will load support for the following mass storage device(s):
<none>
* To specify additional SCSI adapters, CD-ROM drivers, or special disk controllers for use with Windows, including those for which you have a device support disk from a mass storage device manufacturer, press S.
* If you do not have any device support disks from a mass storage device manufacturer, or do not want to specify additional mass storage devices for use with Windows, press ENTER.
S=Specify Additional Device ENTER=Continue F3=Exit

6. It will ask you to insert the RAID driver diskette into you floppy drive. Press <Enter> after it is done.

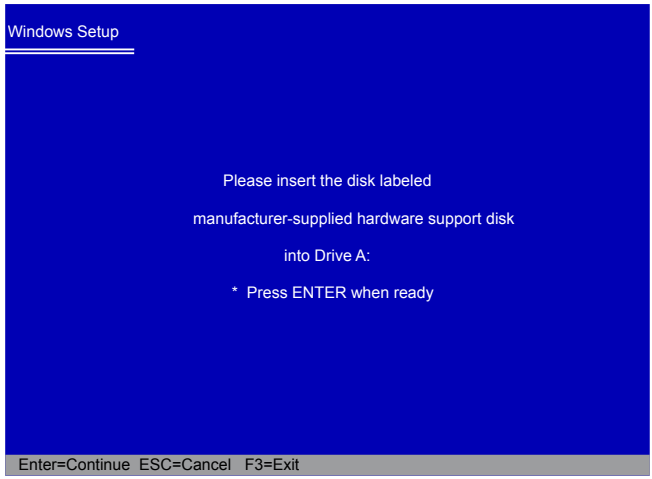

7. There are two drivers, for your 32-bit XP system, press [Enter] to select the first driver - "AMD AHCI Compatible RAID Controller-x86 platform".

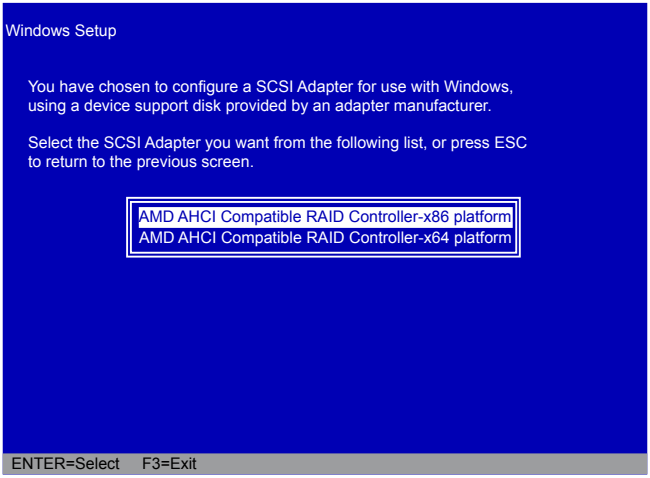
Windows Setup
You have chosen to configure a SCSI Adapter for use with Windows, using a device support disk provided by an adapter manufacturer.
Select the SCSI Adapter you want from the following list, or press ESC to return to the previous screen.
AMD AHCI Compatible RAID Controller-x86 platform
AMD AHCI Compatible RAID Controller-x64 platform
ENTER=Select F3=Exit

8. A confirmation message appears to double check if the driver is really what we wanted, press <Enter> to continue.

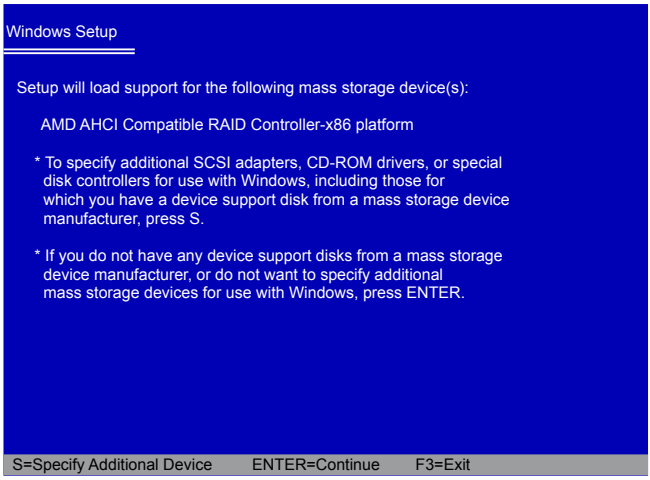
Windows Setup
Setup will load support for the following mass storage device(s):
AMD AHCI Compatible RAID Controller-x86 platform
* To specify additional SCSI adapters, CD-ROM drivers, or special disk controllers for use with Windows, including those for which you have a device support disk from a mass storage device manufacturer, press S.
* If you do not have any device support disks from a mass storage device manufacturer, or do not want to specify additional mass storage devices for use with Windows, press ENTER.
S=Specify Additional Device ENTER=Continue F3=Exit

9. Windows will display the partition of your system. As we are using a Mirrored RAID array as an example, its size 232.88GB is now displayed as 238410MB. You can press [C] to create partitions as many as you wish, assign them C:, D: or E: logical drive names.
   (Note : 238410MB/1024 = 232.82GB)

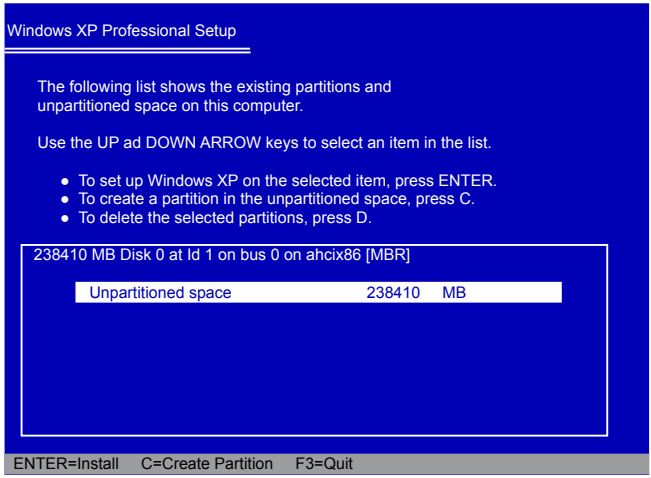
Windows XP Professional Setup
The following list shows the existing partitions and unpartitioned space on this computer.
Use the UP ad DOWN ARROW keys to select an item in the list.
To set up Windows XP on the selected item, press ENTER.
To create a partition in the unpartitioned space, press C.
To delete the selected partitions, press D.
238410 MB Disk 0 at Id 1 on bus 0 on ahcix86 [MBR]
Unpartitioned space 238410 MB
ENTER=Install C=Create Partition F3=Quit

10. In this example, we will create a 30GB partition C: and leave the remainding space as a partition E:. (D: is allocated by a DVD drive)
11. Press <Enter> to install Windows. The Windows XP install processes will ask you to format your hard disk, then copy files...etc. Follow the installation steps until the whole Windows is setup.

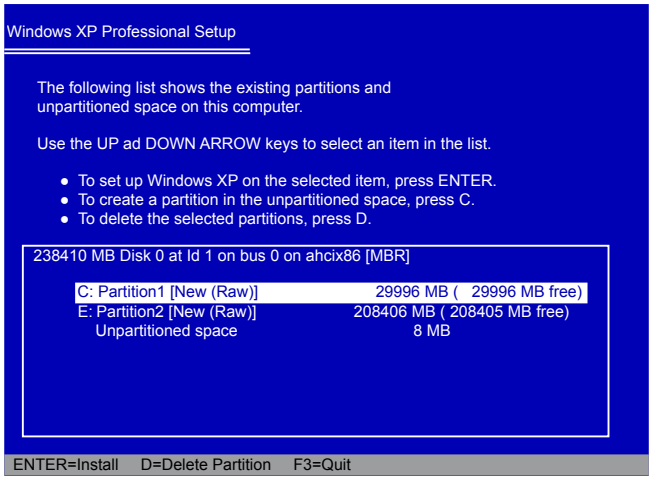
Windows XP Professional Setup
The following list shows the existing partitions and unpartitioned space on this computer.
Use the UP ad DOWN ARROW keys to select an item in the list.
To set up Windows XP on the selected item, press ENTER.
To create a partition in the unpartitioned space, press C.
To delete the selected partitions, press D.
238410 MB Disk 0 at Id 1 on bus 0 on ahcix86 [MBR]
C: Partition1 [New (Raw)] 29996 MB ( 29996 MB free)
E: Partition2 [New (Raw)] 208406 MB ( 208405 MB free)
Unpartitioned space 8 MB
ENTER=Install D=Delete Partition F3=Quit

## 5-5 Setting Up a Non-Bootable RAID Array

This section assumes the following setup :

- Boot Disk with Windows XP installed :
  One hard disk HDS728090PLAT20 (80GB) is connected to the IDE channel, and set to Master.
- A Mirrored RAID Array Disk :
  Two SATA hard disks are configured as a mirrored RAID1 array, they are :
  Hitachi HDT725025VLA3, (250.05GB) connected to SATA port2 of the motherboard.
  Seagate ST3320620AS, (320.07GB) connected to SATA port3.
- A SATA DVD Drive :
  A DVD drive connected to SATA port1.

To achieve the best performance and reliability, we highly recommend you using the hard disks with the same brand, size and model number. Though we are using different brand of hard disks as an example here, the purpose is only for easy understanding.



1. Reboot your system, and go to "IDE Configuration" menu.
   Enable the RAID function. Press [F10] to save the settings and reboot.

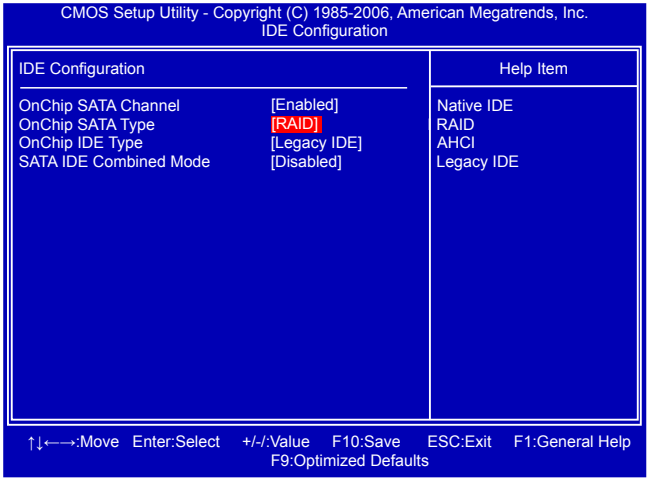

2. Select a RAID array for use (also can refer to section 5-3)
   After rebooting your computer, you will see the RAID software prompting you to press [Ctrl-F].
   Press [Ctrl-F] to enter the Option ROM Utility and configure the mirrored RAID array as described in the 5-3 section. Finally, you can reach this step as depicted.

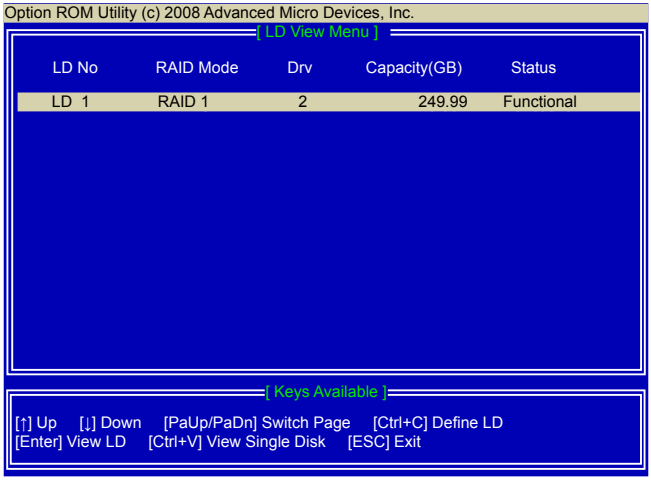


3. Exit Option ROM Utility and restart computer to go to Windows.
4. In Windows, click "Cancel" to skip any "Found New Hardware Wizard".
   Use driver CD and click on "AMD RAID Driver" to install the AMD RAID driver. The RAID driver will be installed only when you select "RAID" in "OnChip SATA Type" setting. If you do not select RAID, then RAID driver will not be installed.

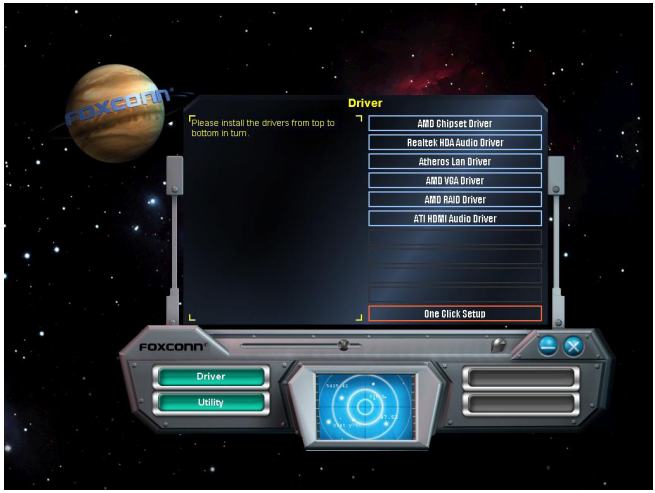

5. After the AMD RAID driver is installed, it will ask you to click "Finish" to restart your computer.

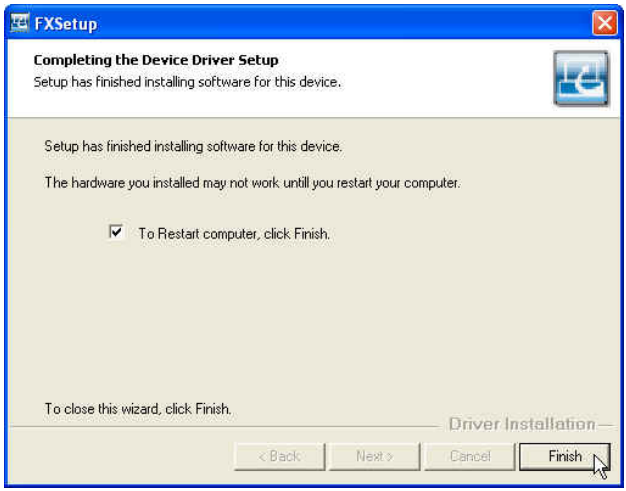
FXSetup
Completing the Device Driver Setup
Setup has finished installing software for this device.
Setup has finished installing software for this device.
The hardware you installed may not work untill you restart your computer.
To Restart computer, click Finish.
To close this wizard, click Finish.
Driver Installation
< Back
Next >
Cancel
Finish

6. When Windows starts, a message is prompting you to reboot again. Click "Yes" to restart your computer.

System Settings Change
Windows has finished installing new devices. The software that supports your device requires that you restart your computer. You must restart your computer before the new settings will take effect.
Do you want to restart your computer now?
Yes
No

7. After PC starts, the RAID array is now ready to be initialized under Windows.
   Launch Computer Management by clicking Start -> (Settings ->) Control Panel then open the Administrative Tools folder and double click on Computer Management.
   Click Disk Management (under the Storage section).
   The Initialize and Convert Disk Wizard appears. Click "Next" to continue.
   The RAID array is named as Disk1 and its status is unknown and not initialized.

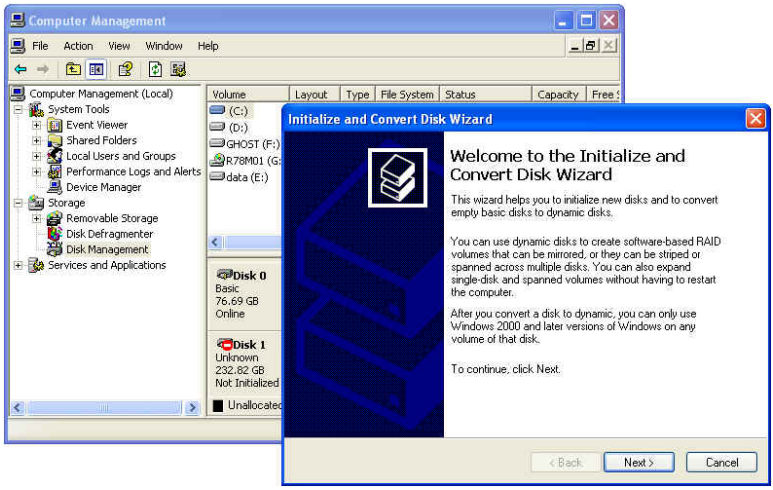
Computer Management
File Action View Window Help
Computer Management (Local)
System Tools
Event Viewer
Shared Folders
Local Users and Groups
Performance Logs and Alerts
Device Manager
Storage
Removable Storage
Disk Defragmenter
Disk Management
Services and Applications
Volume Layout Type File System Status Capacity
(C:)
(D:)
GHOST (F:)
R78M01 (G:
data (E:)
Disk 0
Basic
76.69 GB
Online
Disk 1
Unknown
232.82 GB
Not Initialized
Unallocated
Initialize and Convert Disk Wizard
Welcome to the Initialize and Convert Disk Wizard
This wizard helps you to initialize new disks and to convert empty basic disks to dynamic disks.
You can use dynamic disks to create software-based RAID volumes that can be mirrored, or they can be striped or spanned across multiple disks. You can also expand single-disk and spanned volumes without having to restart the computer.
After you convert a disk to dynamic, you can only use Windows 2000 and later versions of Windows on any volume of that disk.
To continue, click Next.
< Back
Next >
Cancel

8. A "Select Disks to Initialize" window will appear. The disks listed depend on how many arrays you have configured. Select "Disk1" and click "Next" to continue.
9. When "Select Disks to Convert" window appears, do not select anything and click "Next" to continue.
10. When the "Completing the Initialize and Convert Disk Wizard" window appears, click "Finish" to complete the wizard.

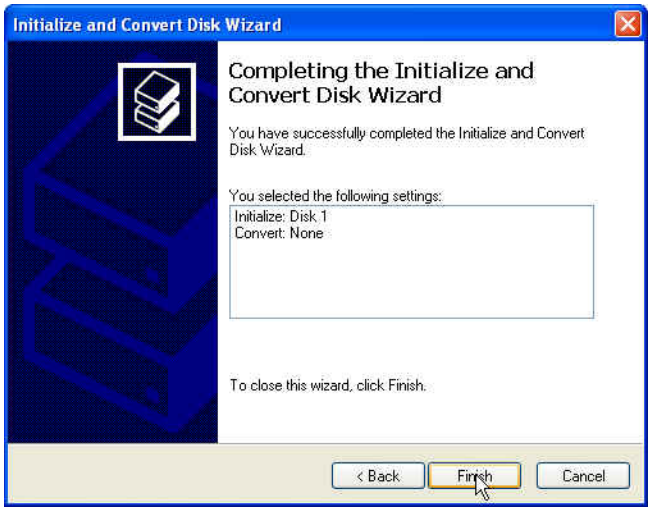
Initialize and Convert Disk Wizard
Completing the Initialize and Convert Disk Wizard
You have successfully completed the Initialize and Convert Disk Wizard.
You selected the following settings:
Initialize: Disk 1
Convert: None
To close this wizard, click Finish.
< Back
Finish
Cancel

11. The Computer Management window appears. The actual disks listed will depend on your system. In below figure, you can see there is a 232.82 GB unallocated partition. You must format the unallocated disk space before using it.
    Right click "Unallocated space", select "New Partition…" and follow the Wizard instructions.

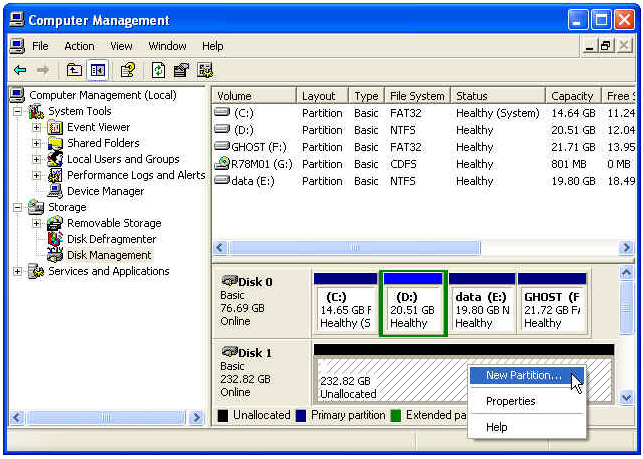


12. When "New Partition Wizard" appears, click "Next" to continue.
13. When "Primary partition" screen appears, click "Next" to continue.
14. When "Specify Partition Size" screen appears, click "Next" to continue.
15. When "Assign Drive Letter or Path" screen appears, click "Next" to continue.
16. Click "Finish" to end the "New Partition Wizard".

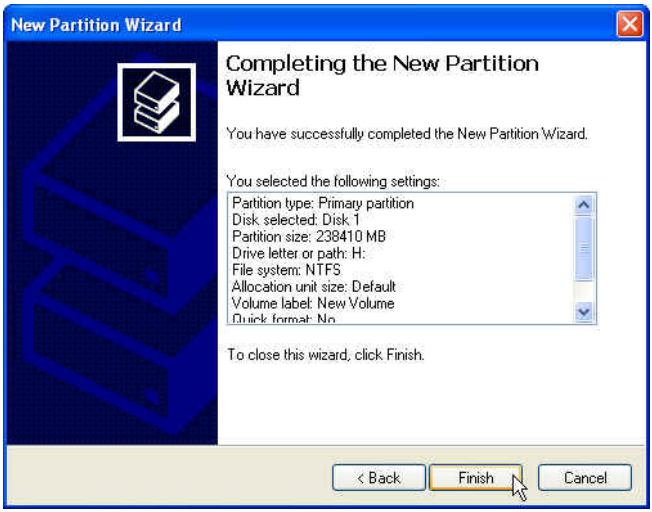

17. The format of disk array (Disk1) is in processing.

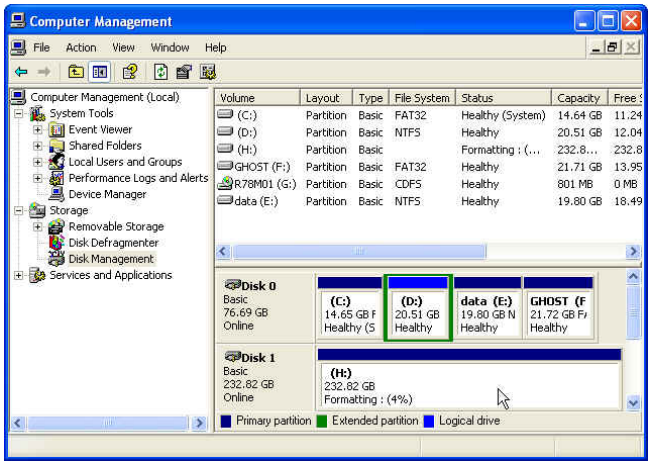


18. Format completed, now you can start using your RAID array.

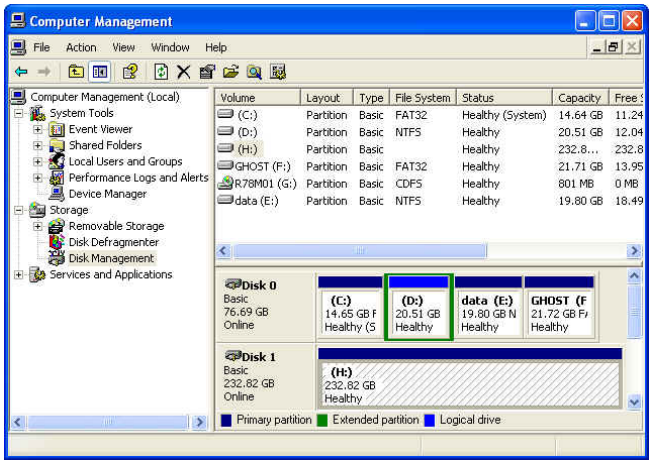

# Appendix - ATI Hybrid CrossFire™ Technology

## Introduction

AMD's pioneering ATI Hybrid CrossFire™ Technology can be used for scalable gaming action. The ATI Hybrid CrossFire™ Technology can provide significant performance boost to AMD based systems by enabling the ability for both discrete GPU and IGP graphics cores to render simultaneously in CrossFire™ mode. ATI Hybrid CrossFire™ technology can transform your mainstream PC into a performance gaming rig.

## Using ATI Hybrid CrossFire™ Technology

CAUTION

Before using ATI Hybrid CrossFire™, ensure your computer meets the following basic requirements:

- Operating System: Windows® Vista
- Memory capacity: Minimum 1GB
- CPU: AM3
- On-board graphics card RAM: Minimum 256MB
- Add-on graphics cad: ATI Radeon HD 2400 Series / Radeon HD 3400 Series

1. Press <Del> to enter the BIOS. Select "Advanced Chipset Features", Set the "UMA Frame Buffer Size" to "256MB", and the "Surround View" to "Enable". Press [F10] to save the change and exit the BIOS settings.

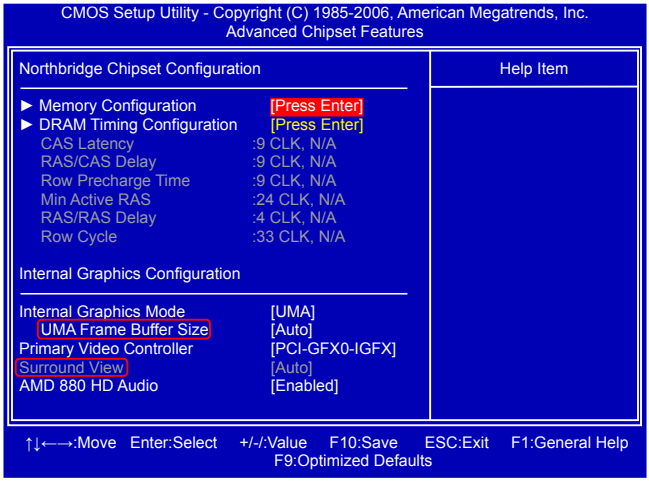
CMOS Setup Utility - Copyright (C) 1985-2006, American Megatrends, Inc.
Advanced Chipset Features
Northbridge Chipset Configuration
Help Item
► Memory Configuration [Press Enter]
► DRAM Timing Configuration [Press Enter]
CAS Latency :9 CLK, N/A
RAS/CAS Delay :9 CLK, N/A
Row Precharge Time :9 CLK, N/A
Min Active RAS :24 CLK, N/A
RAS/RAS Delay :4 CLK, N/A
Row Cycle :33 CLK, N/A
Internal Graphics Configuration
Internal Graphics Mode [UMA]
UMA Frame Buffer Size [Auto]
Primary Video Controller [PCI-GFX0-IGFX]
Surround View [Auto]
AMD 880 HD Audio [Enabled]
↑↓←→:Move Enter:Select +/-/:Value F10:Save ESC:Exit F1:General Help
F9:Optimized Defaults

2. Enter the OS, from the Drivers menu, click AMD Chipset Driver to Install it. Follow the instructions to finish the installation. and restart your computer.

3. Then you may use the ATI Catalyst(TM) Control Center.

## Using an add-on graphics card

1. Right-click on the desktop, then click ATI Catalyst(TM) Control Center from the shortcut menu. The ATI Catalyst(TM) Control Center screen appears.

2.Click “Graphics Settings-> CrossFire™”, then select the “Enable CrossFire™” check box. When a confirmation message pops up, click “Yes”. The screen blacks out for about one minute.

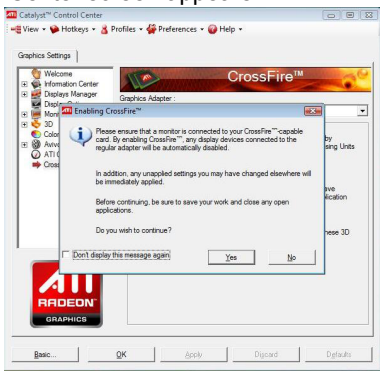


3. Click “OK”. The add-on graphics card is set to be the main monitor.

## Using the onboard graphics card

1. Right-click on the desktop, and then click ATI Catalyst(TM) Control Center from the shortcut menu. The Catalyst(TM) Control Center screen appears.

2. Click "Graphics Settings>CrossFire™”, then clear the "Enable CrossFire™ "check box. When a confirmation message pops up, click "Yes". The screen backs out for about one minute.

3. Click “OK”.

4.Right-click on the desktop, then click "Personalize" from the shortcut menu.

5. Click Display Settings. Select "[Default Monitor] on ATI Radeon HD 3450 Graphics", then select the check boxes of "This is my main monitor" and "Extend the desktop onto this monitor". Click "OK". and then "Yes" from the confirmation window.

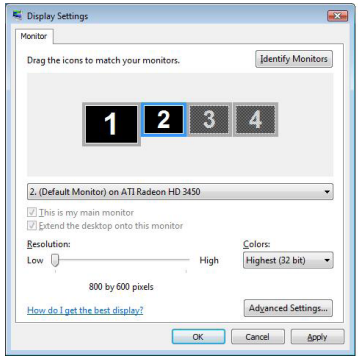


6. Restart the system. Right-click on the desktop, then click ATI Catalyst(TM) Control Center from the shortcut menu. The ATI Catalyst(TM) Control Center screen appears

7. Click "Graphics Settings>CrossFire™", then select the "Enable CrossFire™" check box. When a confirmation message pops up, click "Yes". The screen backs out for about one minute.

8. Click “OK”. The onboard graphics card is set to be the main monitor.

CAUTION

If you are using both an add-on and the onboard graphics cards at the same time and want to set the onboard card as your main monitor, follow the instructions below.

1. Follow steps 1 to 3 on Using the onboard graphics card.

2. From the ATI Catalyst(TM) Control Center screen, click "Display Manager>Graphics Adapter". Select "ATI Radeon HD 3450 [HPL1706]". Click "OK", and then "Yes" from the confirmation window.

3. Follow steps 6 on Using the onboard graphics card to complete the process of setting up the onboard graphics card as your main monitor.

# Appendix - ATI CrossFire™ Technology

## Introduction

CrossFire™ technology is a newly introduced product from ATI Technologies. It is designed to dramatically improve the graphics performance for applications which is used by players and other high-end users.

The CrossFire™ aspect requires the following components to be available in order to appear as an option within Catalyst™ Control Center :

- CrossFire™ Ready motherboard, such as Foxconn's A9DA-S.
- CrossFire™ Edition graphics card that works as the master graphics card.
- CrossFire™ Ready graphics card from the same brand-family that works as the slave graphics card.

For the detailed CrossFire Graphic Card support list on this motherboard, please visit the website: http://www.foxconnchannel.com

## Using CrossFire™ Technology



1. Please uninstall any existing graphics card drivers which would possibly create a conflict before attempting to install this display card.

2. Install the Radeon CrossFire™ Edition graphics card (master) to PCI-E1_X16 slot.

3. Install the Radeon CrossFire™ Ready graphics card (slave) to PCI-E2_X16 slot.

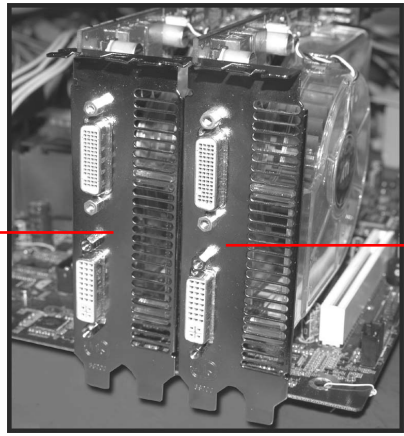

4. Connect an auxiliary power source from the power supply to the graphics card.

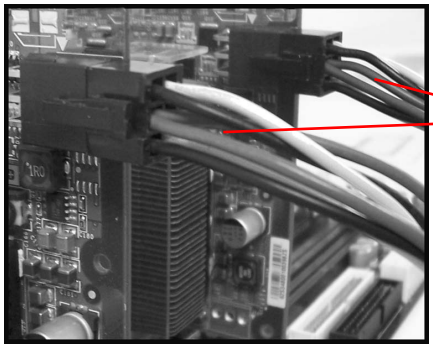


5. Connect the DMS-59 cable to the DVI monitor connector and two graphics cards that you install as shown.

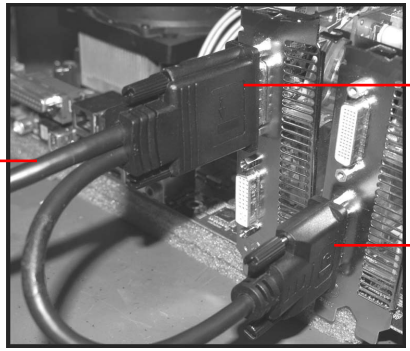


6. Power on your computer and get into OS (Windows® XP 32-bit with SP2 or Windows® XP Professional 64-bit Edition).

7. Install Microsoft's .NET Framework Version 1.1. Without it, The ATI Catalyst™ Control Center can not launch properly.

8. Install the ATI graphics card drivers and restart your computer. Then you will find "ATI Catalyst Control Center" on your desktop.

9. Double-click on the ATI Catalyst Control Center icon

to launch it. Click "View"-->Select "Advanced View" -->Click "CrossFire™"-->Set "Enable CrossFire™" to Yes.

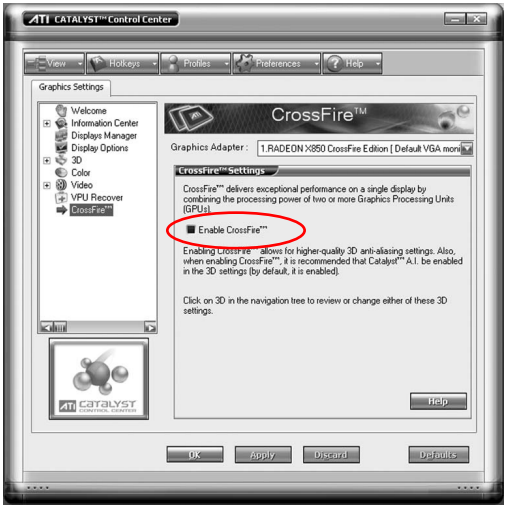


Now you can enjoy the advanced CrossFire™ technology.



CAUTION

- It is recommended using 400-450 Watt power supply or above to enjoy the benefit of CrossFire™ technology.
- PCI-E1_x16 slot and PCI-E4_x16 slot work at x16 mode. PCI-E2_x16 slot and PCI-E3_x16 slot work at x8 mode. In order to work at x16 mode, you need to plug cards into PCI-E1_x16 slot and PCI-E4_x16 slot, or they will work in x8 mode.
- The all new Radeon X1300 and X1600 graphics cards do not need a Cross-Fire™ Edition co-processor or external cable.